

# **HOLCOMBE**

---

## **BEDROOM FURNITURE**

---

### **ASSEMBLY INSTRUCTIONS**

---

# **HOLCOMBE**

---

## **BEDROOM FURNITURE**

---

### **ASSEMBLY INSTRUCTIONS**

---




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


CONTENTS CHECK LIST



DOORS

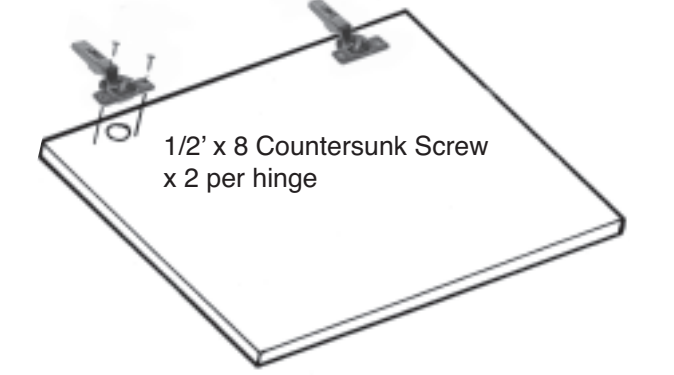

CLIP-ON HINGE ADJUSTMENT

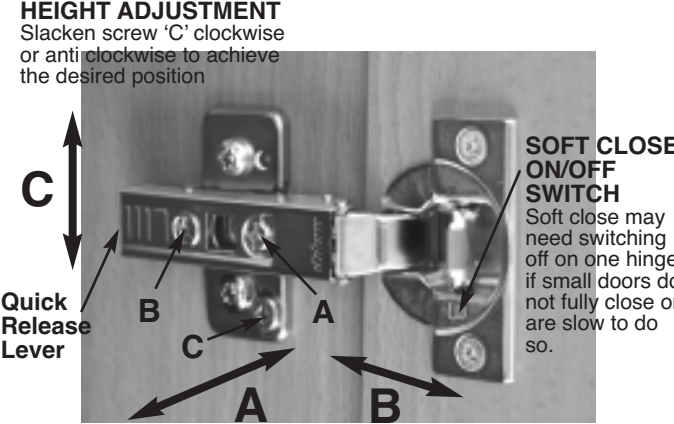

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


Robe Assembly - Upright Position

If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.


HOLCOMBE BEDROOM FURNITURE

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.


SINGLE/DOUBLE ROBE UNITS

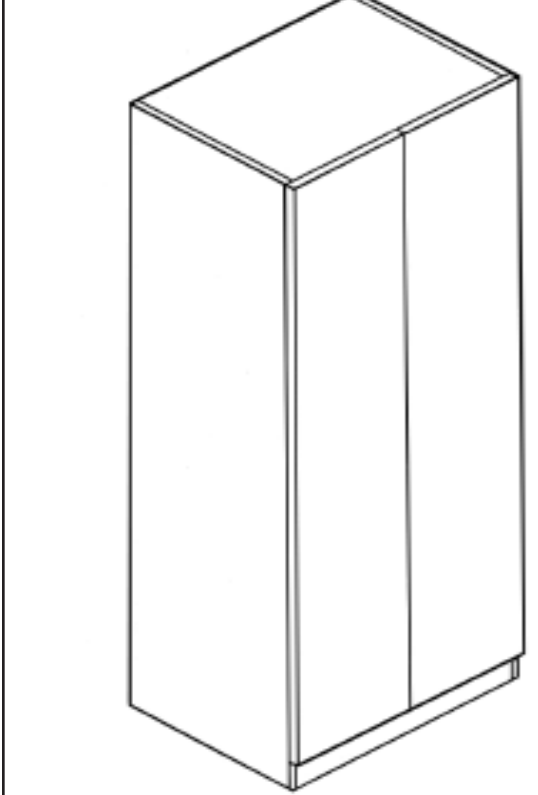


Hardware Fixing Positions  
A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

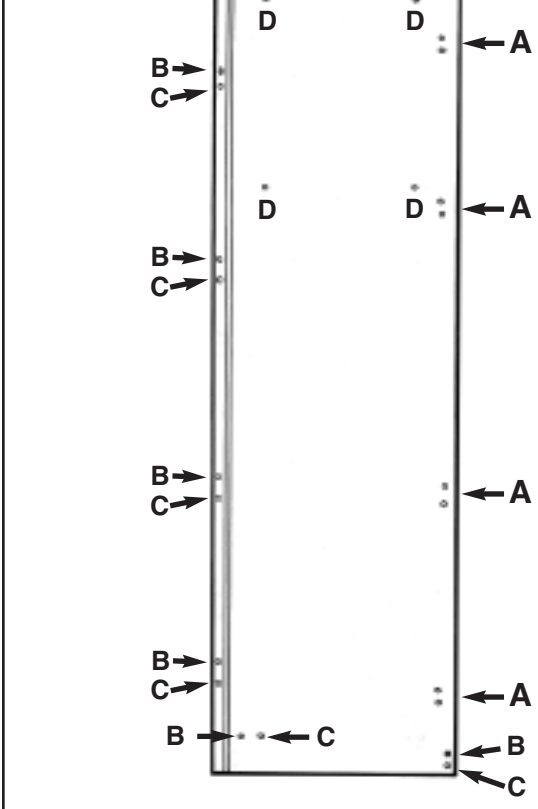


DOUBLE ROBE UNIT

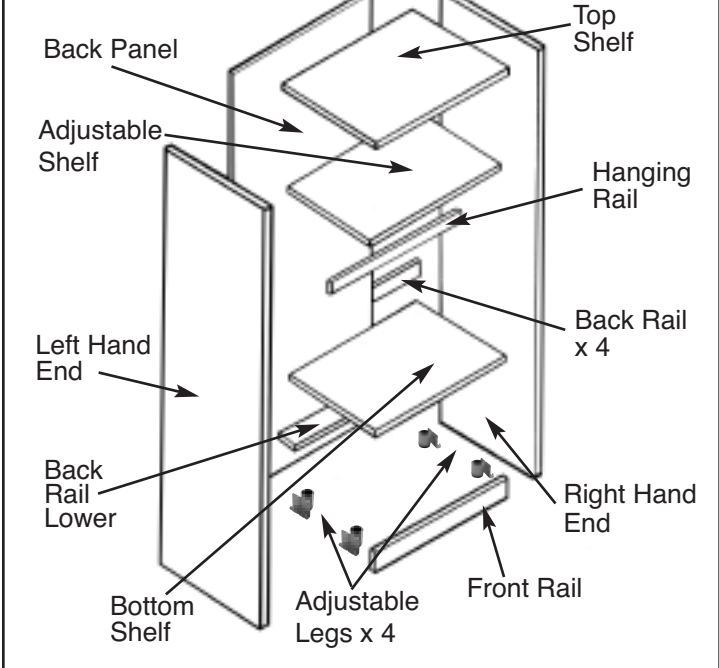


1

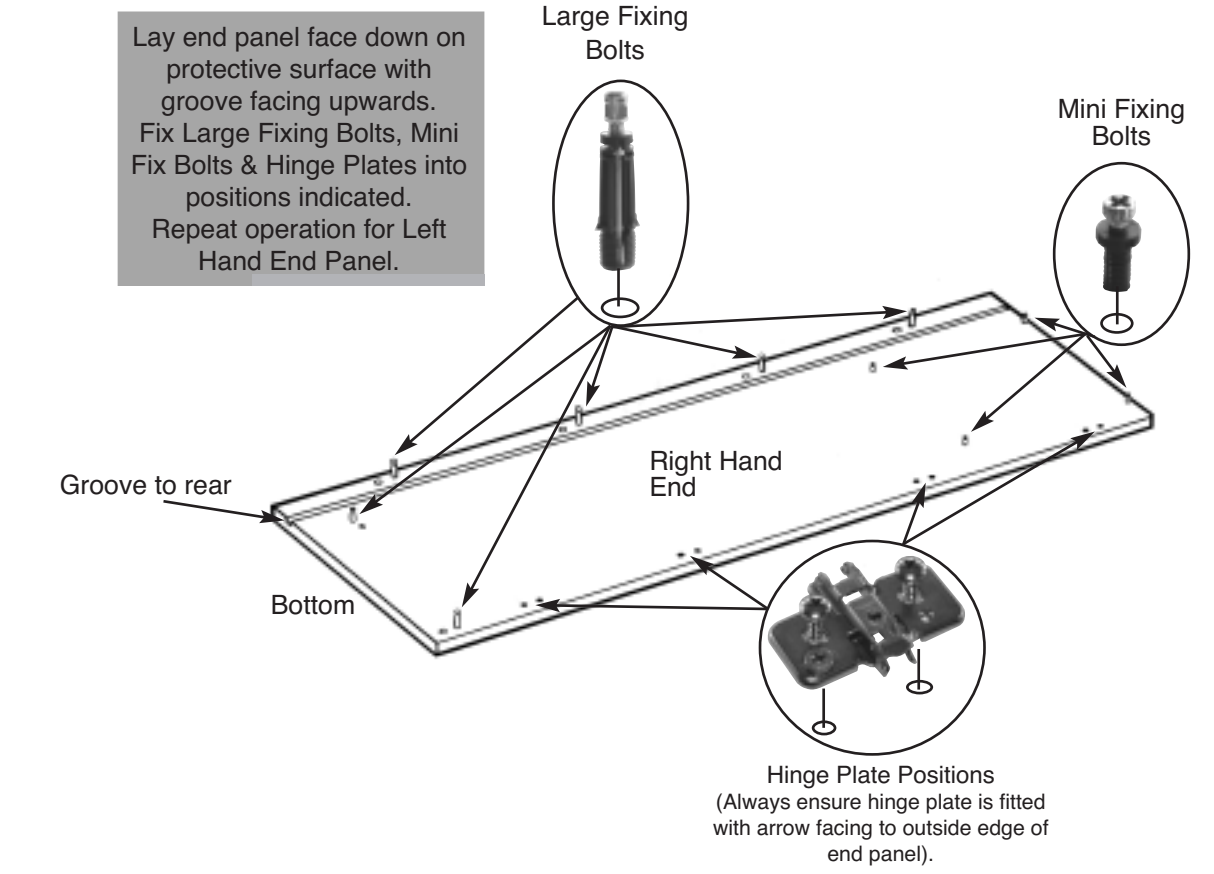


4

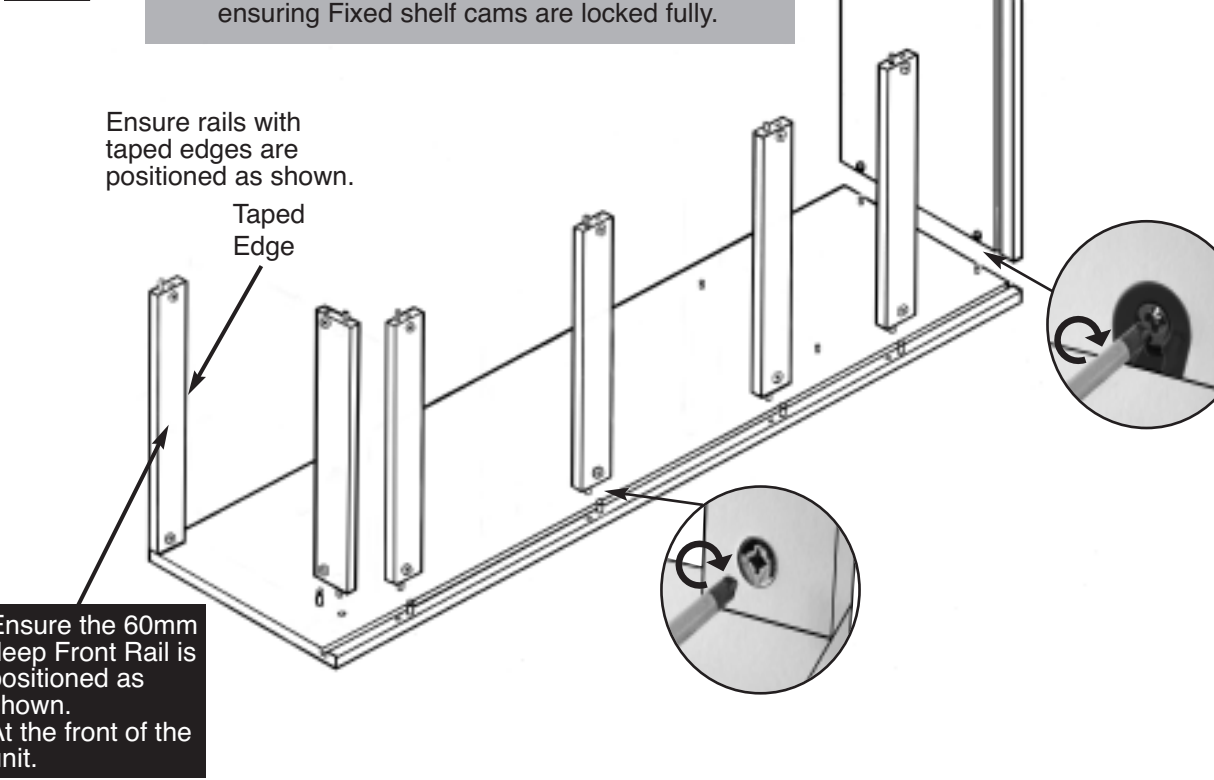


6

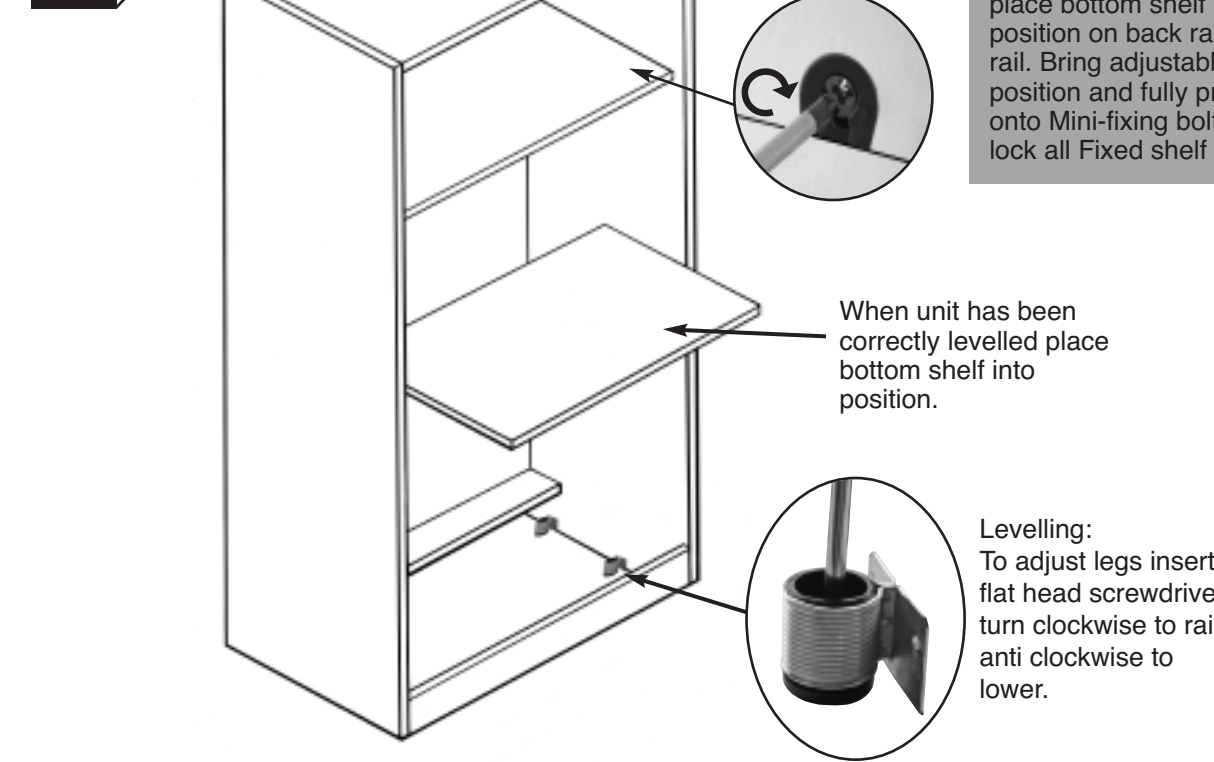


2

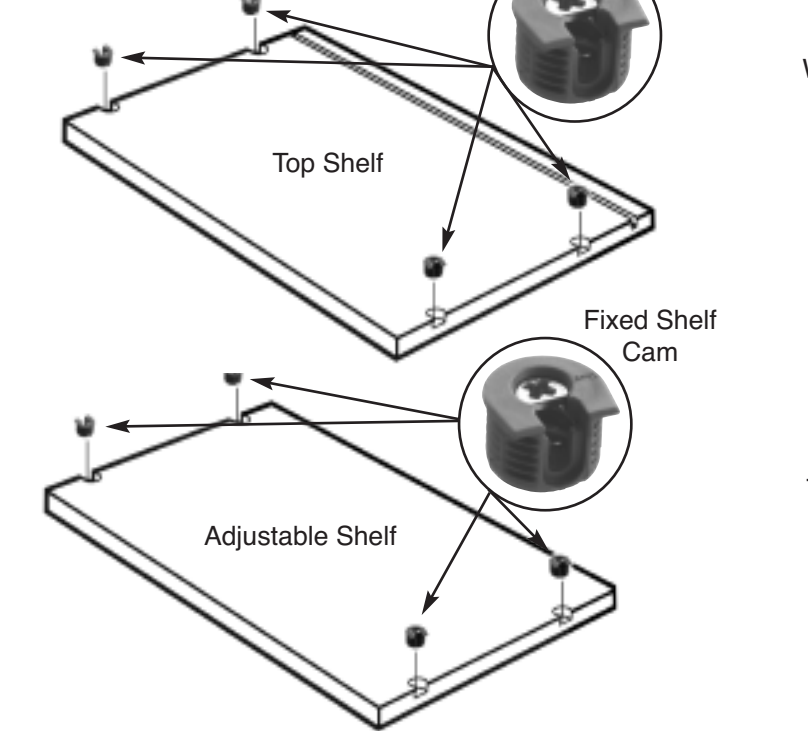

5

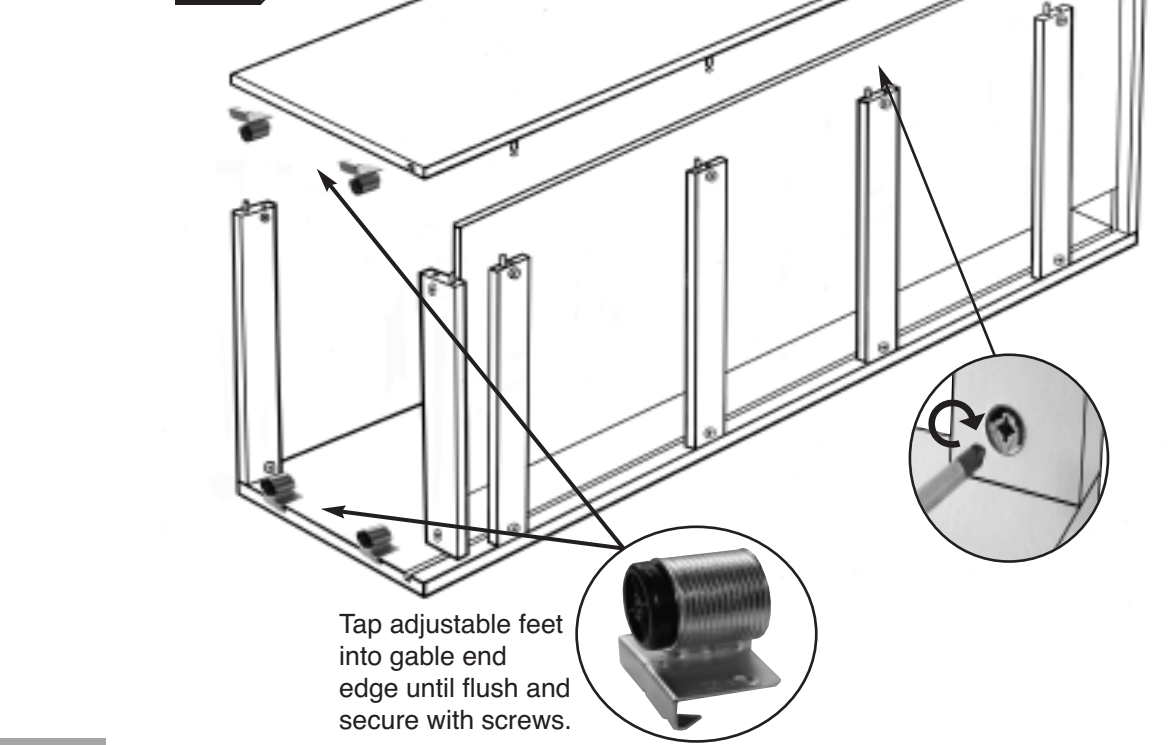


7

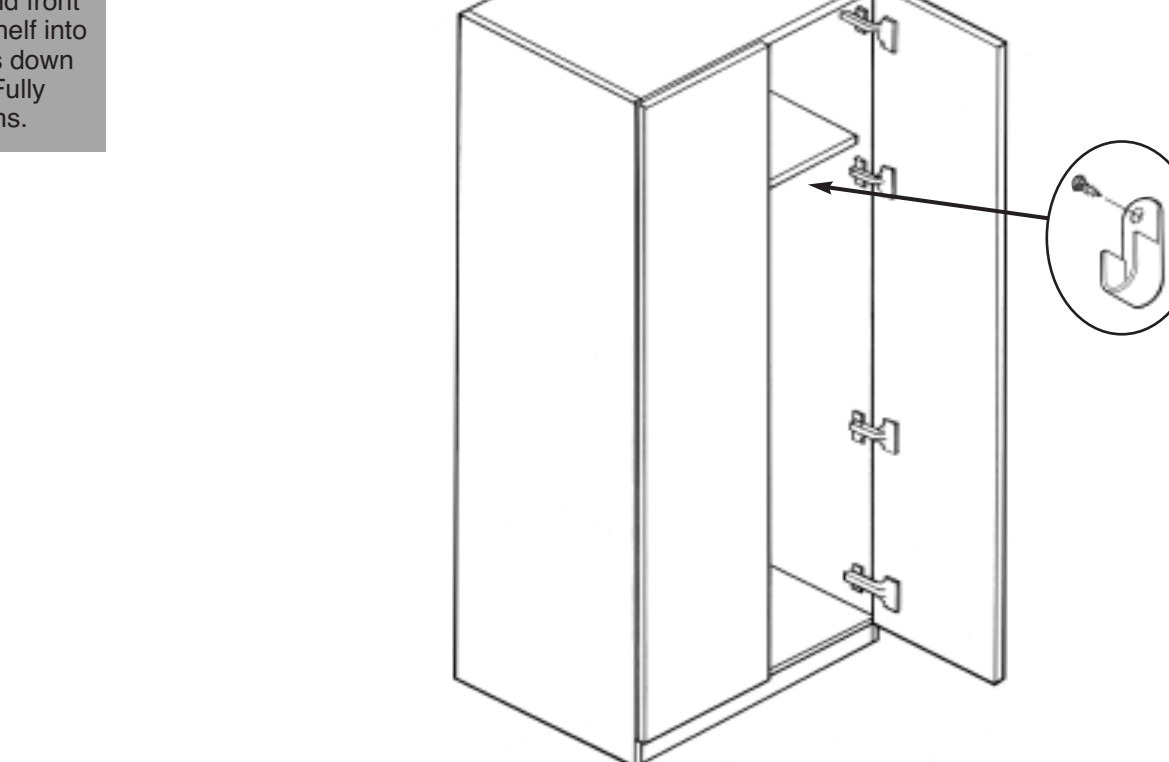

SINGLE & DOUBLE ROBE UNITS. ASSEMBLY INSTRUCTIONS


For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)

3

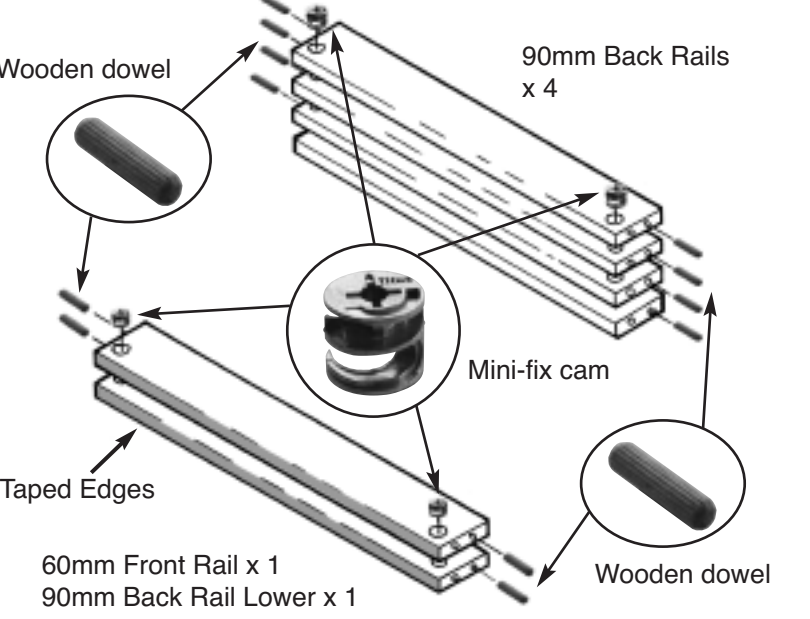


Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


CONTENTS CHECK LIST

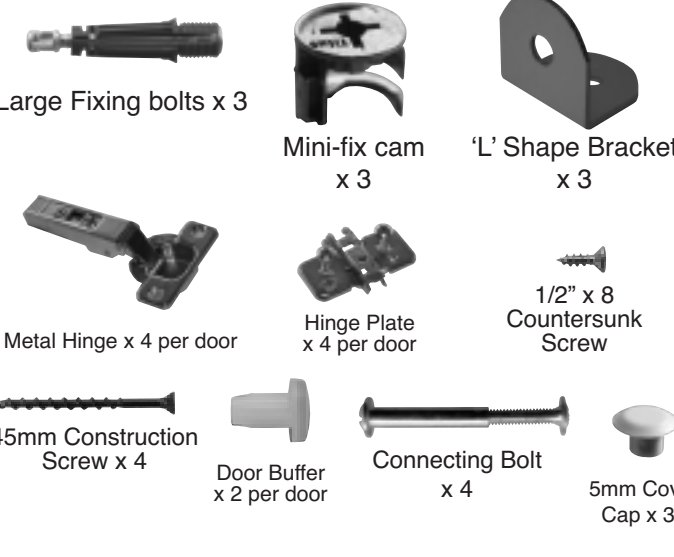

DOORS

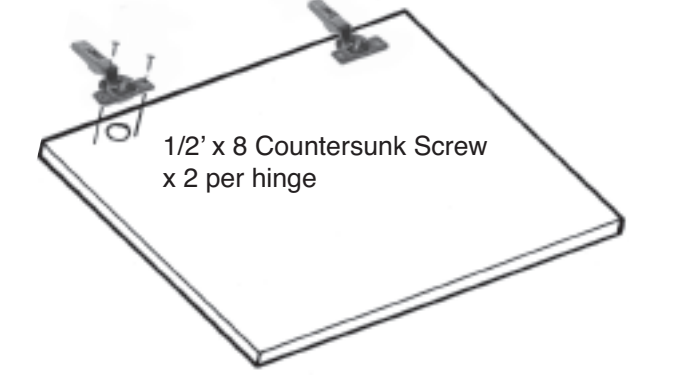

CLIP-ON HINGE ADJUSTMENT

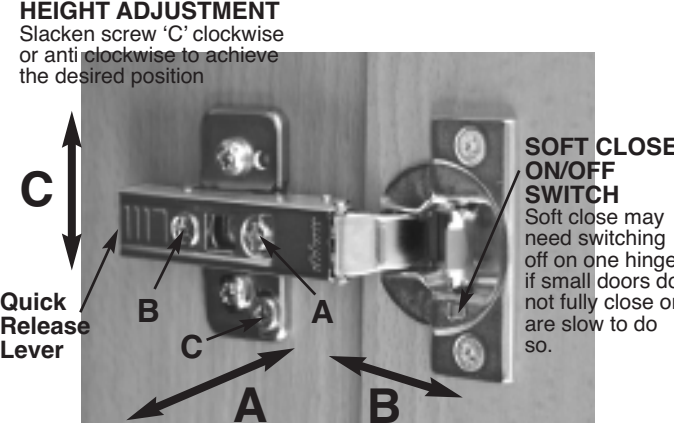

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


Robe Assembly - Upright Position

If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.


HOLCOMBE BEDROOM FURNITURE

Please Note: Follow steps 1 - 6 of single & double robe assembly. (Do not fit hinge plates to end panels). Prior to fitting corner post please ensure that the correct handing of door has been decided. Failure to do so could result in unnecessary damage.


DOUBLE CORNER ROBE UNITS

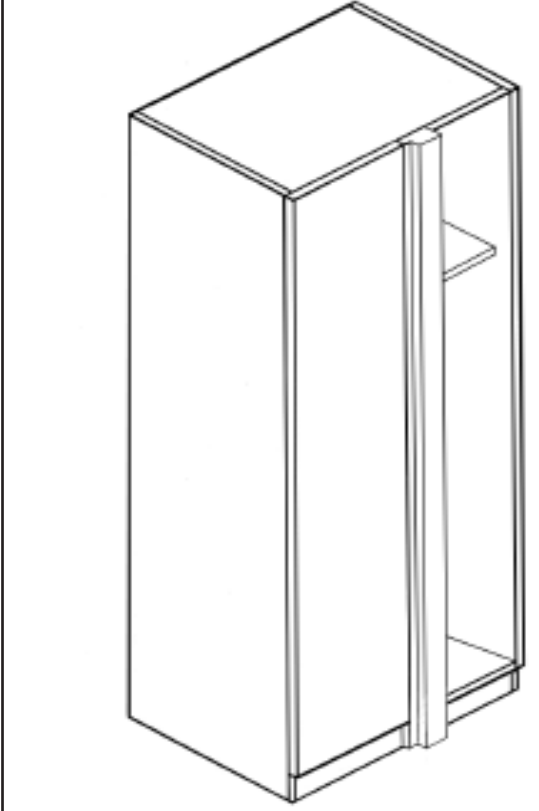

DOUBLE CORNER ROBE UNIT

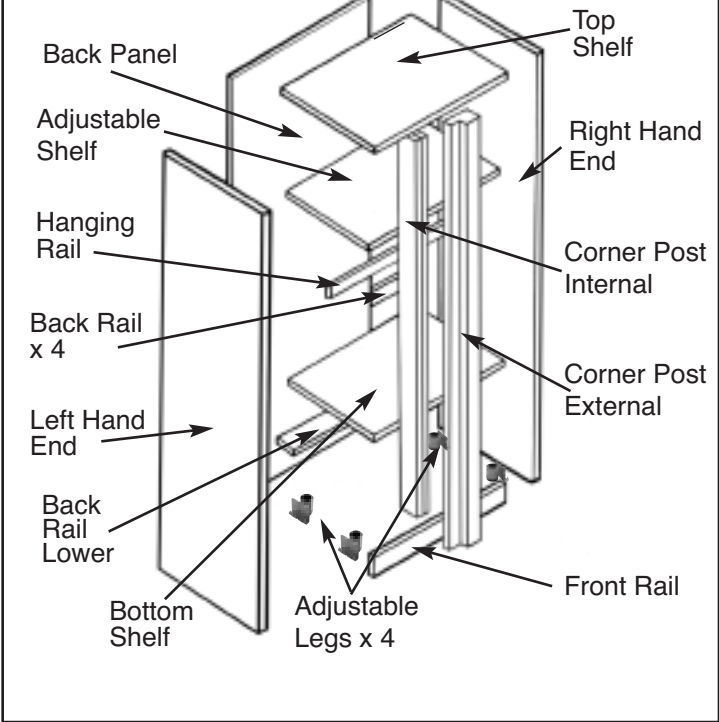


6

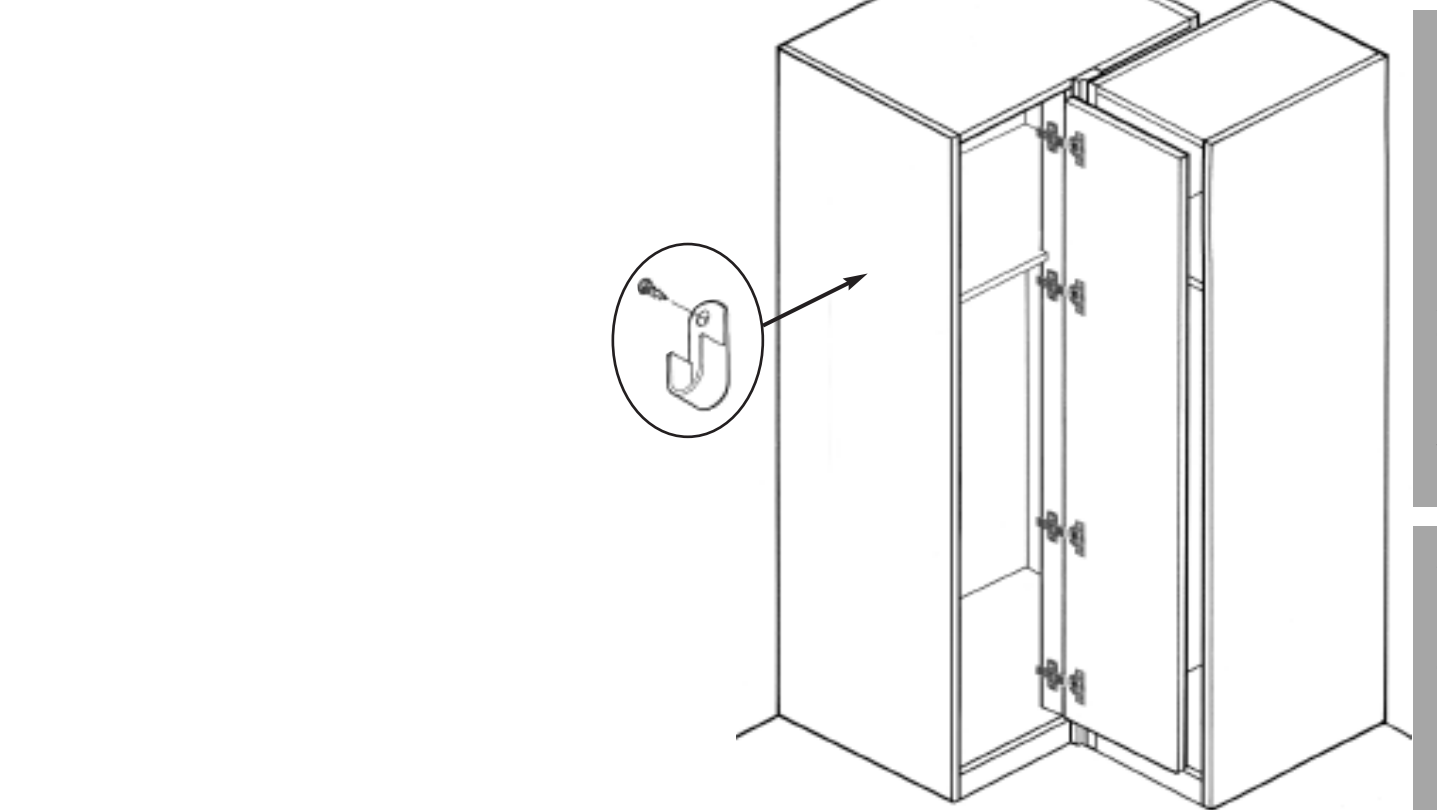


DOUBLE CORNER ROBE UNITS. ASSEMBLY INSTRUCTIONS

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


1

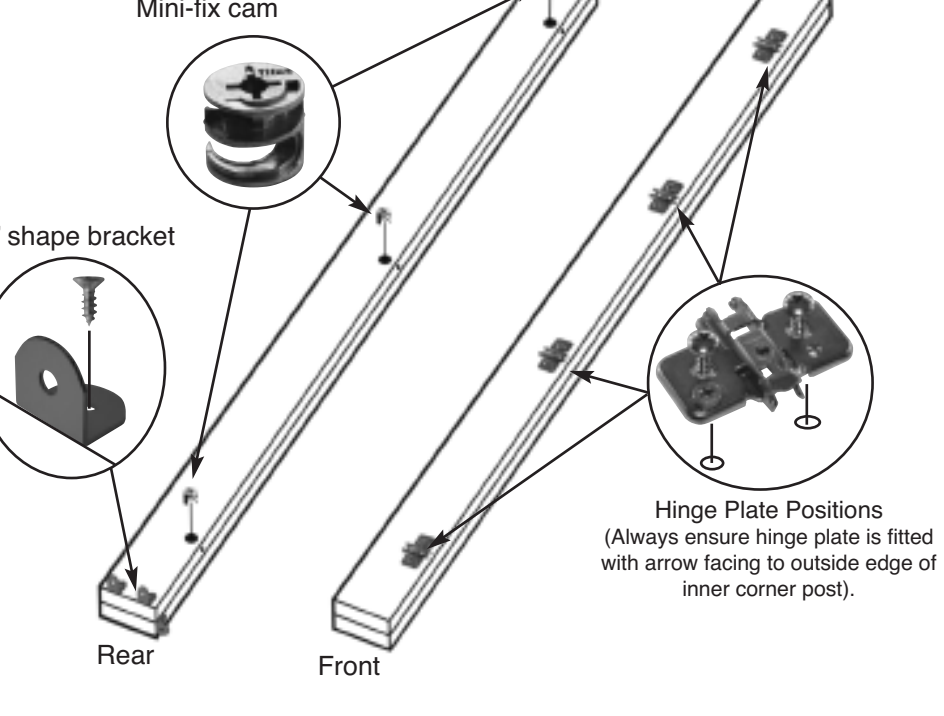


3

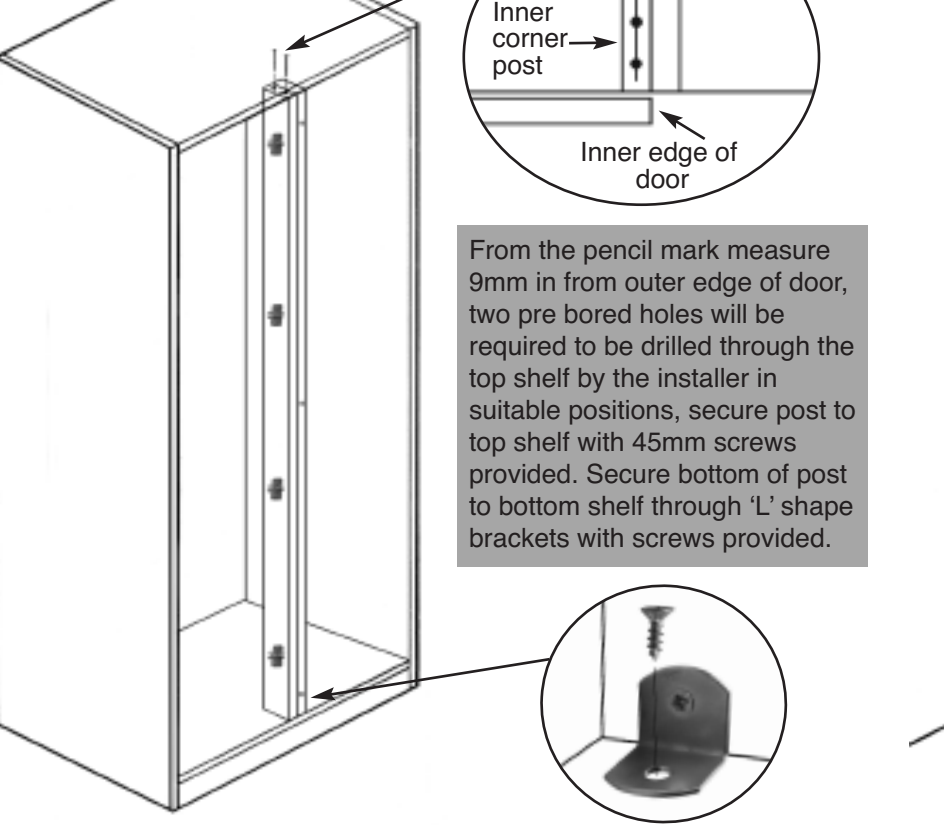


1A

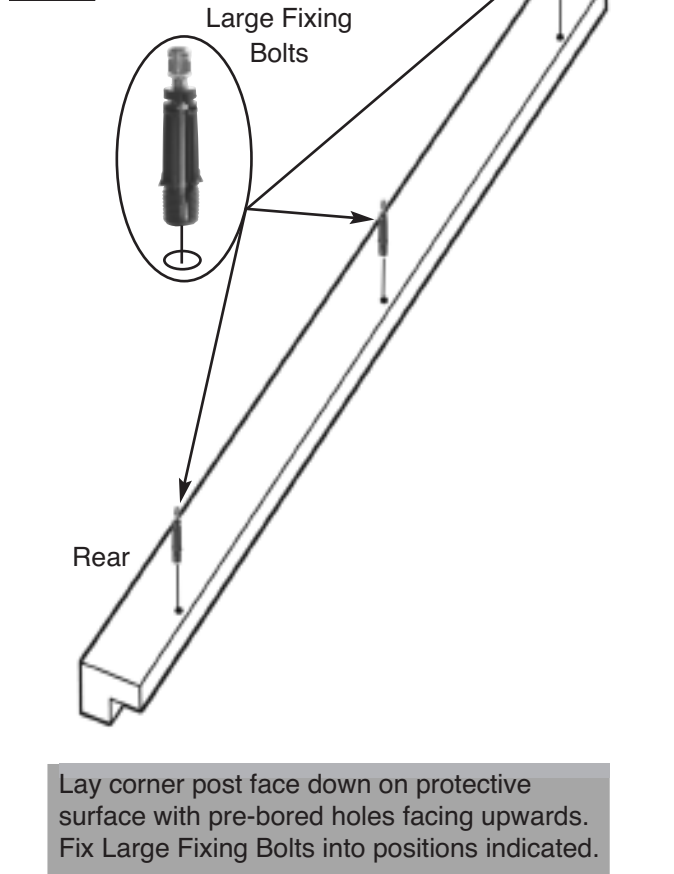


4

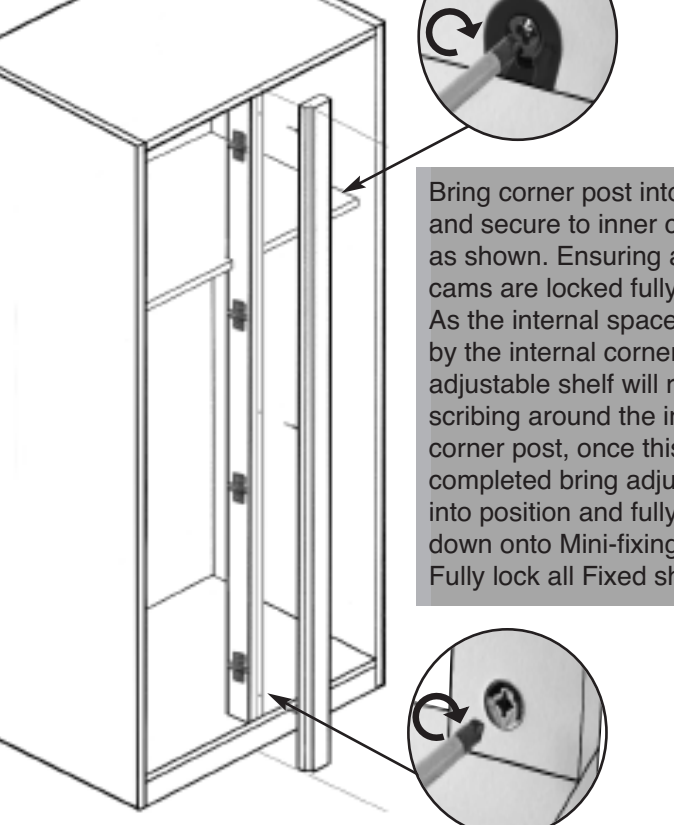

2

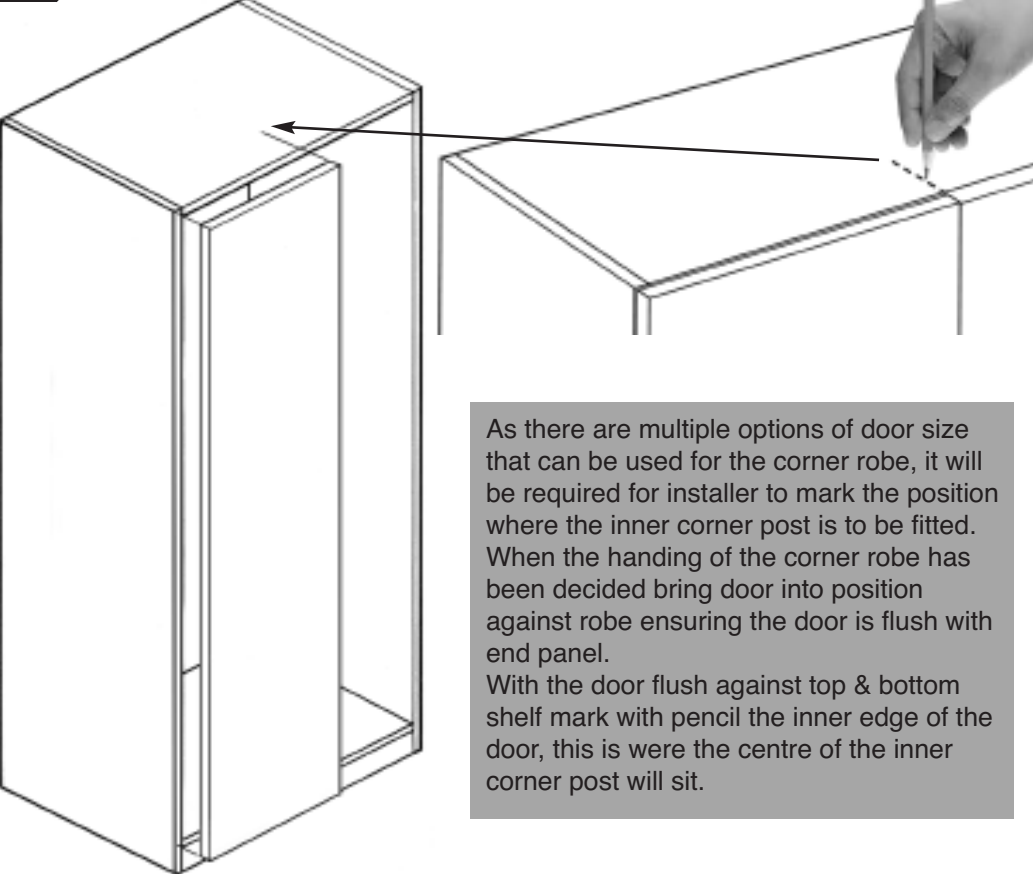

5

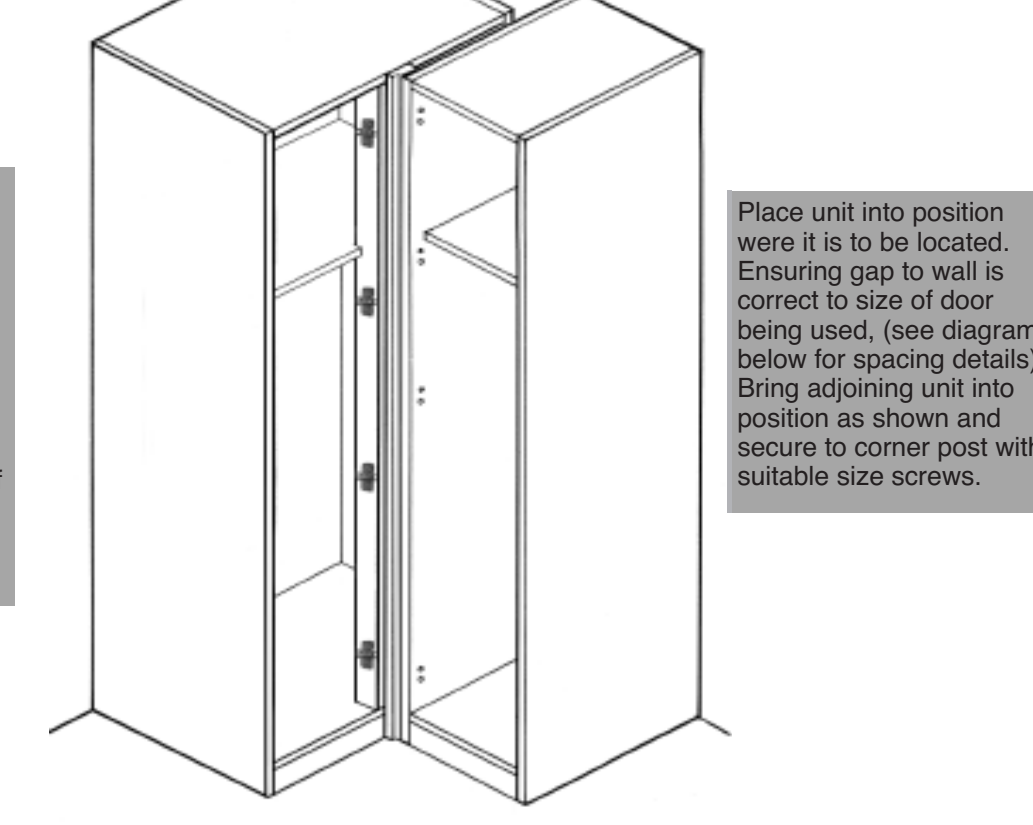


CORNER SITUATIONS


All dimensions in Millimeters

When fitting corner robes the following dimensions should be used.


1000mm CORNER ROBE

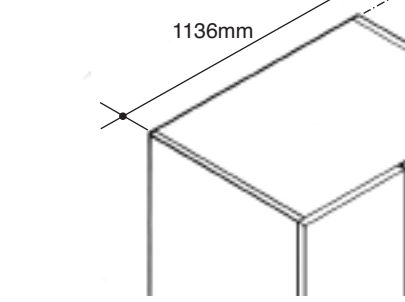


900mm CORNER ROBE

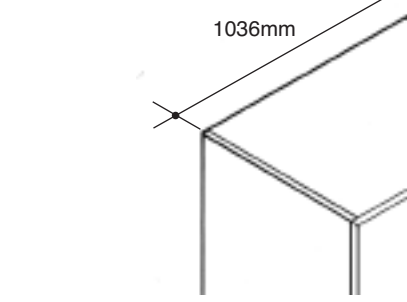

800mm CORNER ROBE

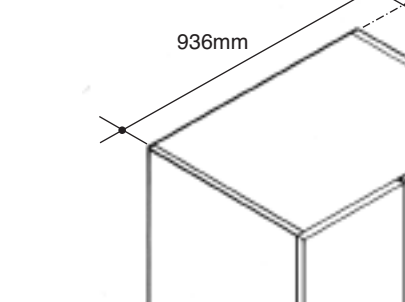


600mm CORNER ROBE

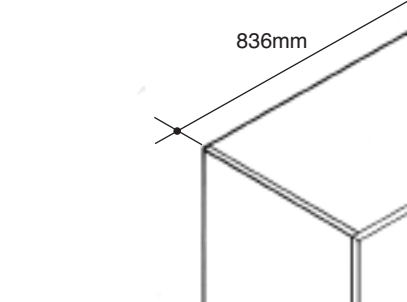




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

CONTENTS CHECK LIST

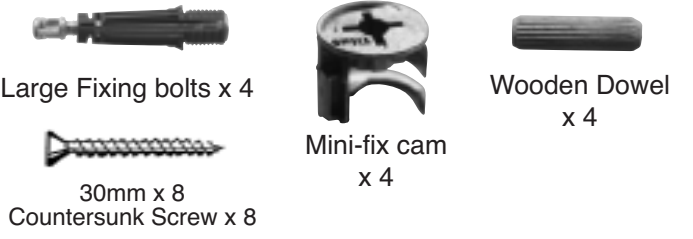


CLIP-ON HINGE ADJUSTMENT

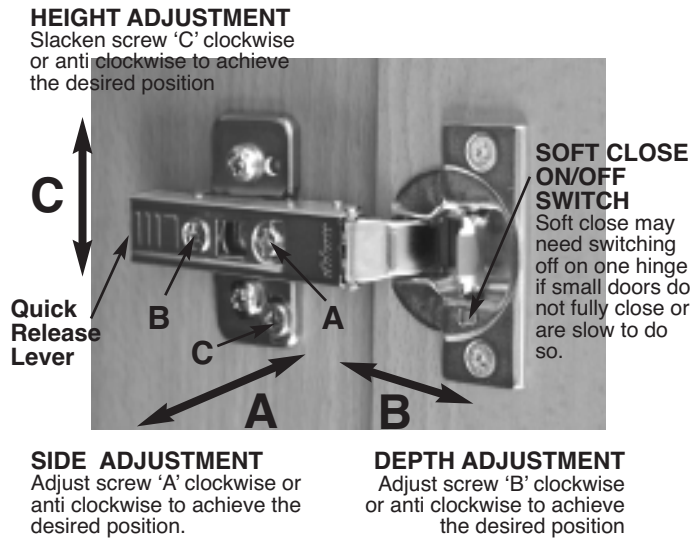

DRAWER BRACKET



FIXING DRAWER BRACKET TO DRAWER FRONT

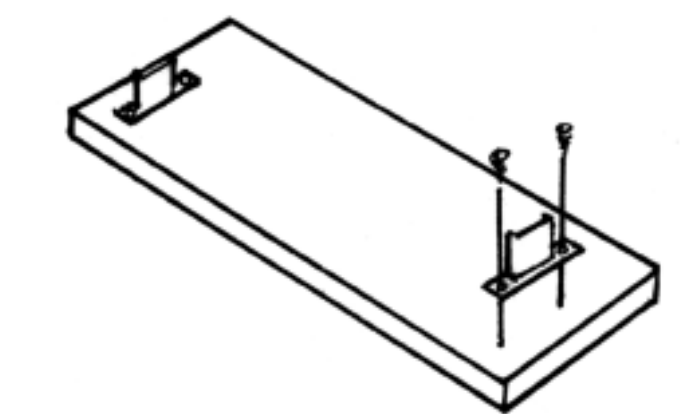

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that drawers should only be fitted once units have been installed.


HOLCOMBE BEDROOM FURNITURE

INTERNAL DRAWER CHESTS.


For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)

ANTARO DRAWER SYSTEM


INTERNAL DRAWER CHESTS

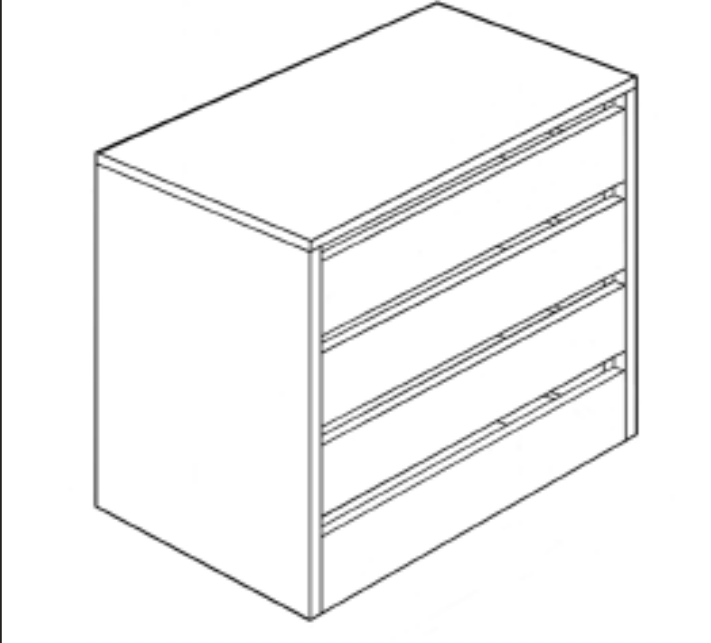

INTERNAL DRAWER CHESTS

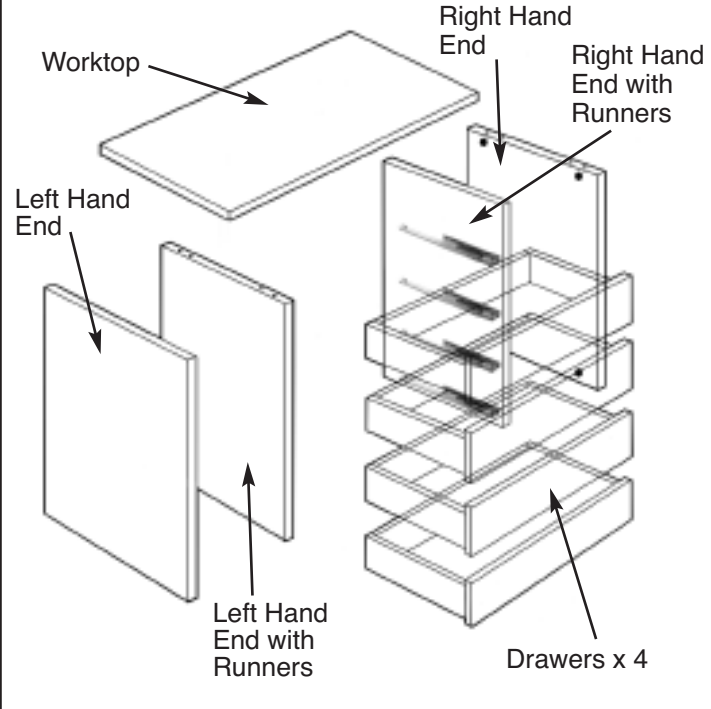


6

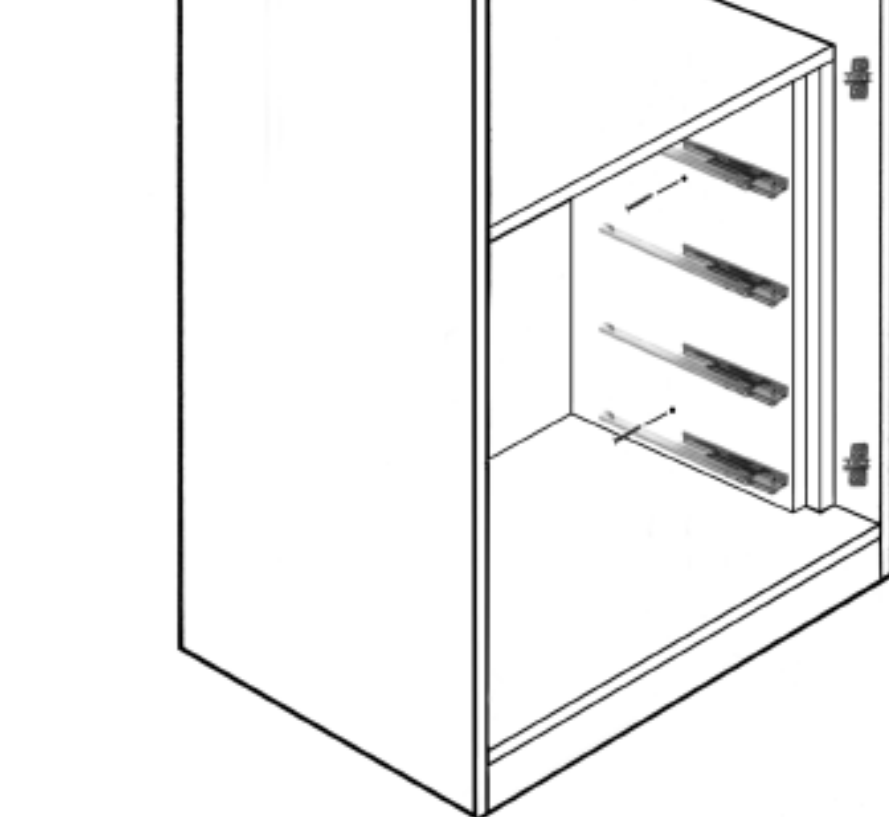


Place end panels with drawer runners fitted into position against unit end panels. Both end panels with drawer runners fitted require to be secured to unit end panels with screws provided. It is left for installer to decide on position where holes are to be drilled for screws to be secured.

7

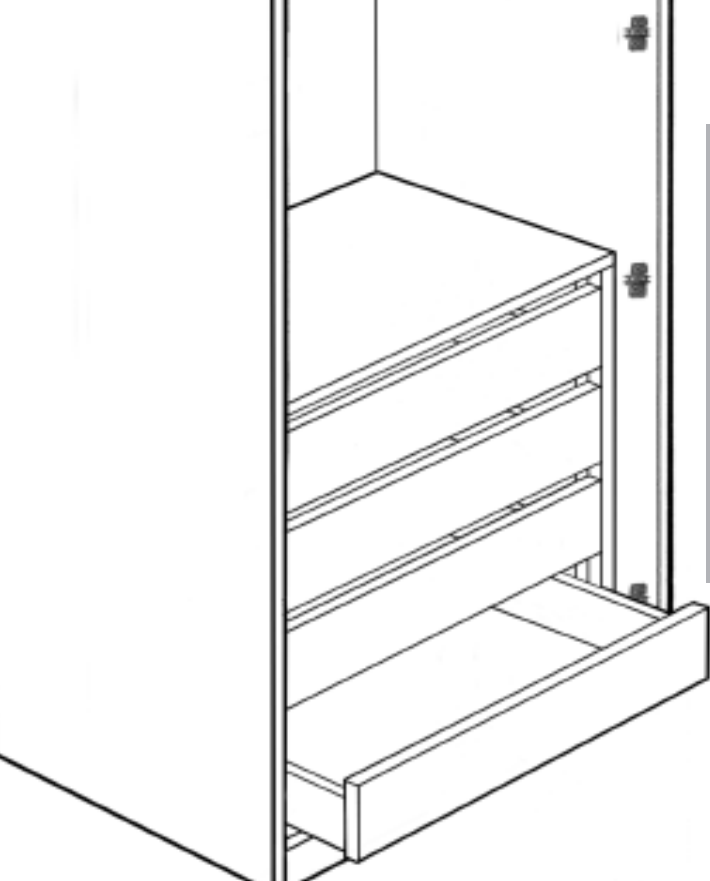

Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer.

8

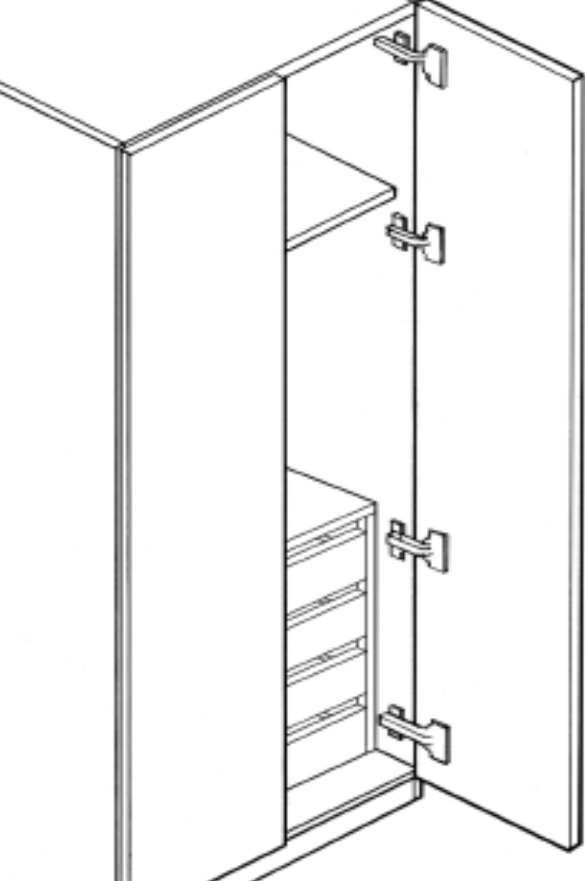


Once adjustable shelf has been placed into position, secure hanging rail support to end panels and place hanging rail into position. Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. If required the unused pre-bored holes in end panels can be plugged with the 5mm cover caps supplied.


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained.

1


As the end panels are universal it is only required for mini-fix cams and wooden dowels to be installed as shown below. Lay end panels face down on protective surface. Firmly press home Mini Fix cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. Repeat operation for Left hand end panel.

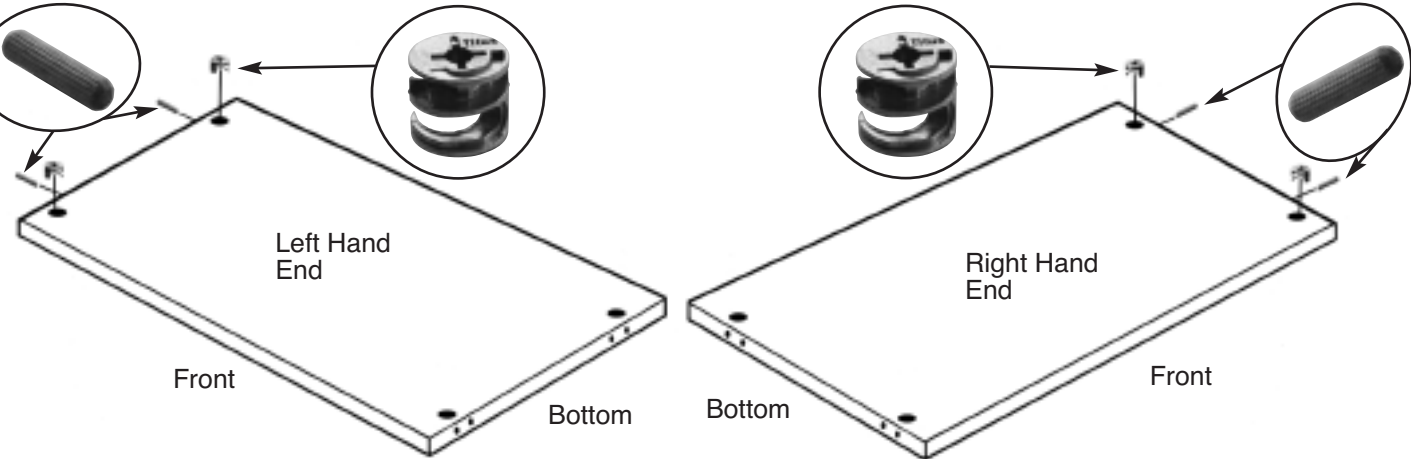

4

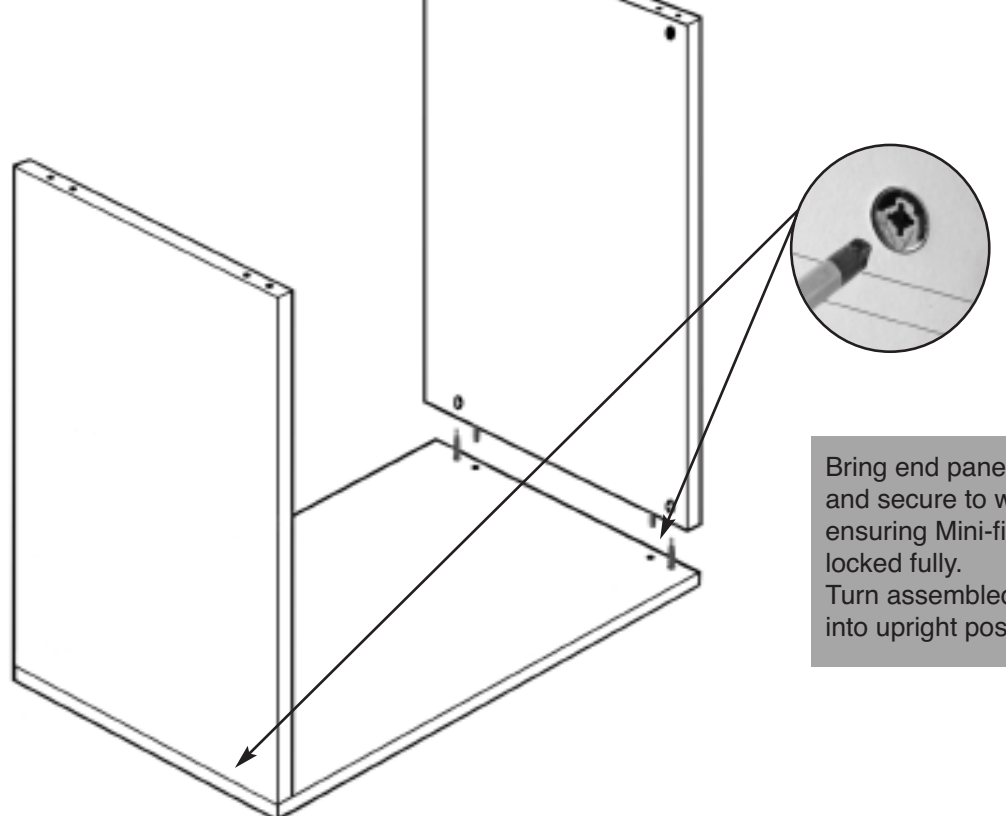


2

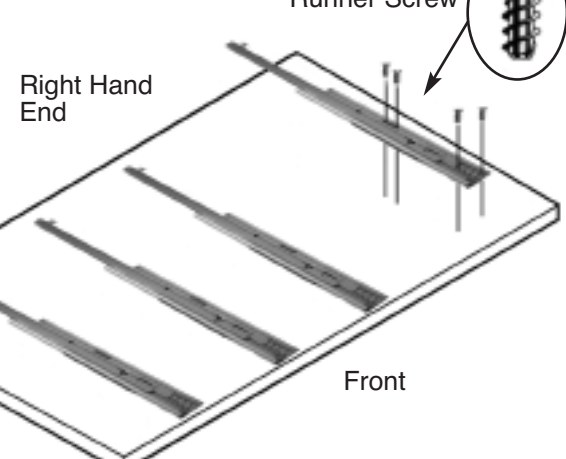


Lay end panels for drawer runners face down on protective surface. Bring Drawer runners into position and fix to end panels into pre-bored holes with runner screws. Repeat operation for Left hand end panel.

3

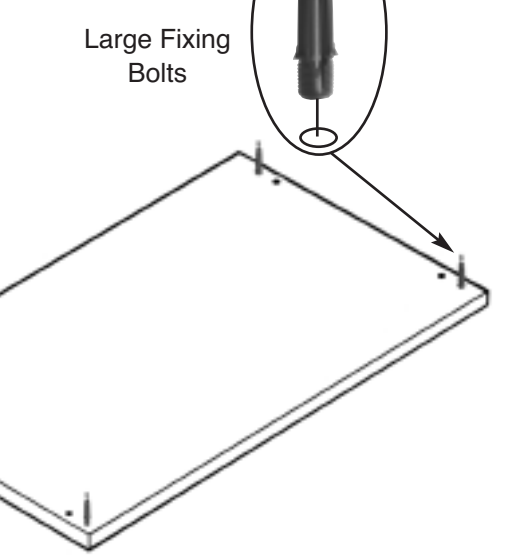

Lay worktop face down on protective surface. Fix Large Fixing Bolts into positions indicated.


5

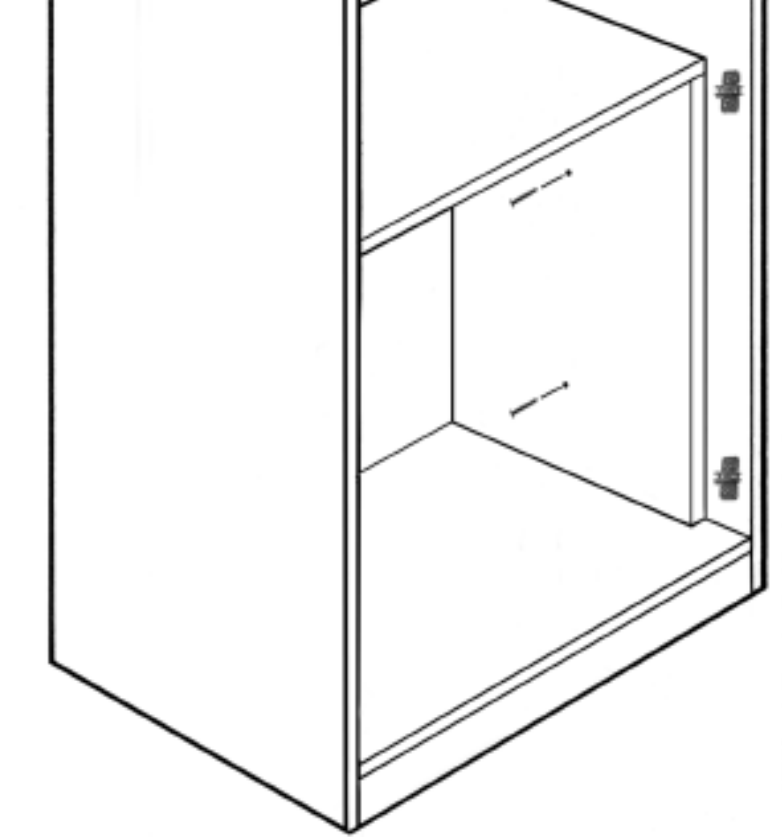


Place assembled panels into robe ensuring it is fully pressed home against back panel. Both end panels require to be secured to robe end panels with screws provided. It is left for installer to decide on position where holes are to be drilled for screws to be secured.

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

CONTENTS CHECK LIST

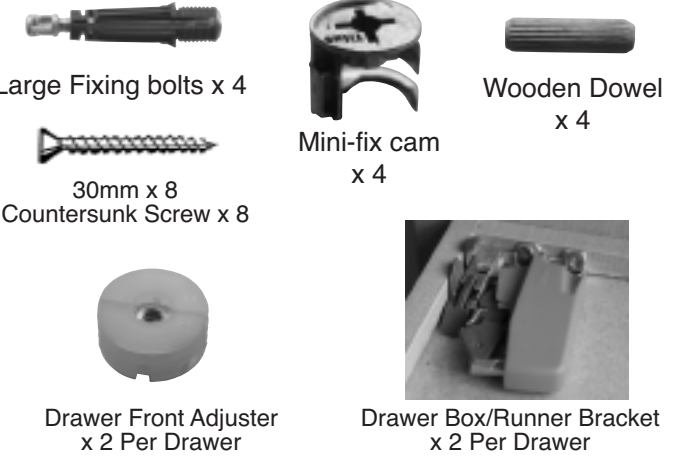


FIXING DRAWER FRONT TO DRAWER BOX

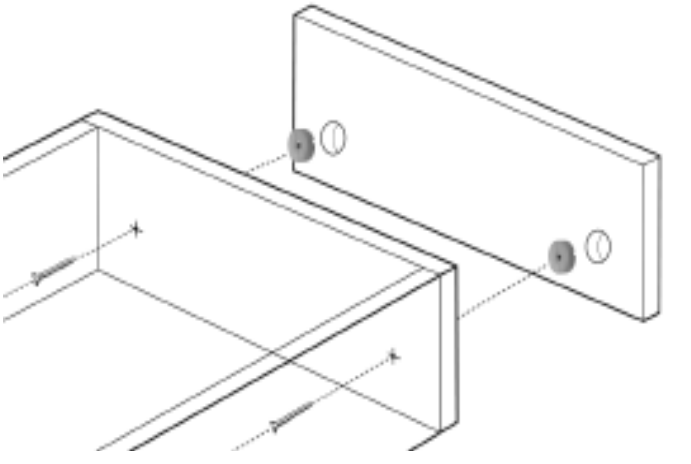

Firmly press drawer front adjusters into pre-bored holes in drawer front, bring drawer box into position and secure to drawer front with screws provided through pre-bored holes in drawer box. Turn drawer over and fit drawer runner brackets to underside of drawer box with screws provided as shown below.



CLIP-ON HINGE ADJUSTMENT

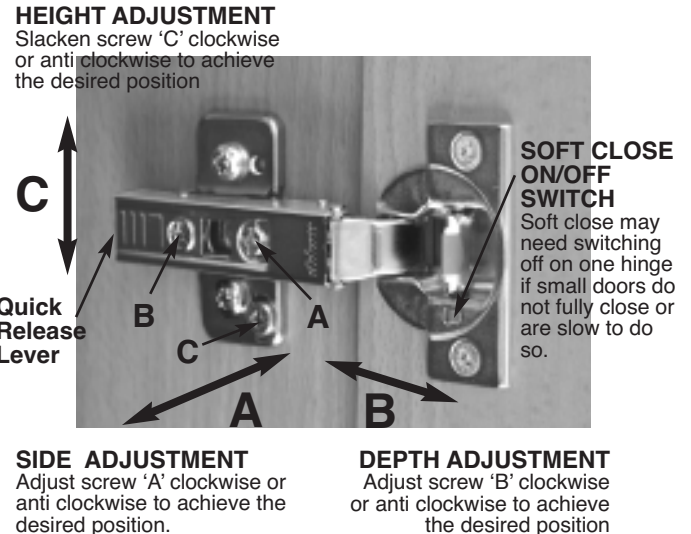


HOLCOMBE BEDROOM FURNITURE

INTERNAL DRAWER CHESTS.


For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)

GREY TEXTILE DRAWER SYSTEM


INTERNAL DRAWER CHESTS

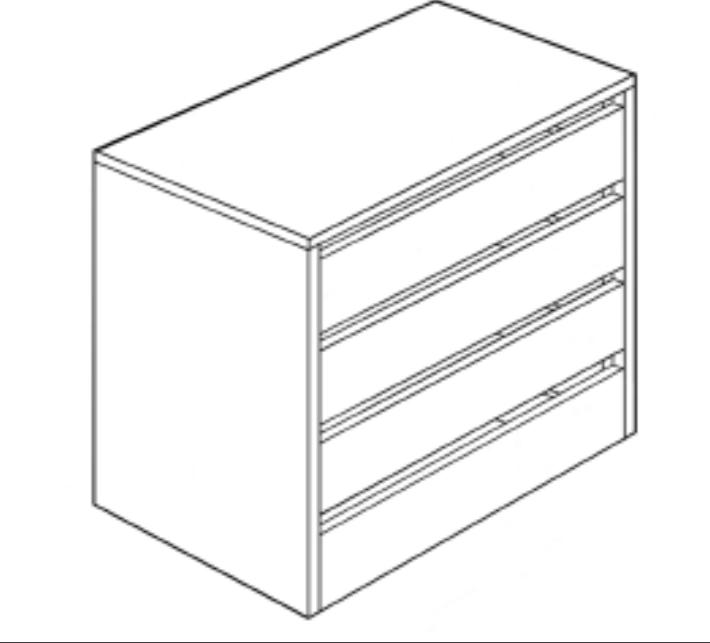

INTERNAL DRAWER CHESTS

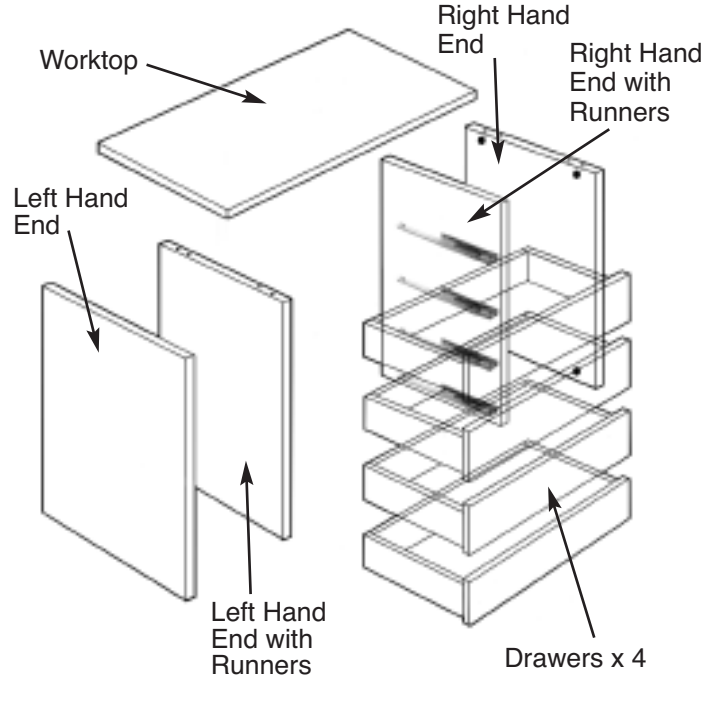


6

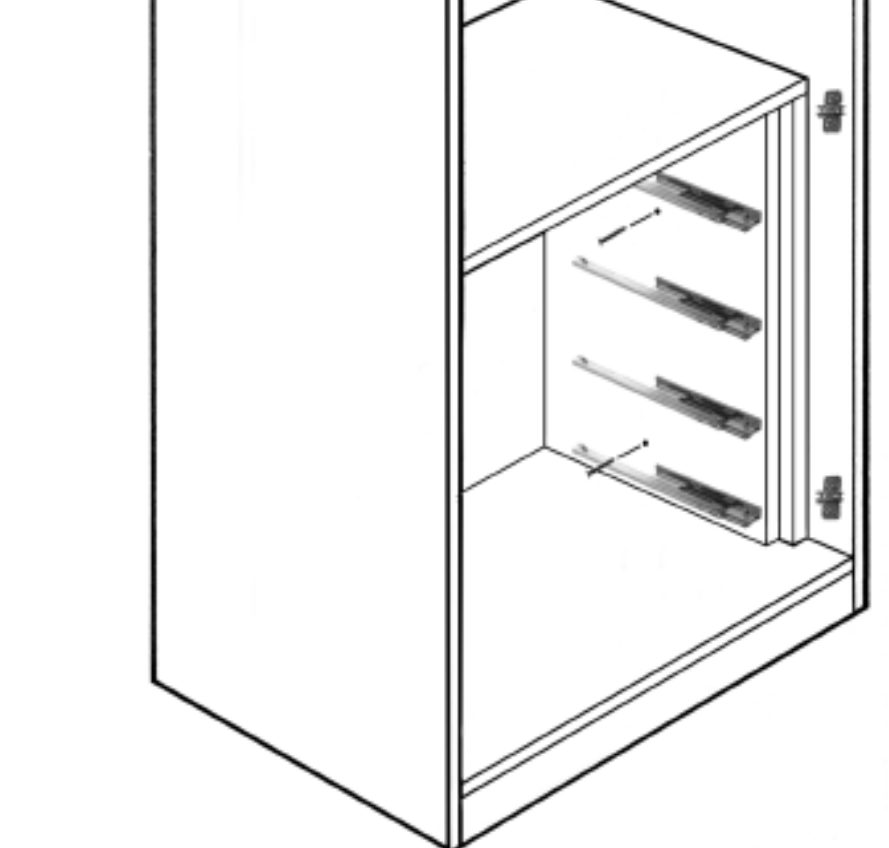


Place end panels with drawer runners fitted into position against unit end panels. Both end panels with drawer runners fitted require to be secured to unit end panels with screws provided. It is left for installer to decide on position where holes are to be drilled for screws to be secured.

7

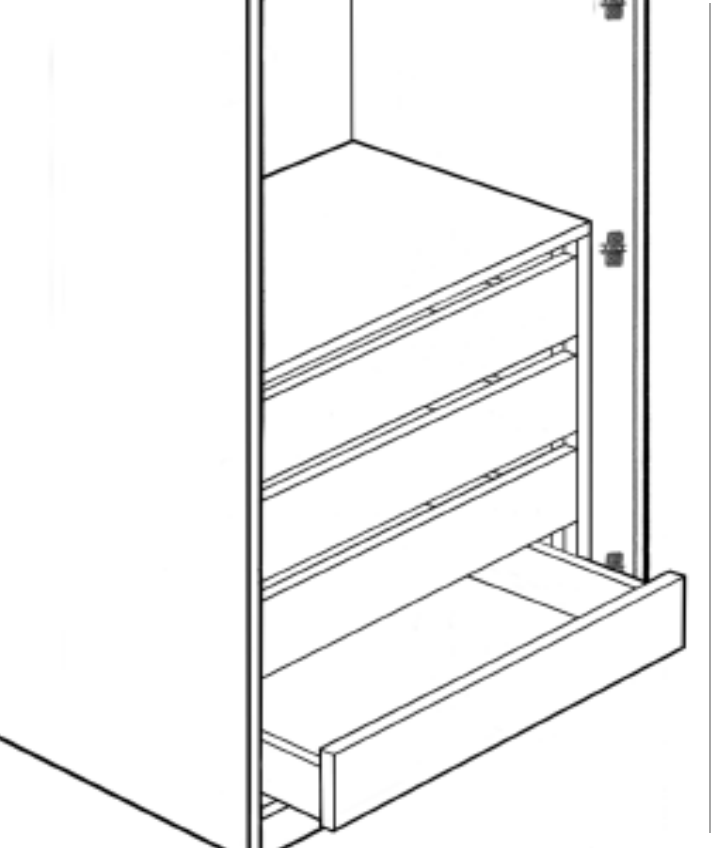

Bring drawers into position and place on to fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre-bored holes in end panels can be plugged using 5mm cover caps supplied.

8

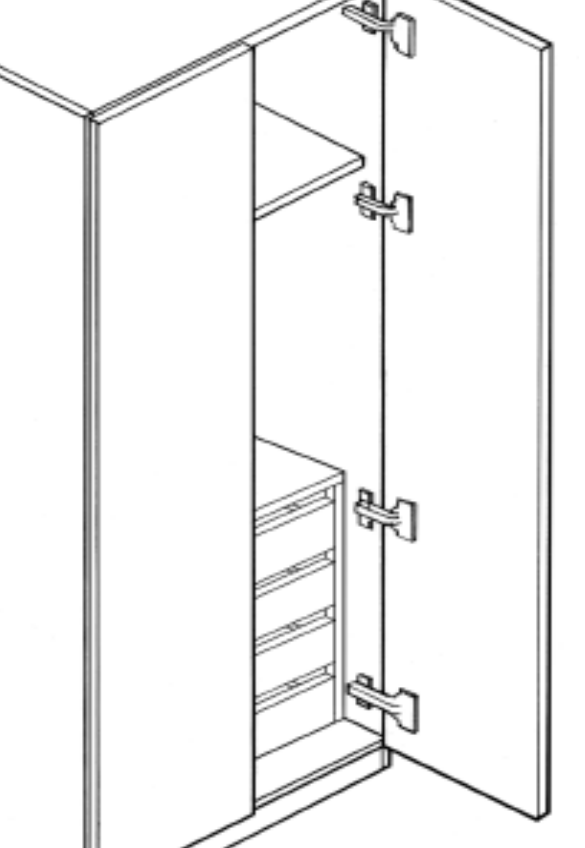


Once adjustable shelf has been placed into position, secure hanging rail support to end panels and place hanging rail into position. Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. If required the unused pre-bored holes in end panels can be plugged with the 5mm cover caps supplied.

Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained.




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

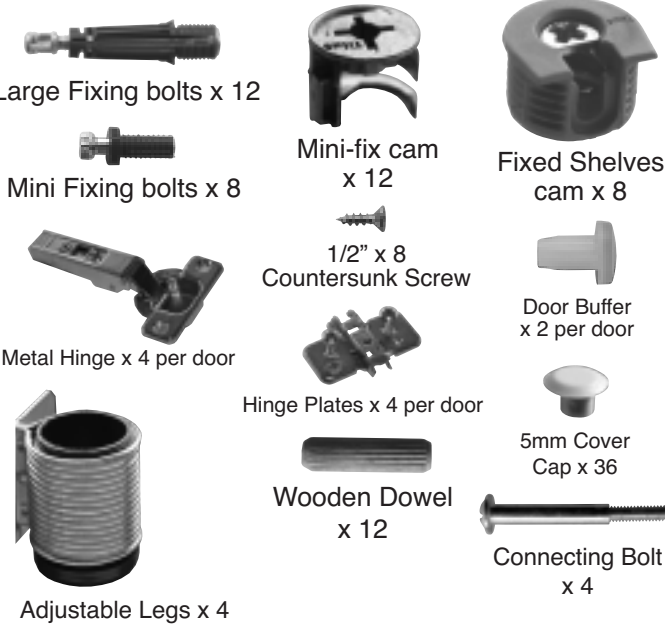


#### DOORS

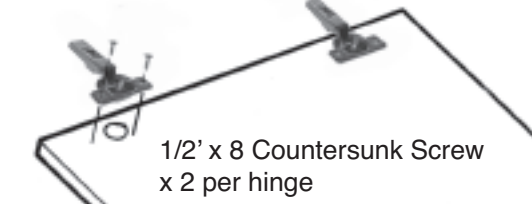

#### CLIP-ON HINGE ADJUSTMENT

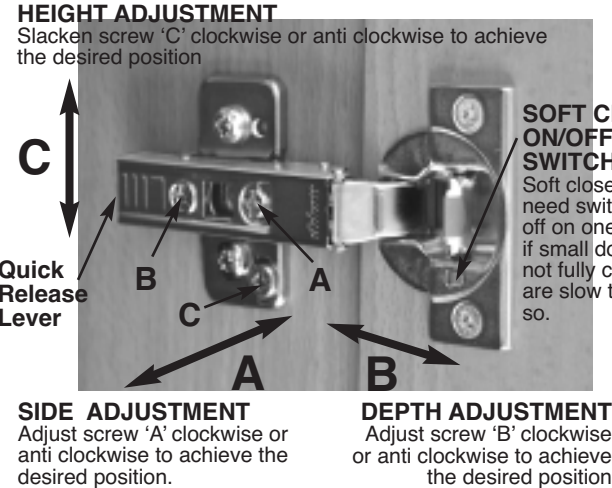

#### FIXING DRAWER BRACKET TO DRAWER FRONT

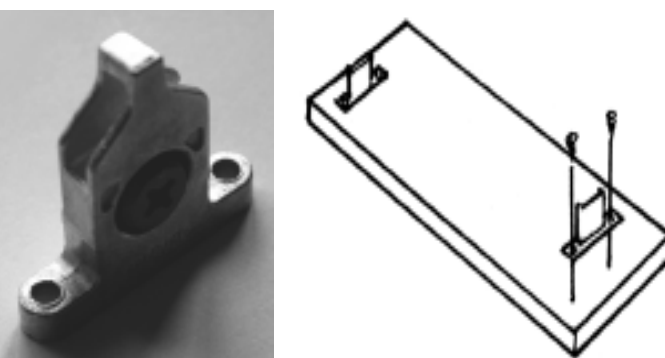

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

#### Robe Assembly - Upright Position


If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.

### HOLCOMBE BEDROOM FURNITURE

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.


#### ANTARO DRAWER SYSTEM

##### COMBI DOUBLE ROBE UNIT

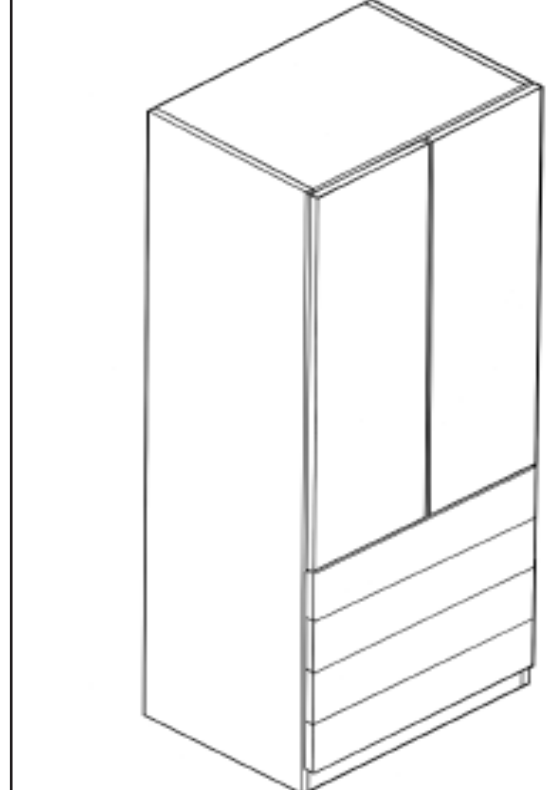


#### Hardware Fixing Positions


A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

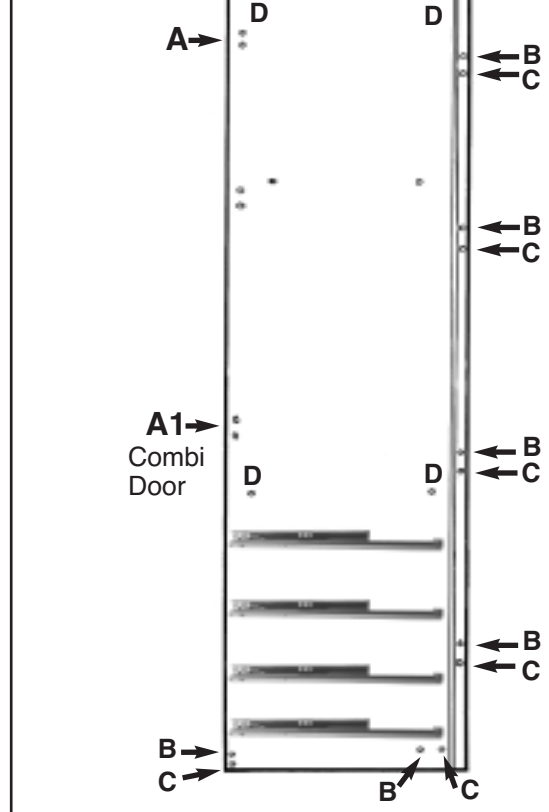


##### COMBI ROBE UNIT

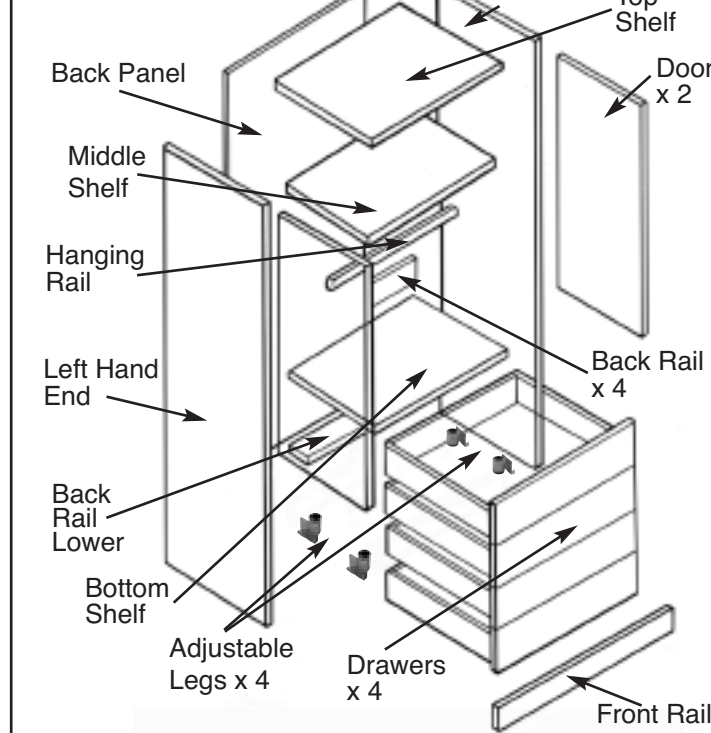


### COMBI ROBE UNIT. ASSEMBLY INSTRUCTIONS

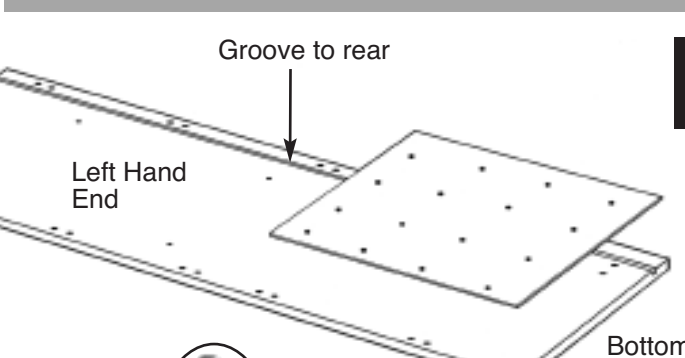


Due to multiple drawer configurations it is required for installer to mark drawer runner fixing positions in end panels with template supplied. Bring template into position on end panel ensuring template is flush with bottom & front of end panel.

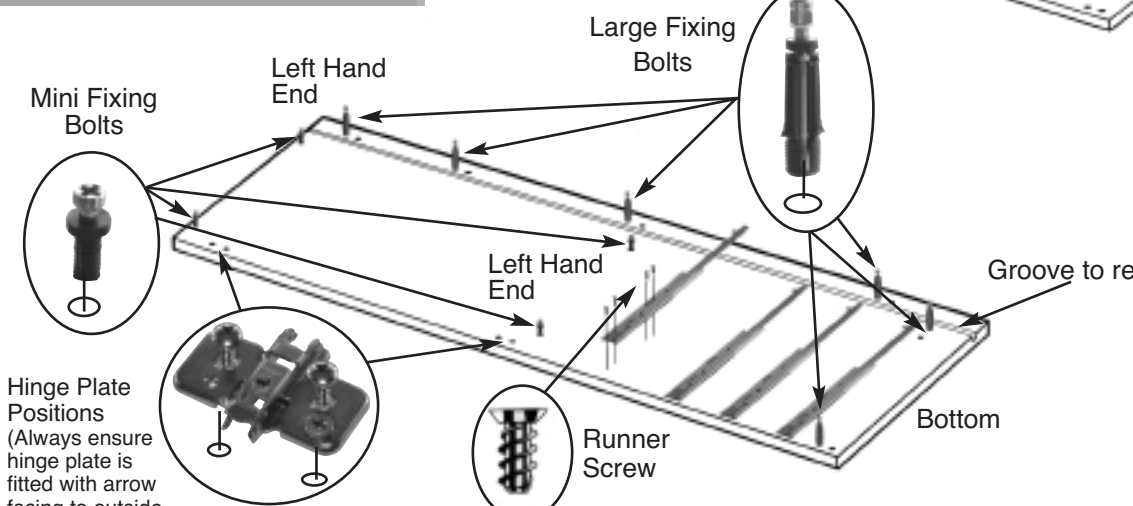




Lay end panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts, Mini Fixing Bolts, Hinge Plates & Drawer Runners into positions indicated. Repeat operation for Right Hand End Panel.

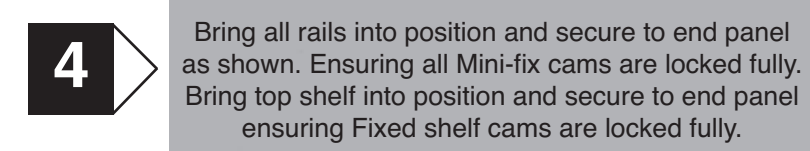


Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring top shelf into position and secure to end panel ensuring Fixed shelf cams are locked fully.

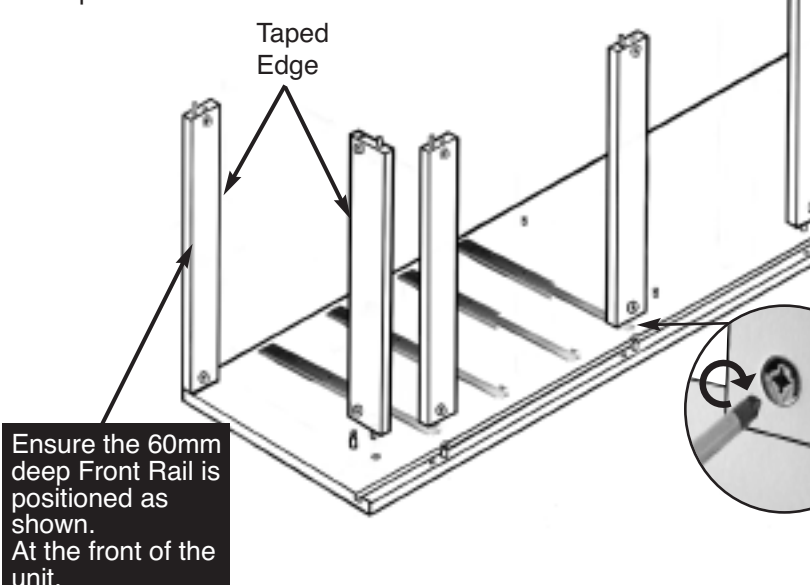


Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail. Bring middle shelf into position and fully press down onto Mini-fixing bolts. Fully lock all cams. Secure hanging rail supports to end panels and place rail into position.

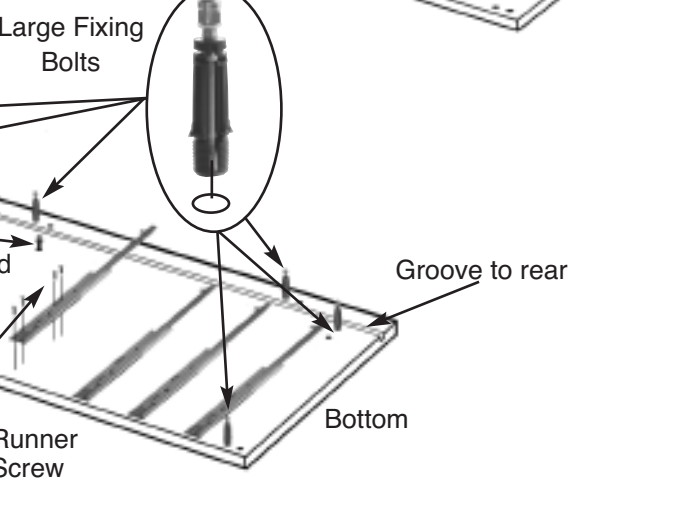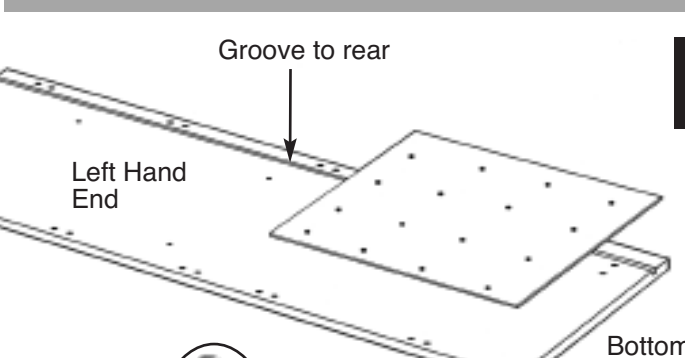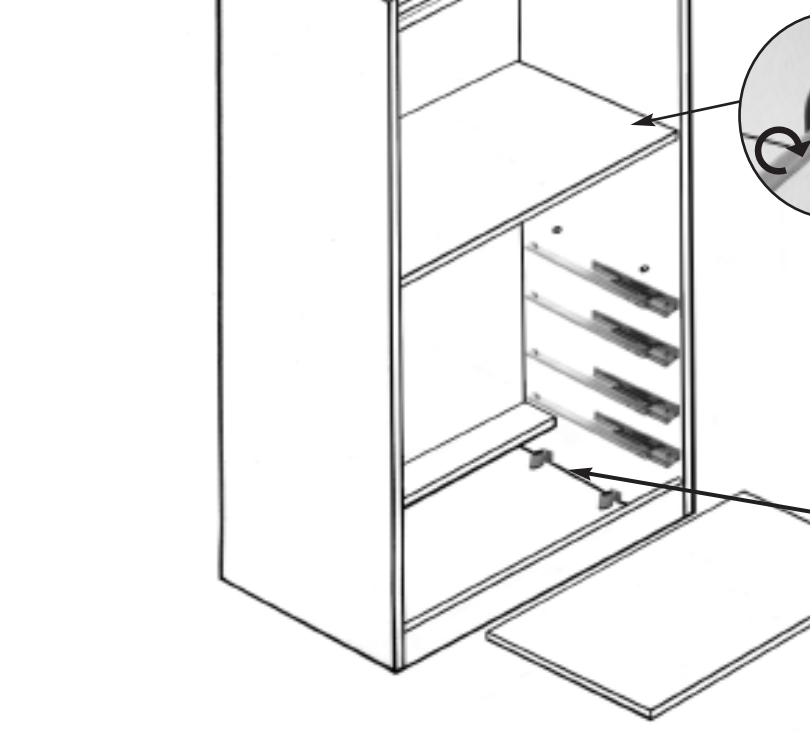




Lay Top Shelf & Middle Shelf face down on protective surface (with groove in Top Shelf facing upwards). Firmly press home Fixed Shelf Cams into pre-bored holes ensuring opening in cams face outwards.

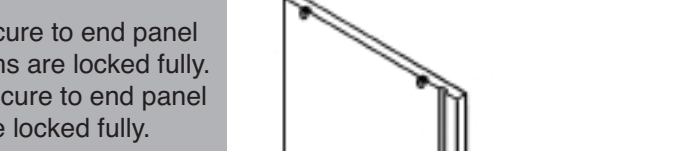

Bring back panel into position and locate into grooves in end panel and top shelf. Bring other end panel into position and place onto all rails, back panel and top shelf, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams & Fixed shelf cams.

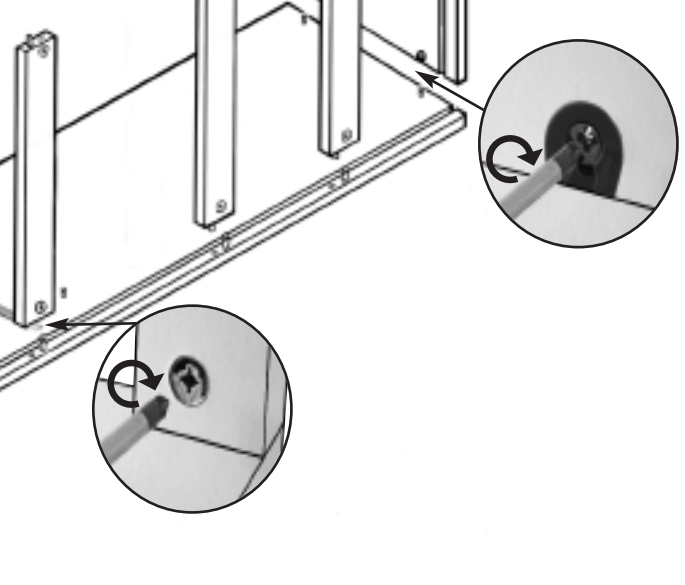



Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. Bring adjoining unit into position against blanking panel and secure.

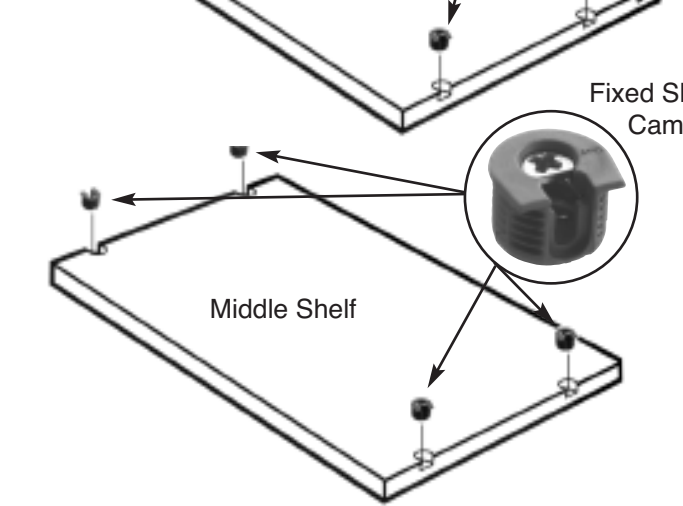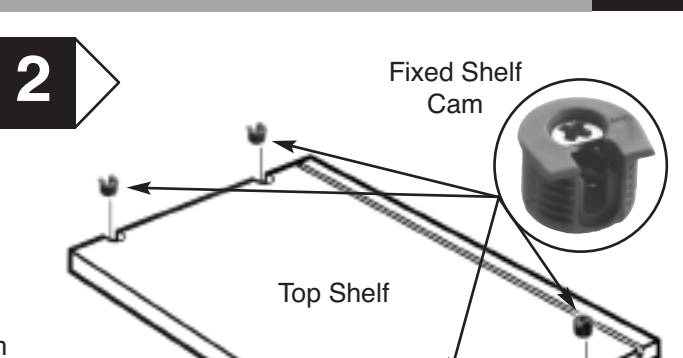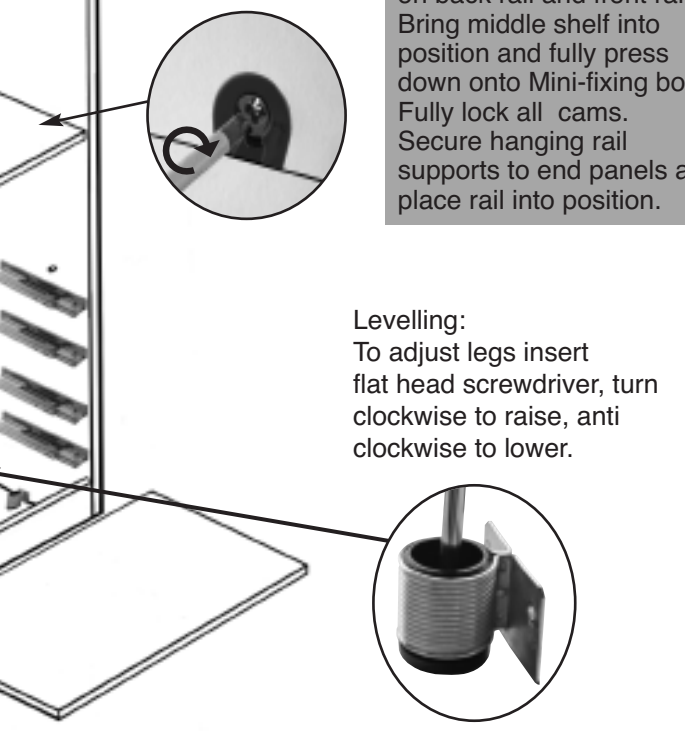




Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: All back rails and back rail lower are 90mm deep, the front rail is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.




Tap adjustable feet into gable end until flush and secure with screws.

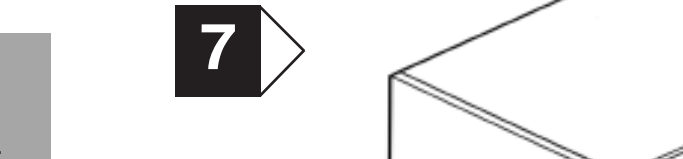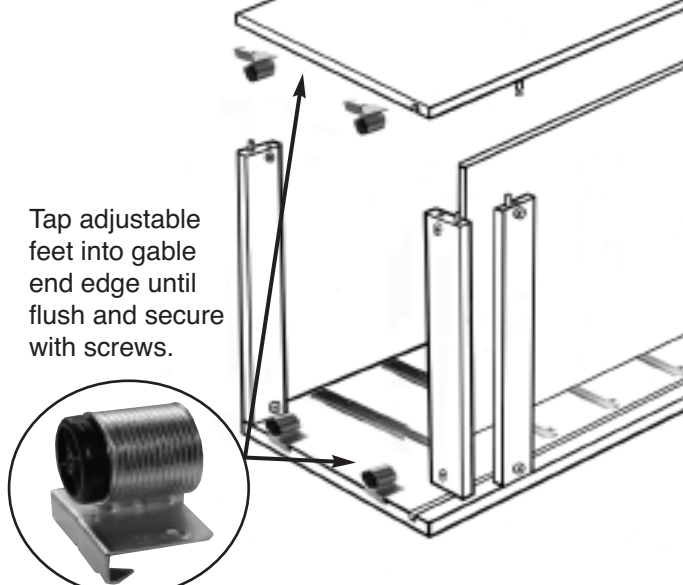



Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

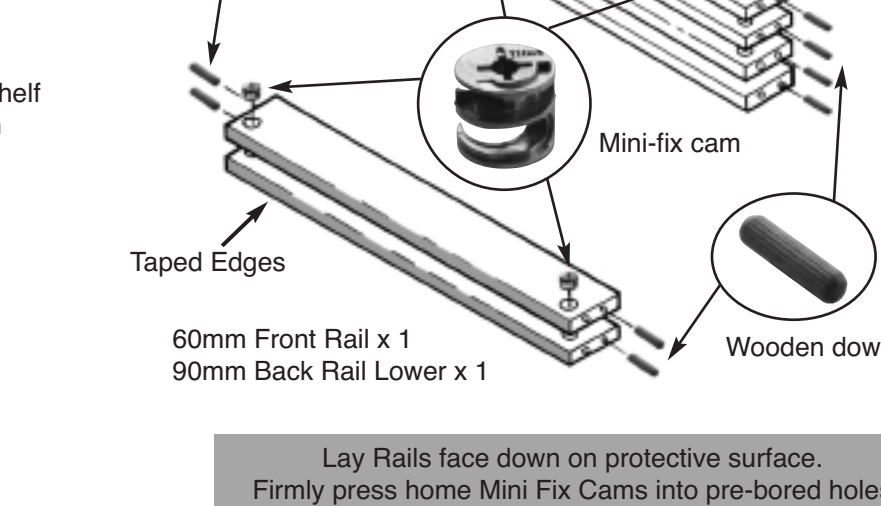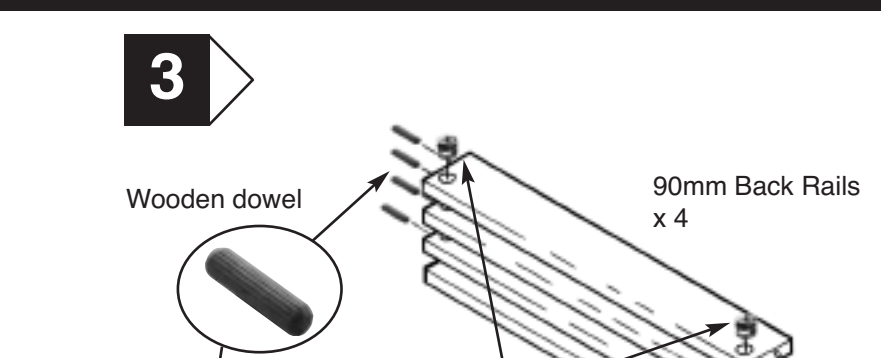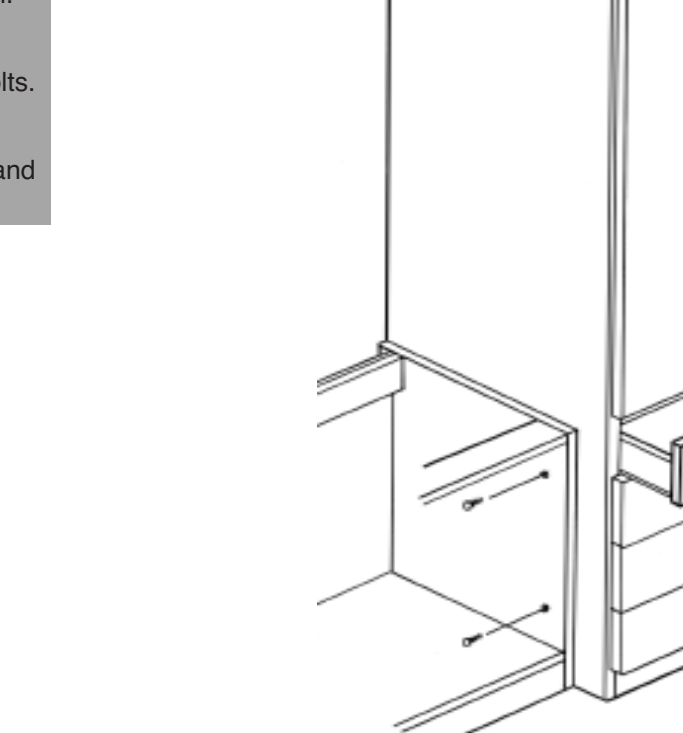


Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

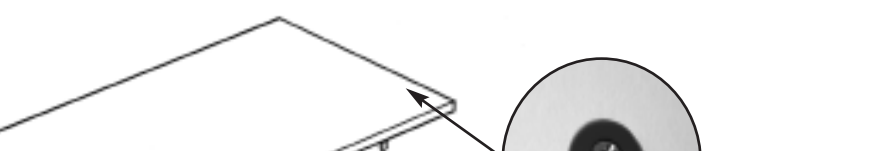

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

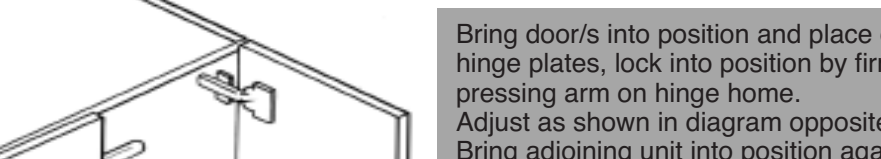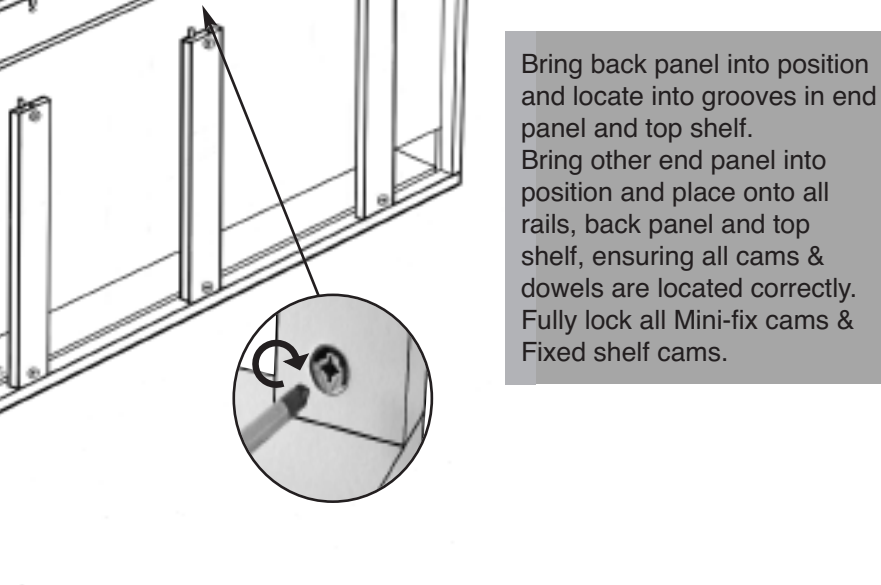


Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

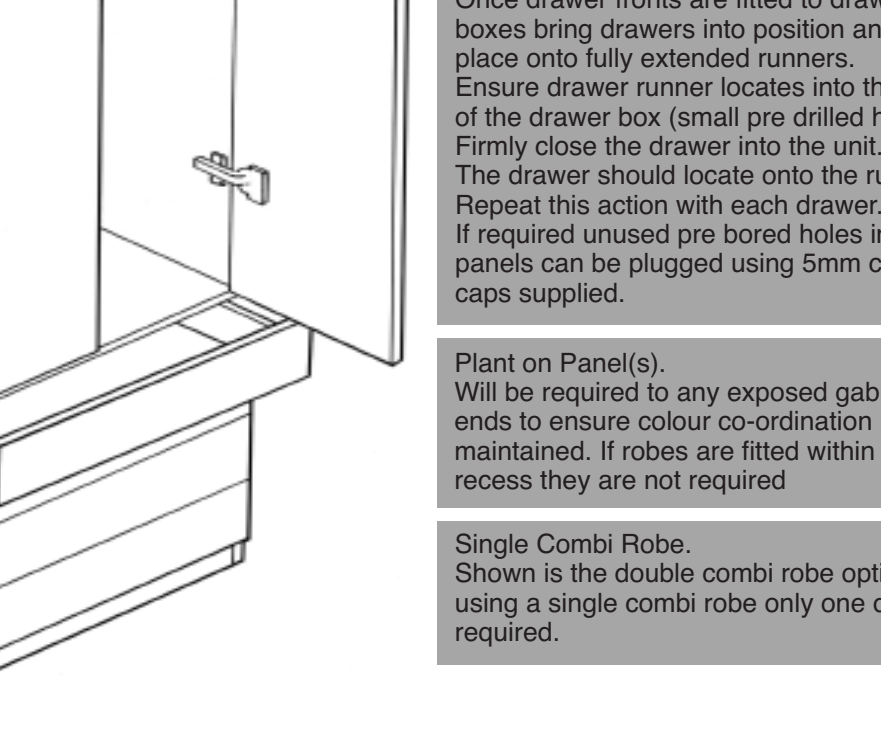


Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

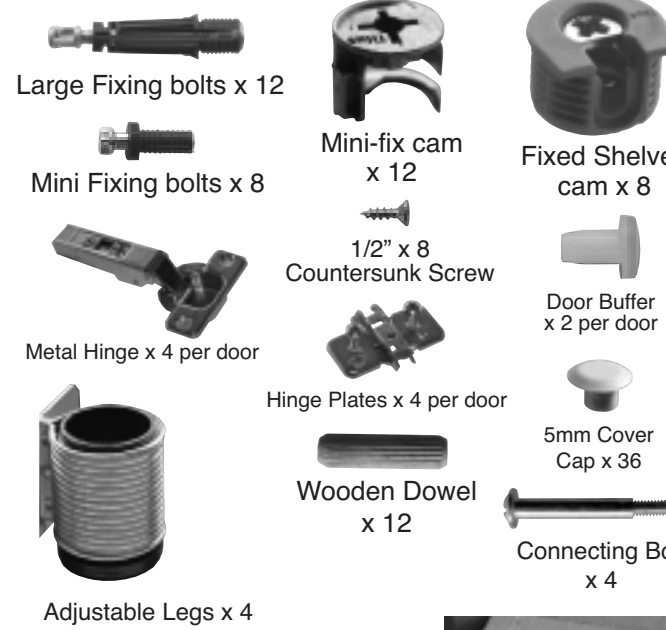


#### DOORS

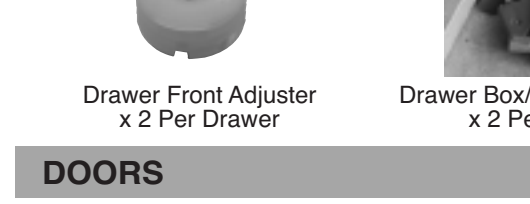

#### CLIP-ON HINGE ADJUSTMENT

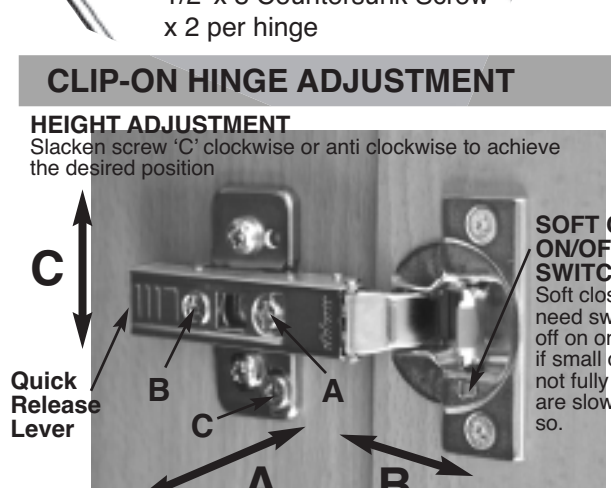

#### FIXING DRAWER FRONT TO DRAWER BOX

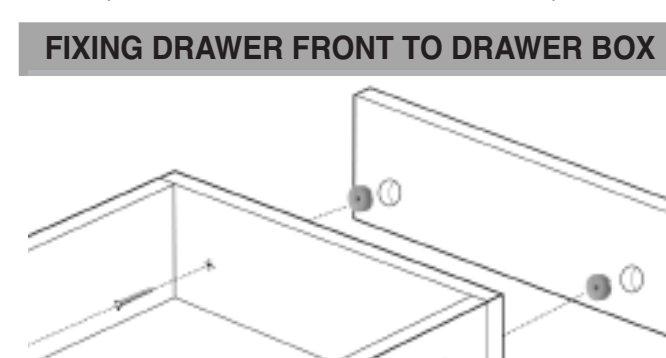

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

#### Robe Assembly - Upright Position


If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.

### HOLCOMBE BEDROOM FURNITURE

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.


#### GREY TEXTILE DRAWER SYSTEM

##### COMBI DOUBLE ROBE UNIT

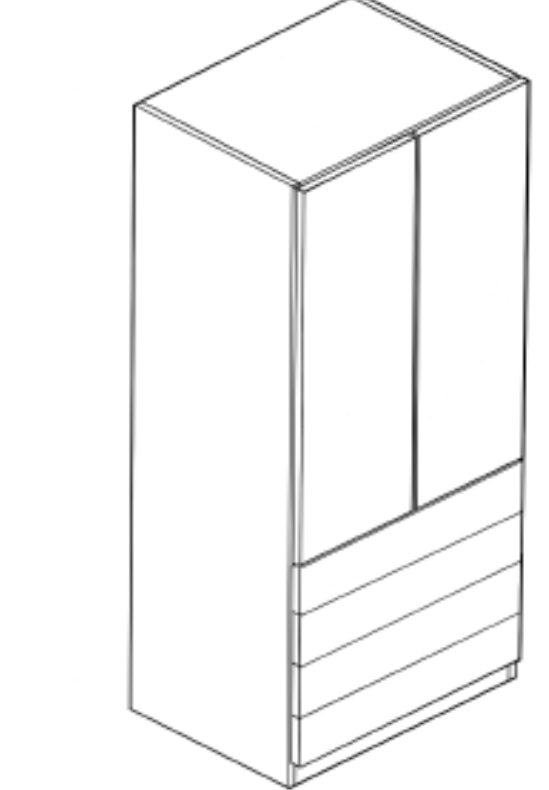


#### Hardware Fixing Positions

A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

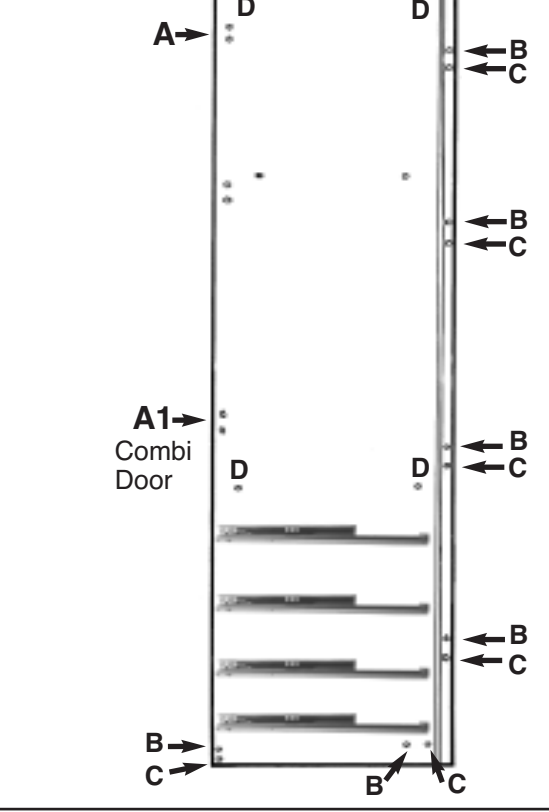


##### COMBI ROBE UNIT


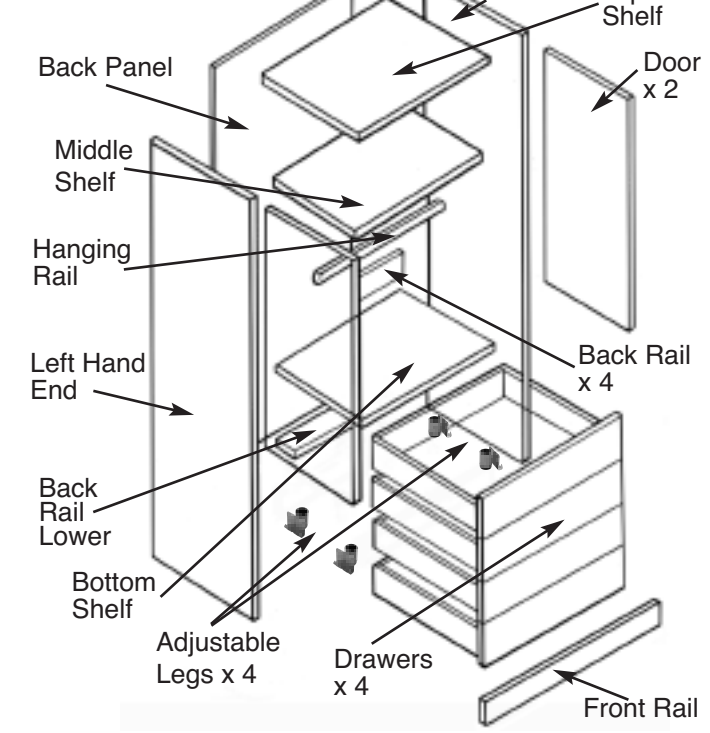


#### Hardware Fixing Positions



A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

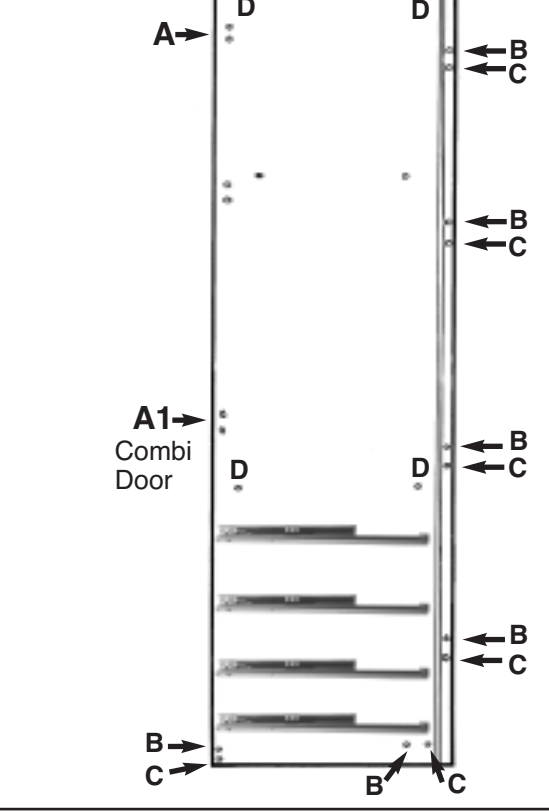



Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail. Bring middle shelf into position and fully press down onto Mini-fixing bolts. Fully lock all cams. Secure hanging rail supports to end panels and place rail into position.

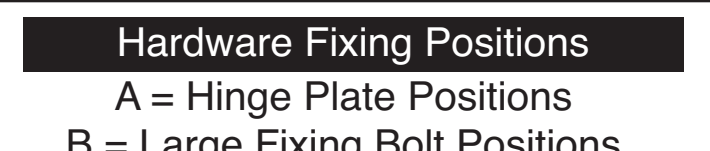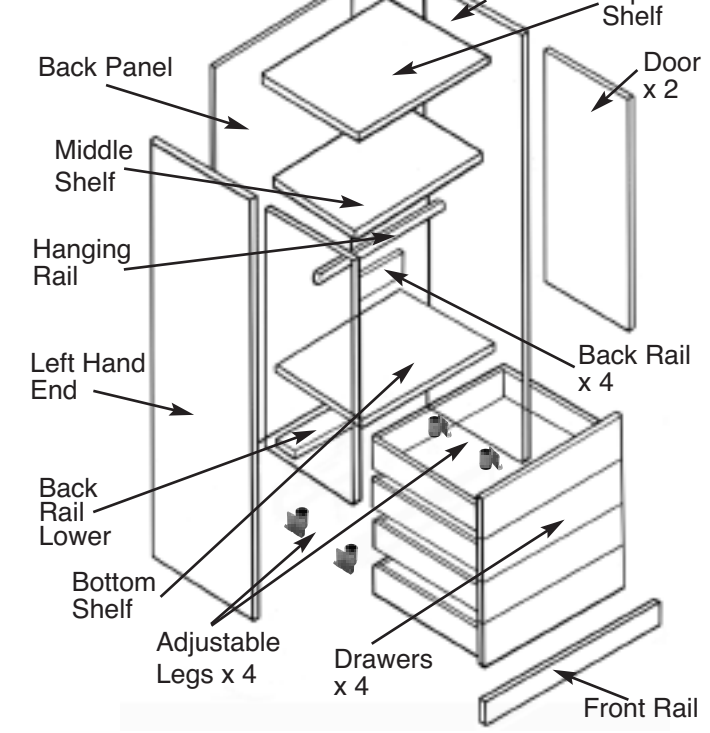



Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring top shelf into position and secure to end panel ensuring Fixed shelf cams are locked fully.

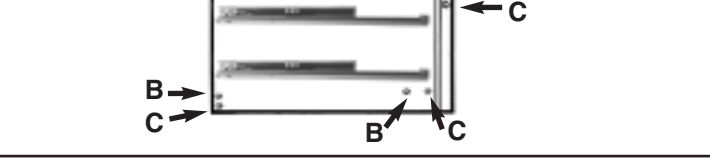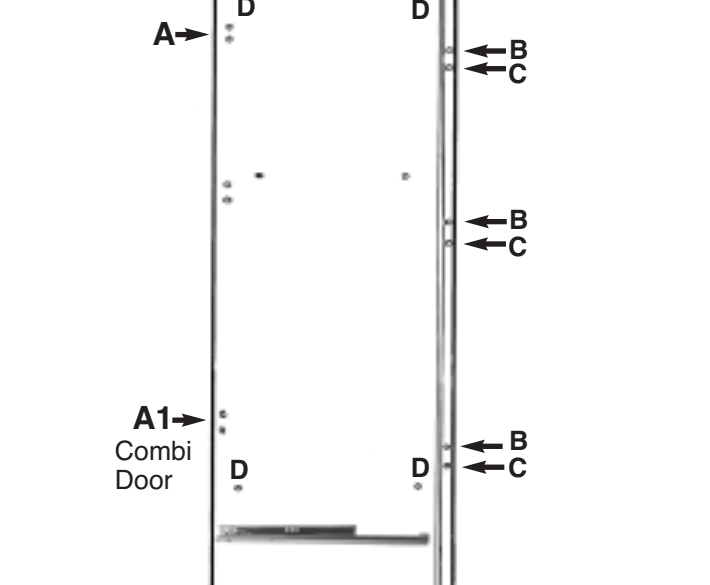



Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail. Bring middle shelf into position and fully press down onto Mini-fixing bolts. Fully lock all cams. Secure hanging rail supports to end panels and place rail into position.

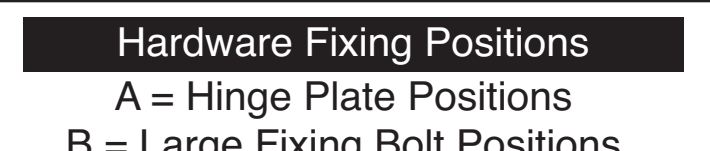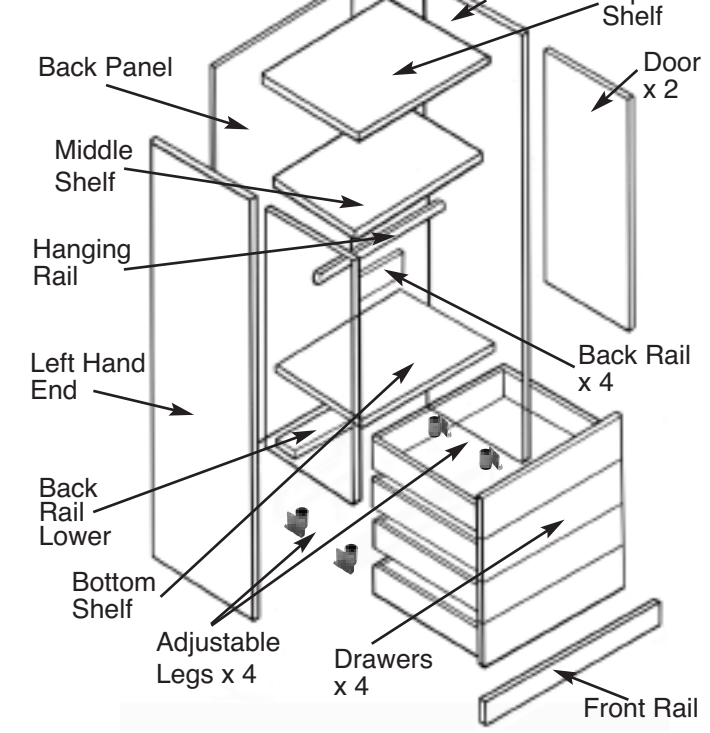



Tap adjustable feet into gable end until flush and secure with screws.

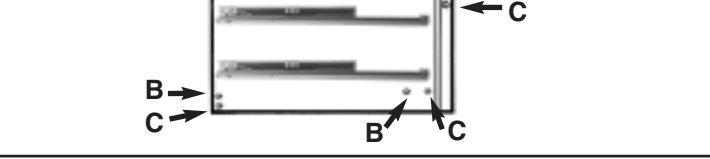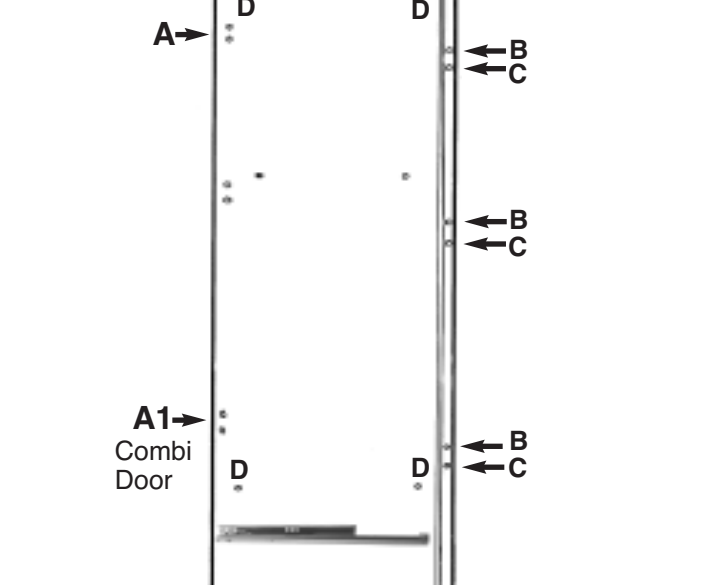


Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. Bring adjoining unit into position against blanking panel and secure.

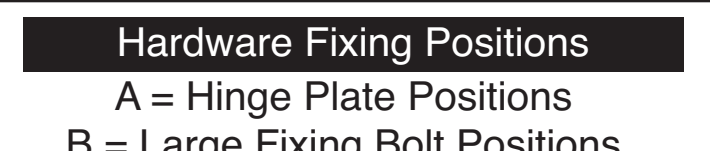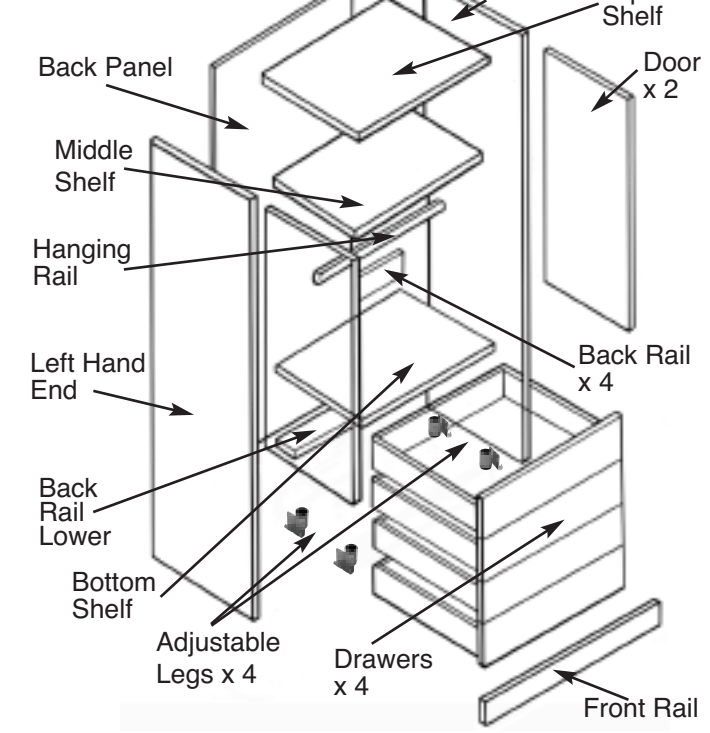


Bring back panel into position and locate into grooves in end panel and top shelf. Bring other end panel into position and place onto all rails, back panel and top shelf, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams & Fixed shelf cams.

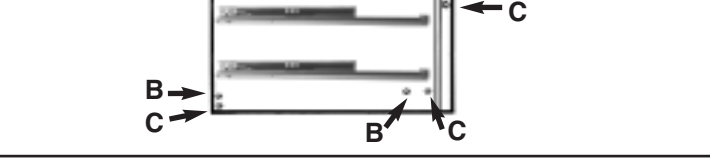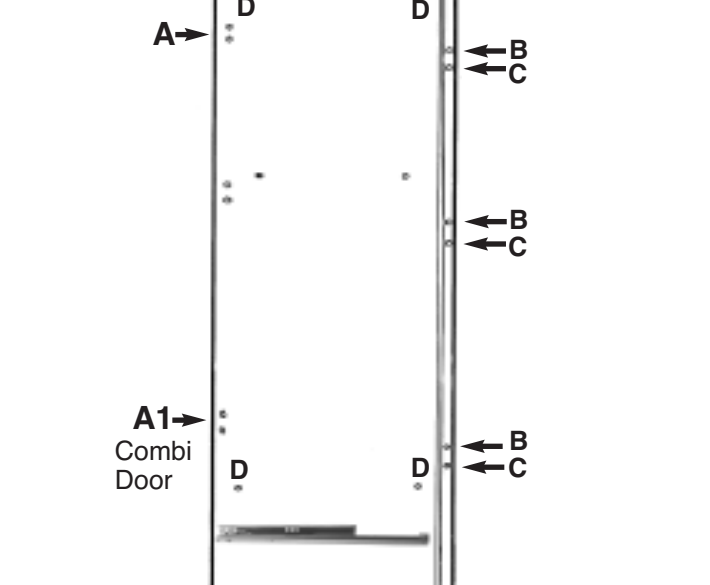


Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

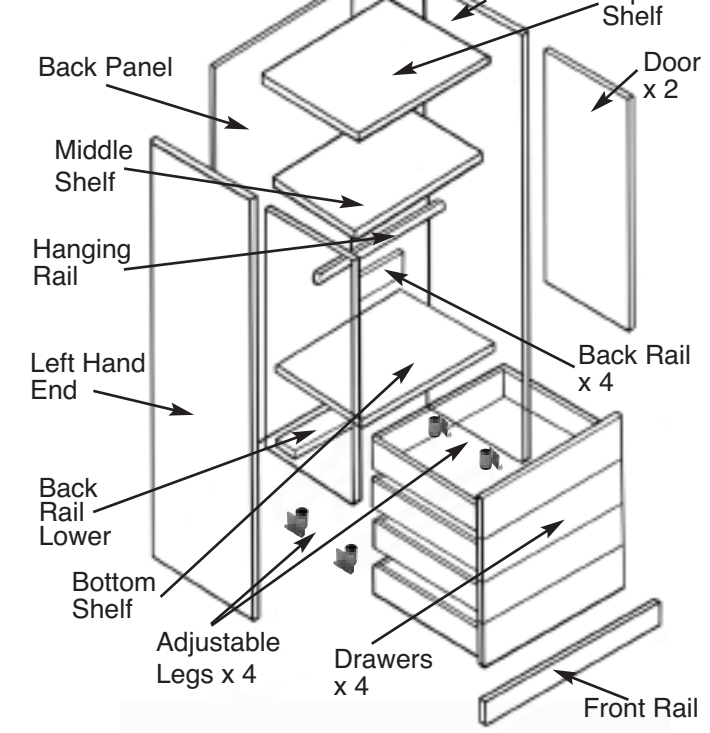


### COMBI ROBE UNIT. ASSEMBLY INSTRUCTIONS

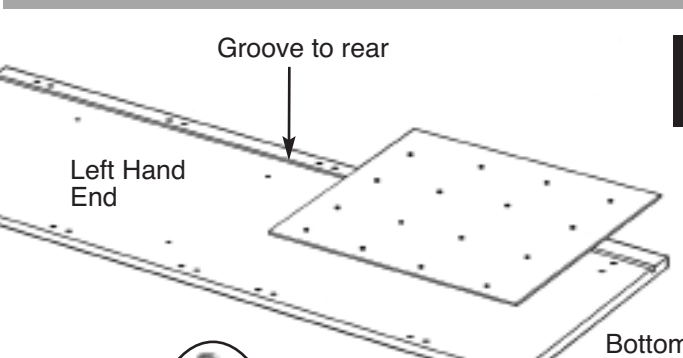


Due to multiple drawer configurations it is required for installer to mark drawer runner fixing positions in end panels with template supplied. Bring template into position on end panel ensuring template is flush with bottom & front of end panel.

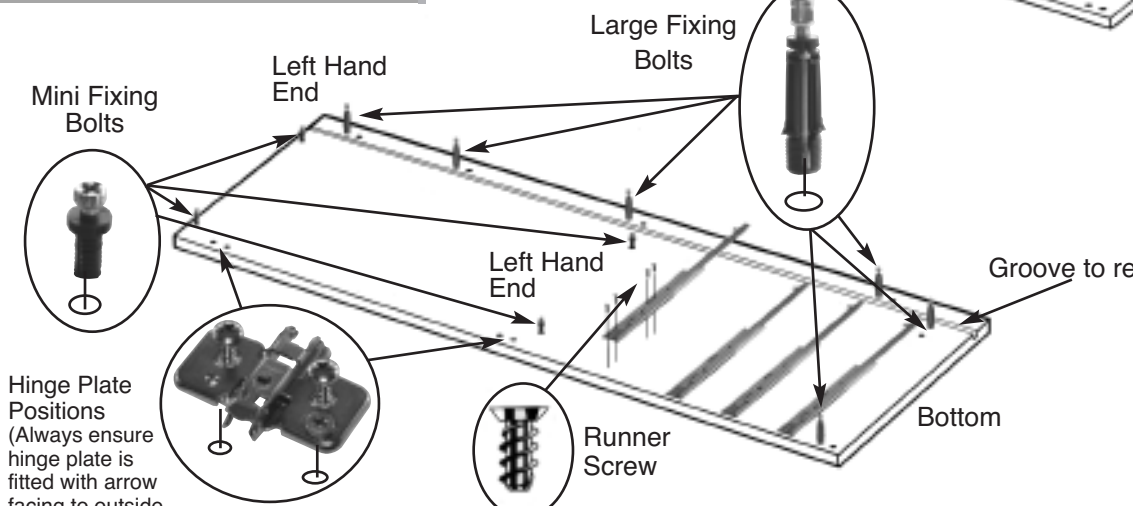




Lay end panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts, Mini Fixing Bolts, Hinge Plates & Drawer Runners into positions indicated. Repeat operation for Right Hand End Panel.

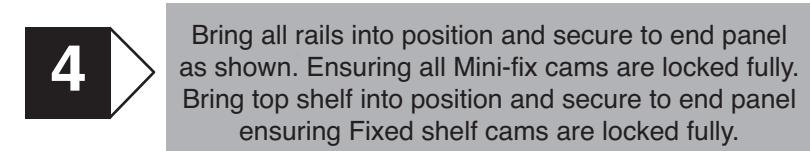


Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring top shelf into position and secure to end panel ensuring Fixed shelf cams are locked fully.

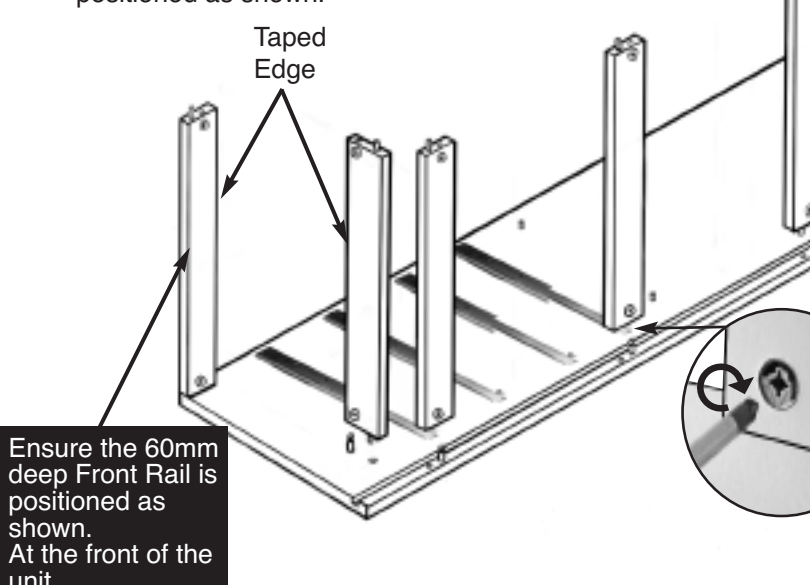


Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail. Bring middle shelf into position and fully press down onto Mini-fixing bolts. Fully lock all cams. Secure hanging rail supports to end panels and place rail into position.

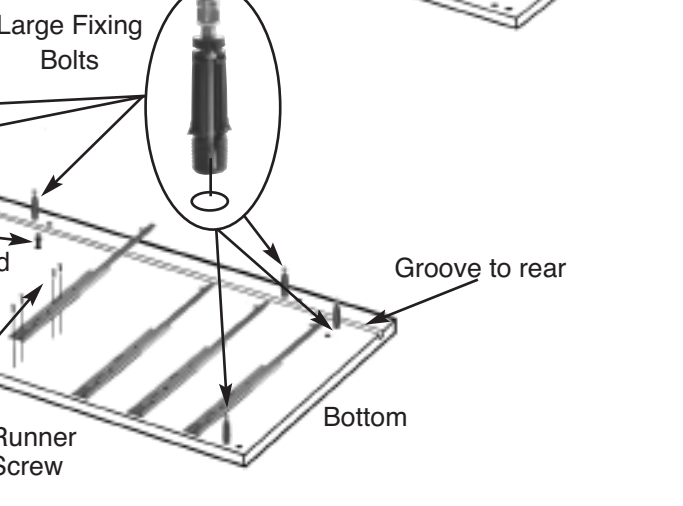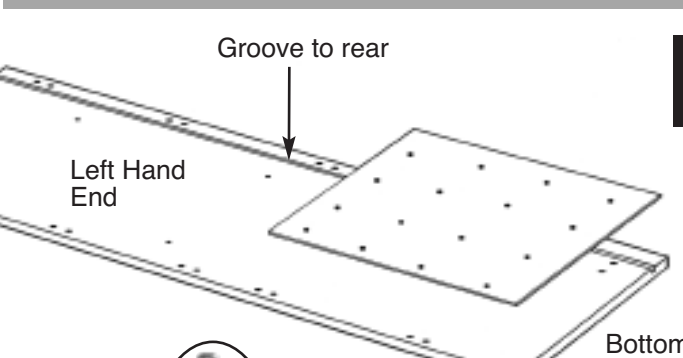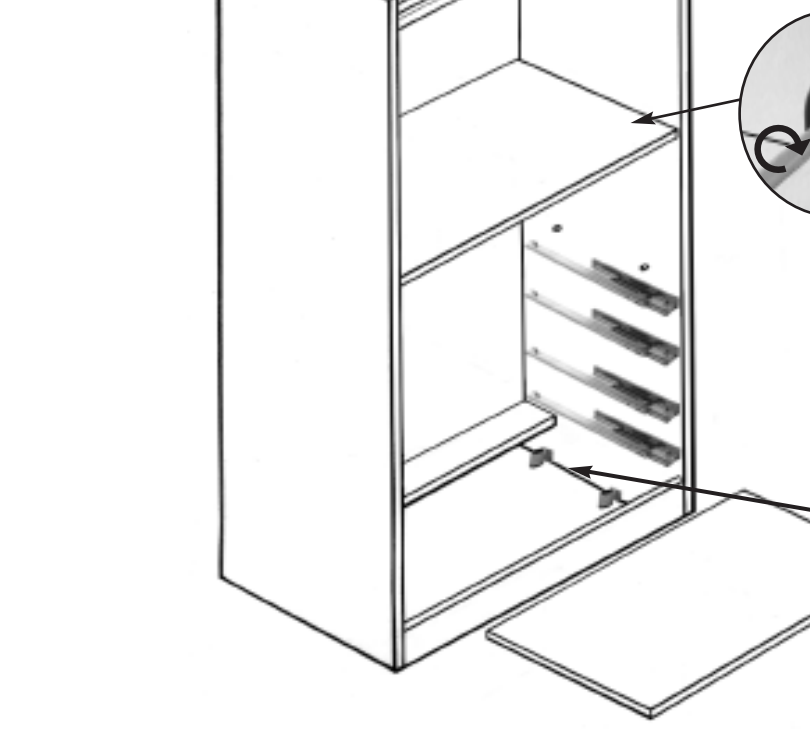



Lay Top Shelf & Middle Shelf face down on protective surface (with groove in Top Shelf facing upwards). Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: All back rails and back rail lower are 90mm deep, the front rail is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

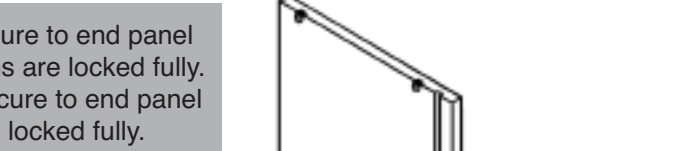


Tap adjustable feet into gable end until flush and secure with screws.

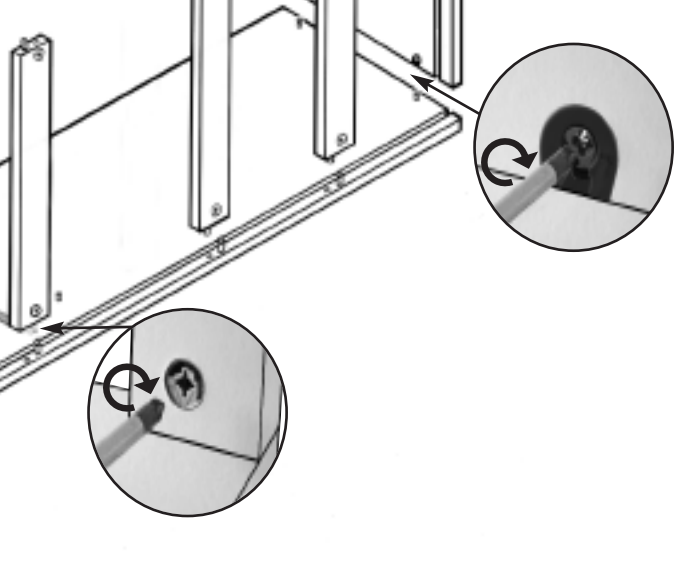



Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. Bring adjoining unit into position against blanking panel and secure.

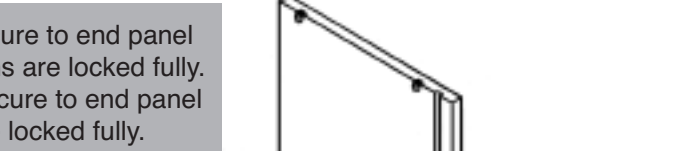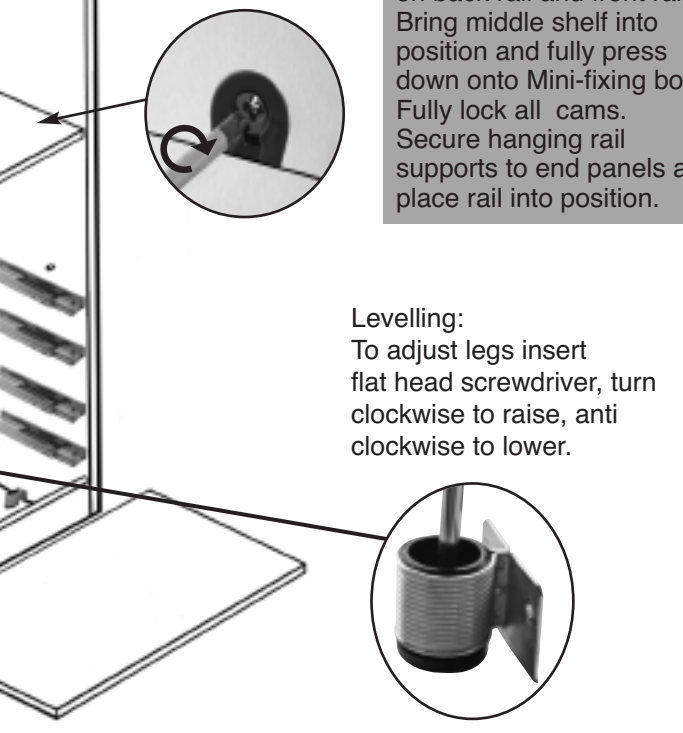


Bring back panel into position and locate into grooves in end panel and top shelf. Bring other end panel into position and place onto all rails, back panel and top shelf, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams & Fixed shelf cams.

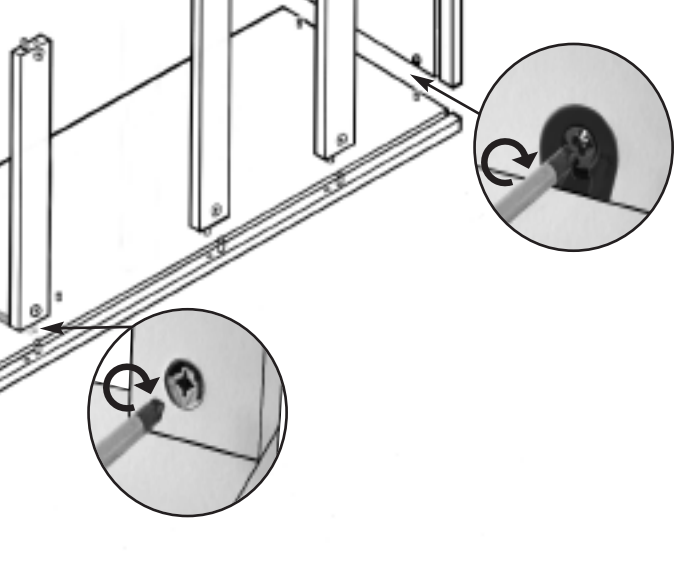



Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

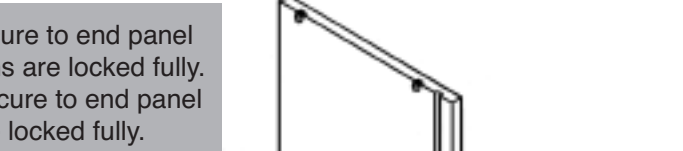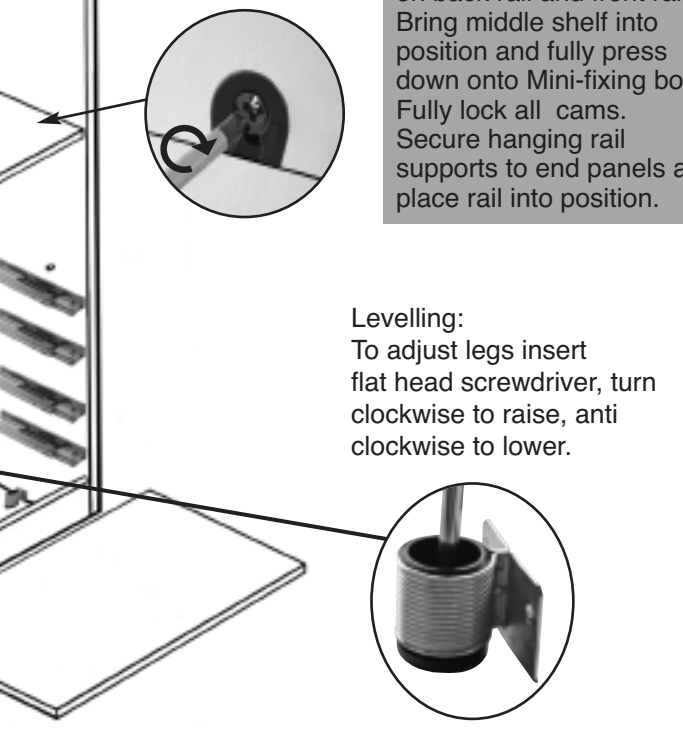


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

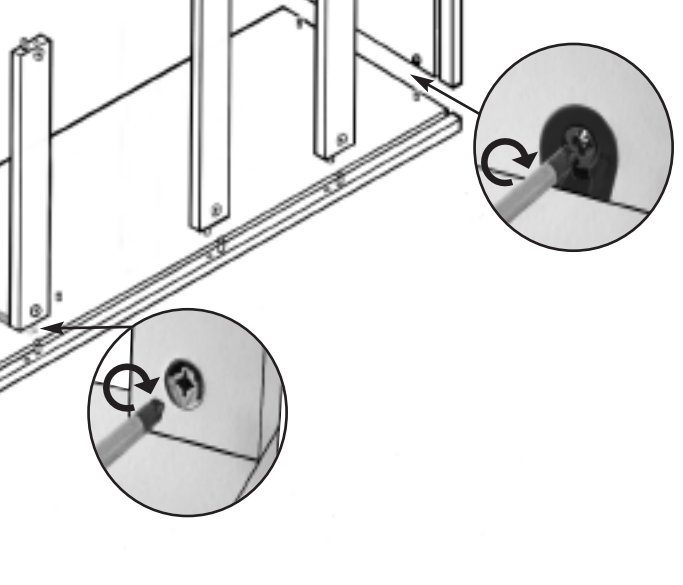



Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

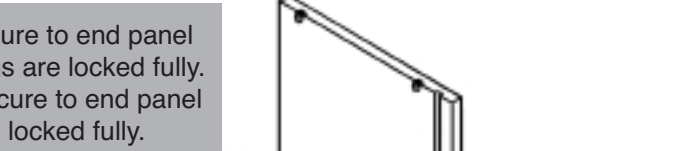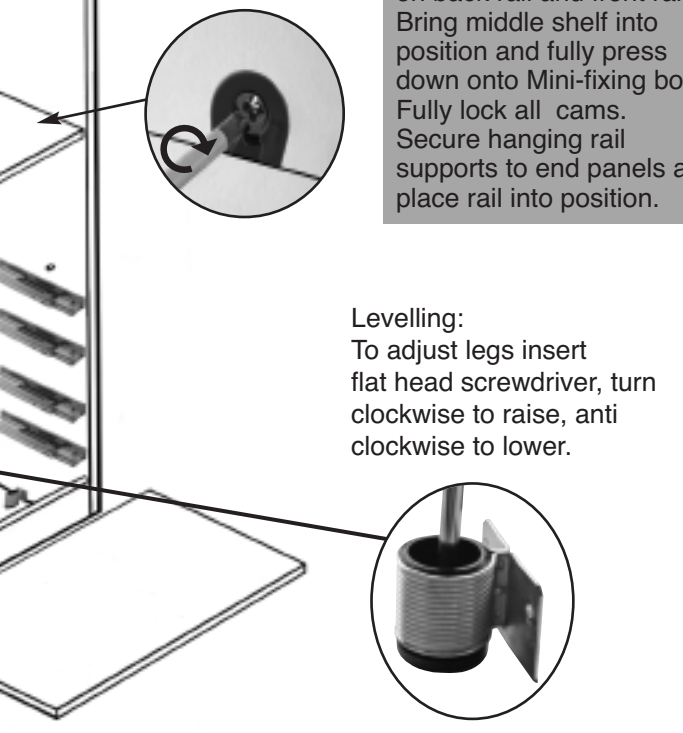


It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

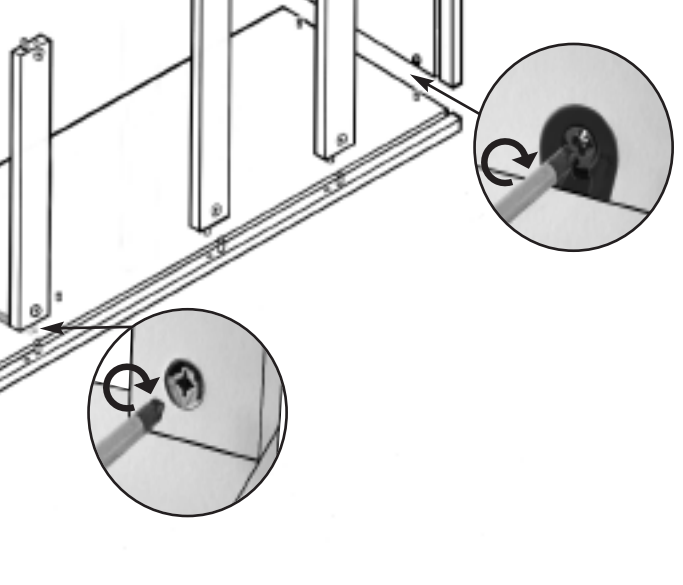



Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

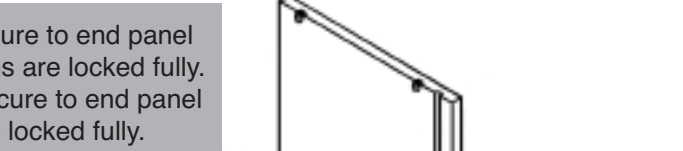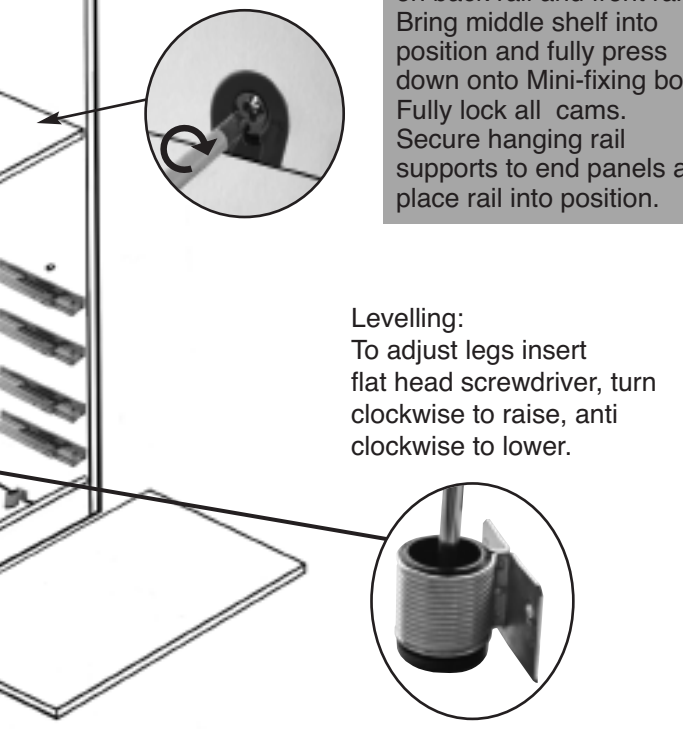


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

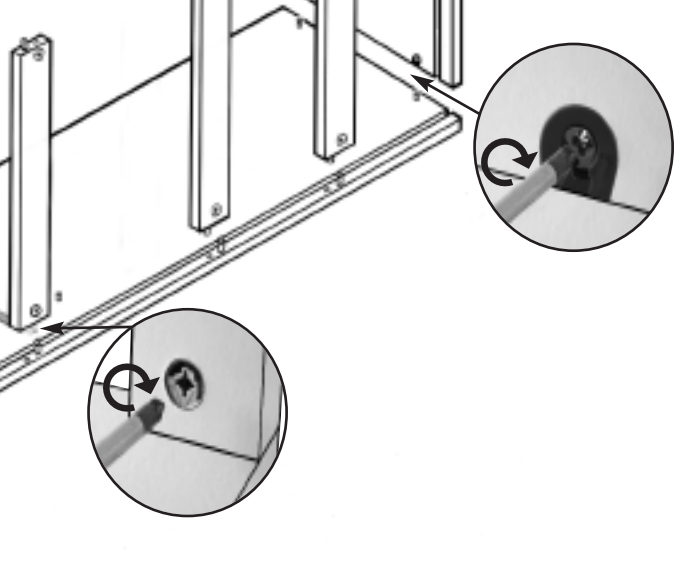



Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

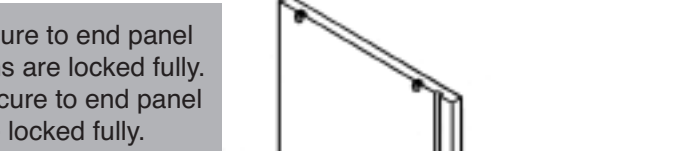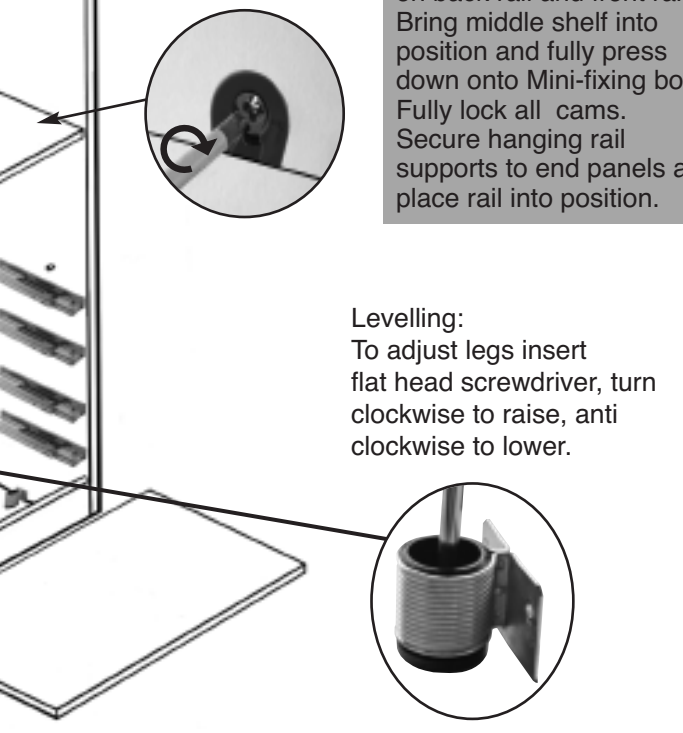


It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

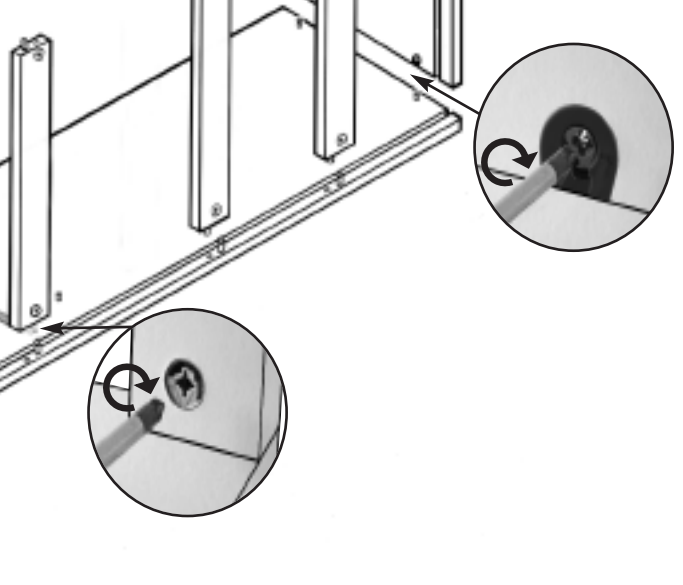



Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

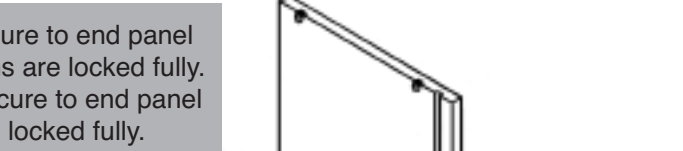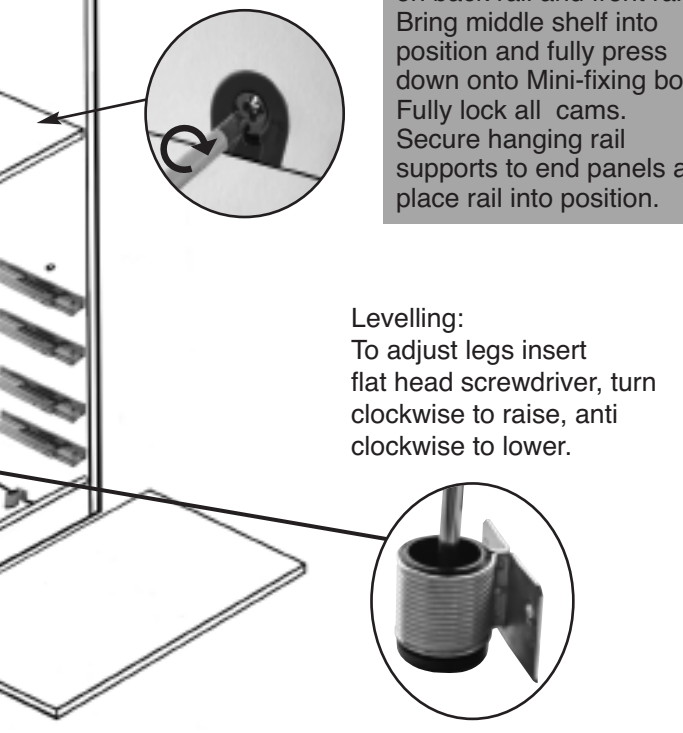


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

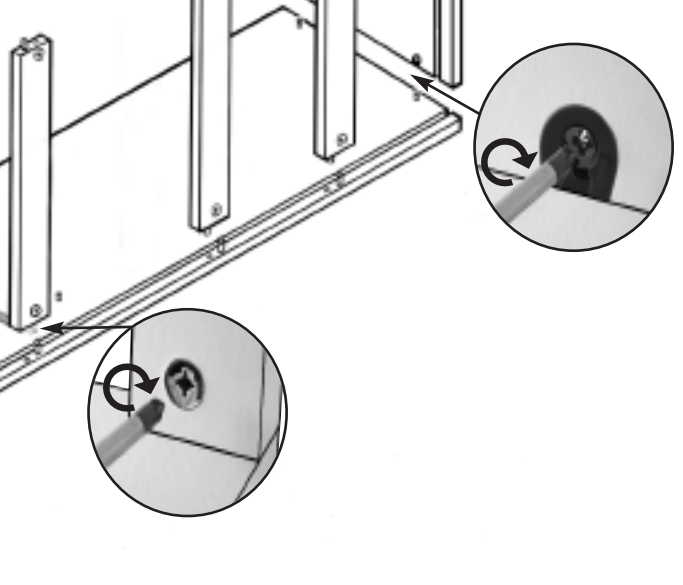



Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

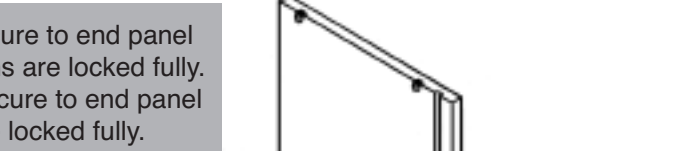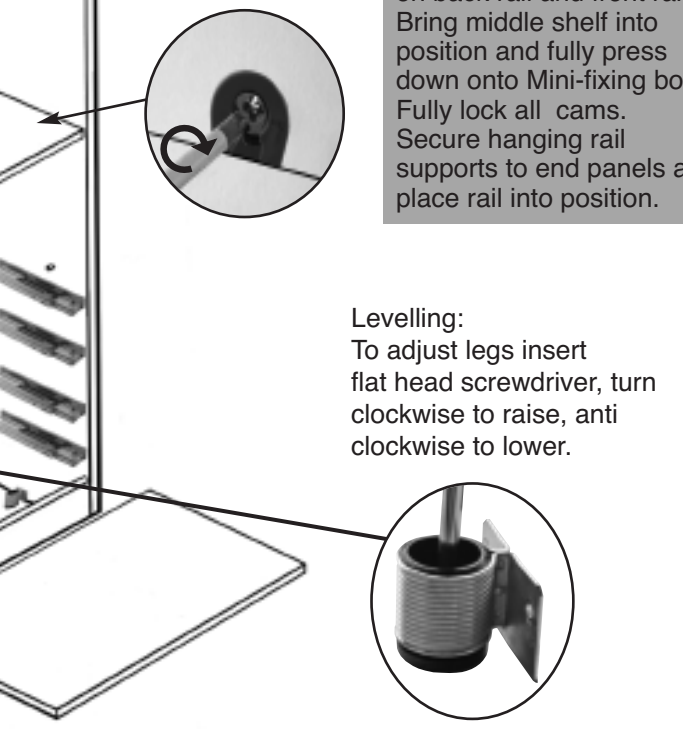


It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

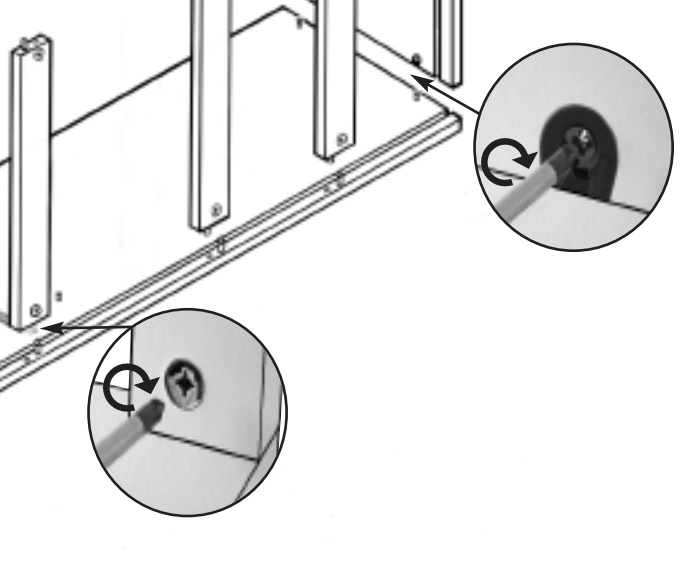



Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

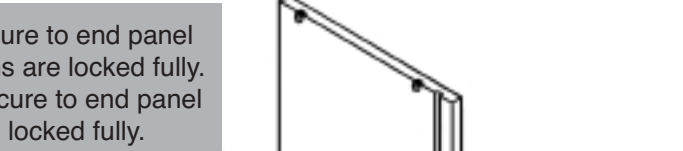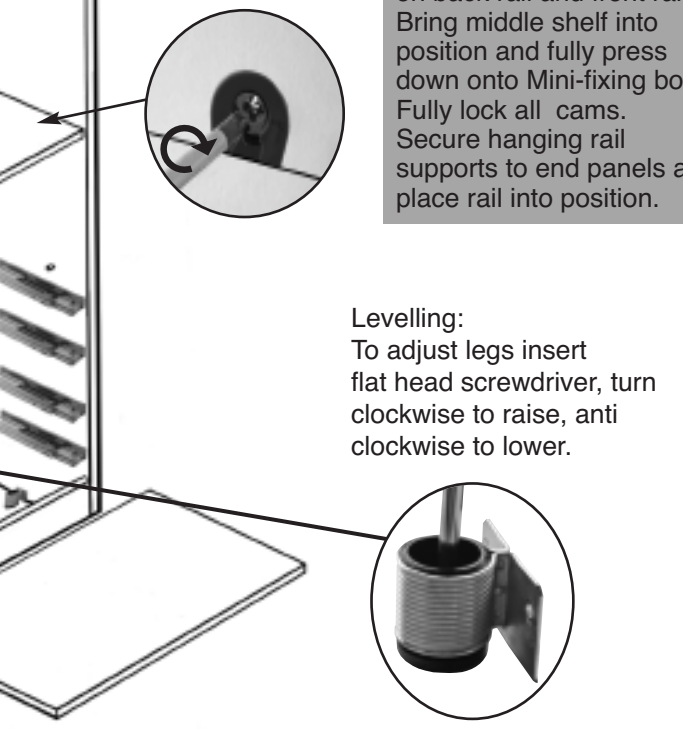


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

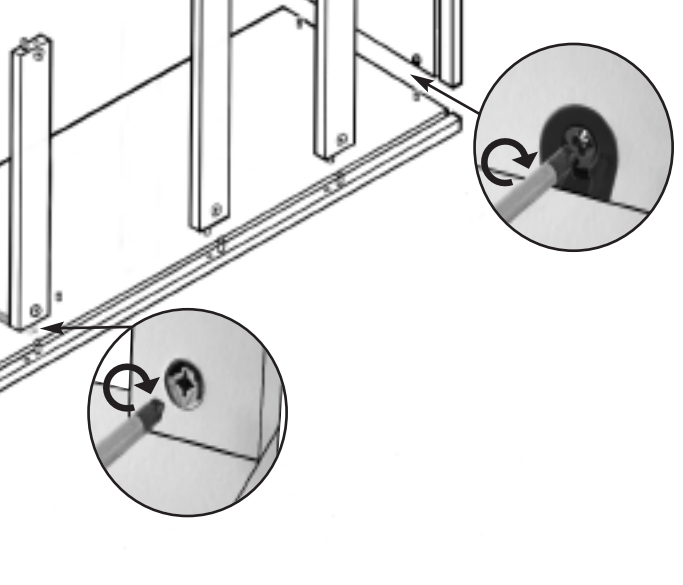



Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

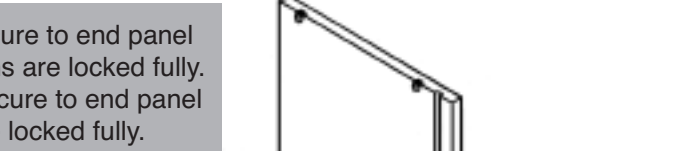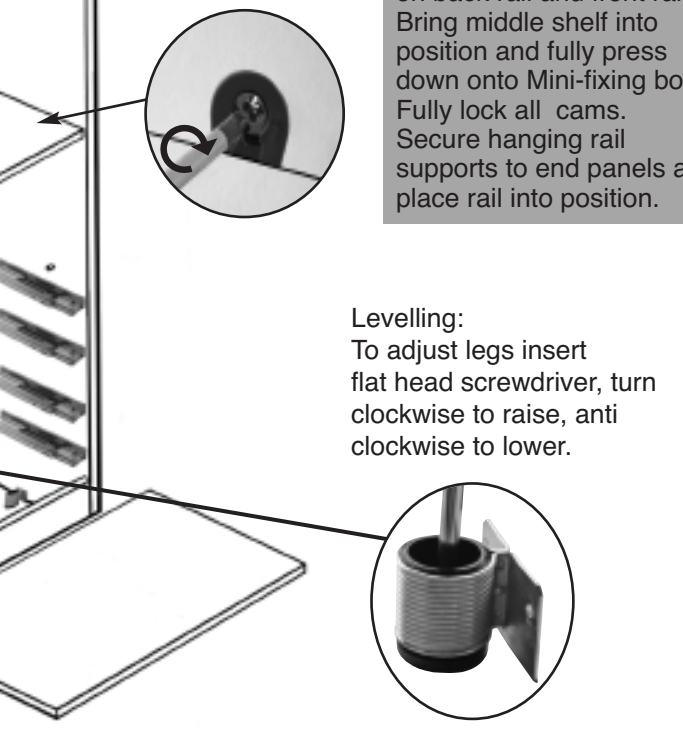


It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

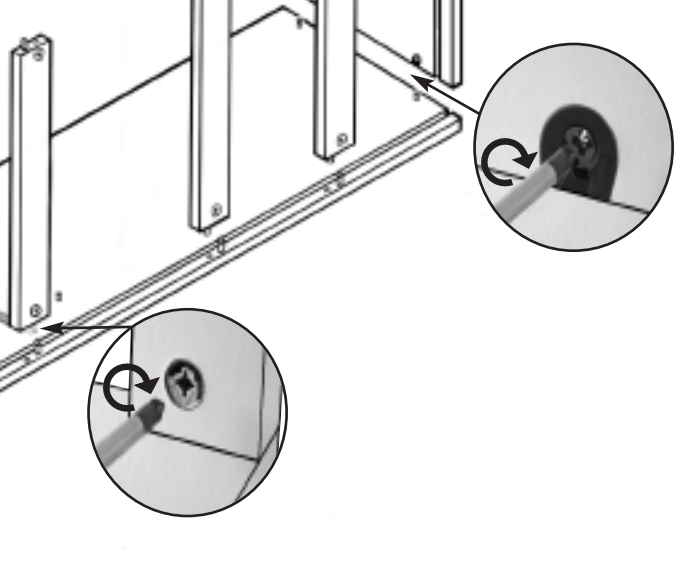



Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

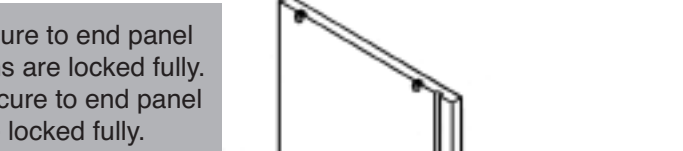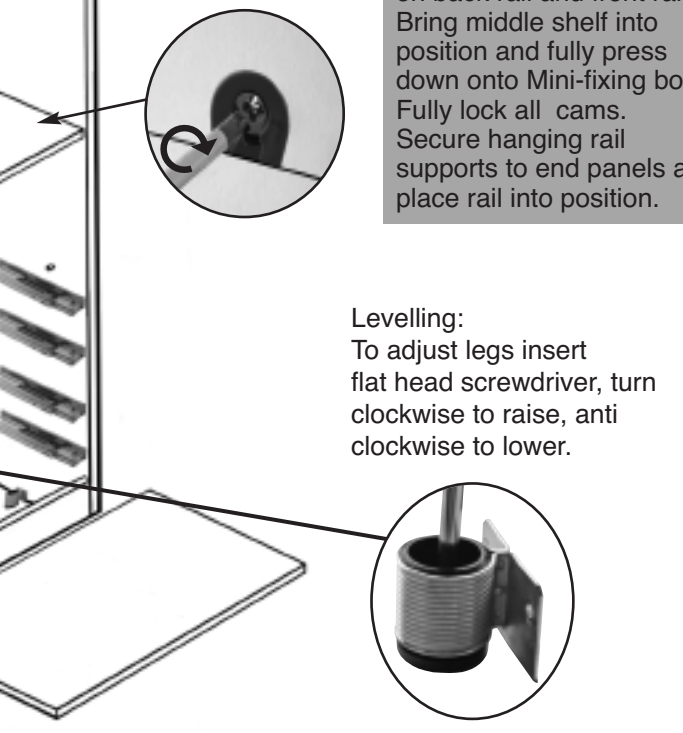


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

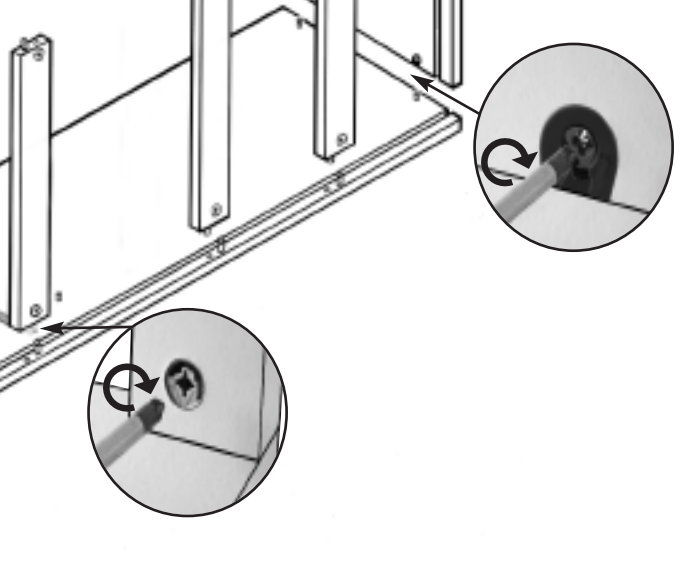



Single Combi Robe. Shown is the double combi robe option, if using a single combi robe only one door is required.

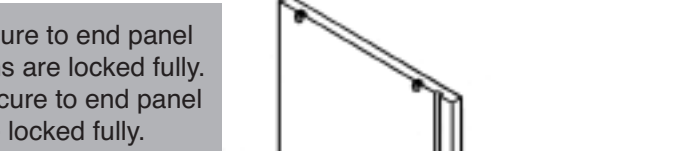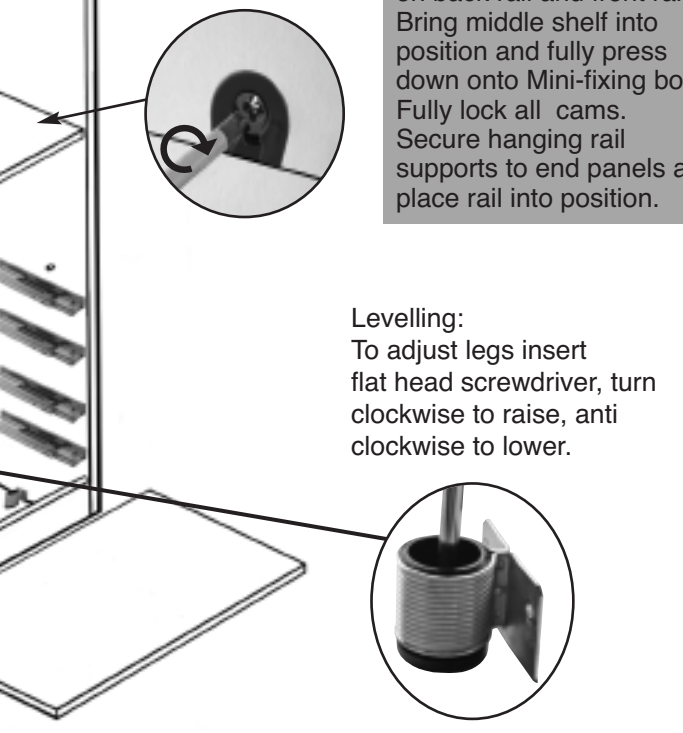


It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

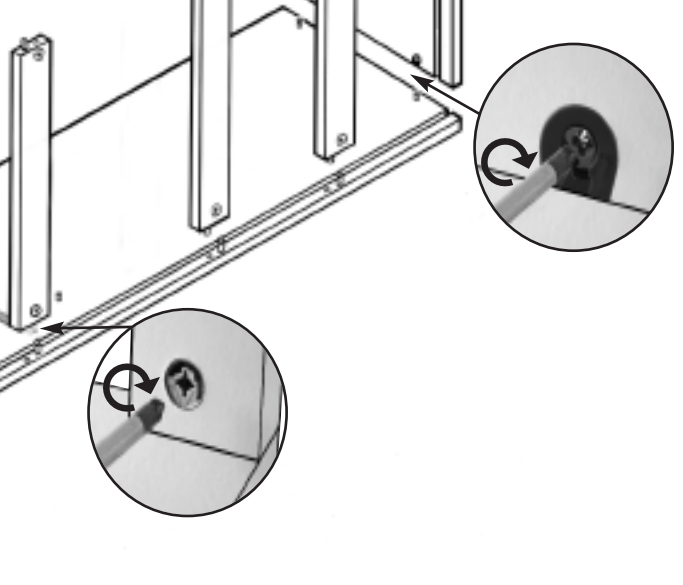

Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

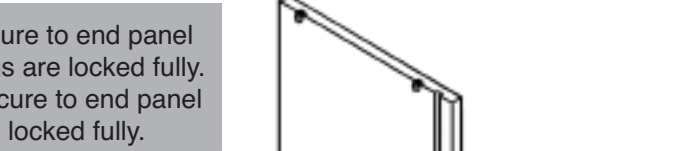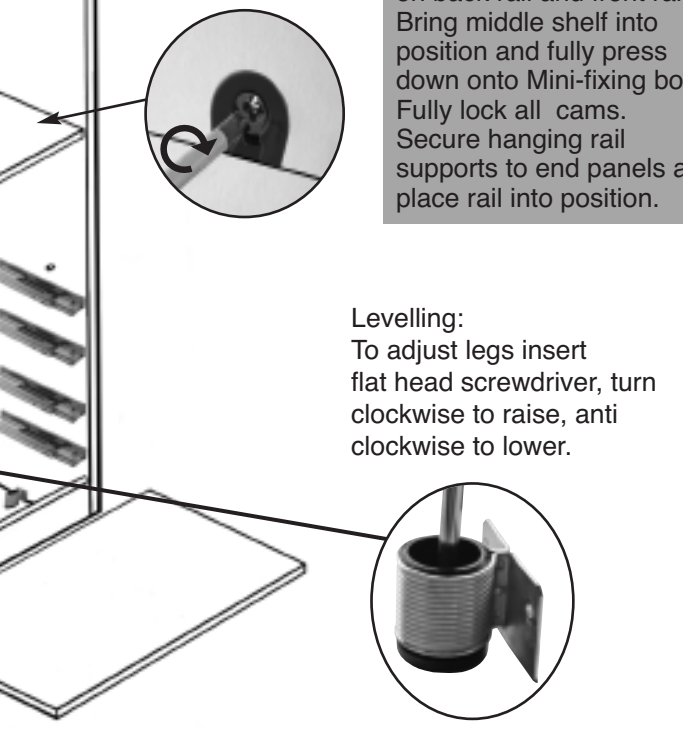

Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

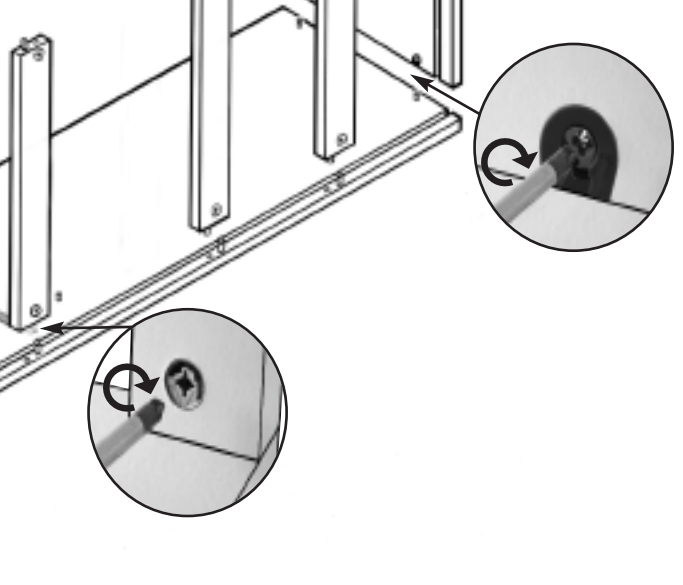



**WARNING!** Due to the size and weight of this unit we recommend that two people are used for the assembly and installation.

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


**CONTENTS CHECK LIST**



**DOORS**



**CLIP-ON HINGE ADJUSTMENT**

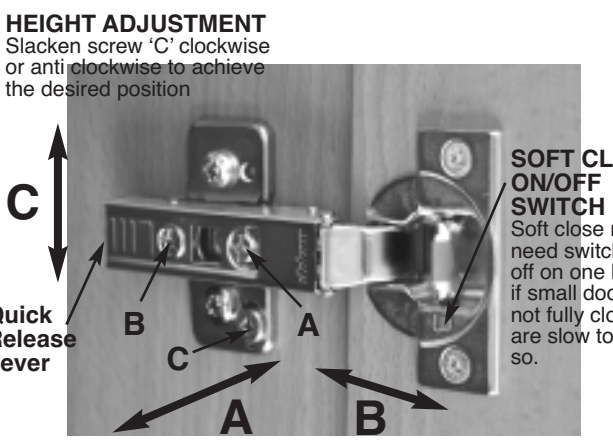

**Adjustable Leg Adjustment**




It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

**HOLCOMBE BEDROOM FURNITURE**


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

**DIAGONAL CORNER ROBE UNIT**

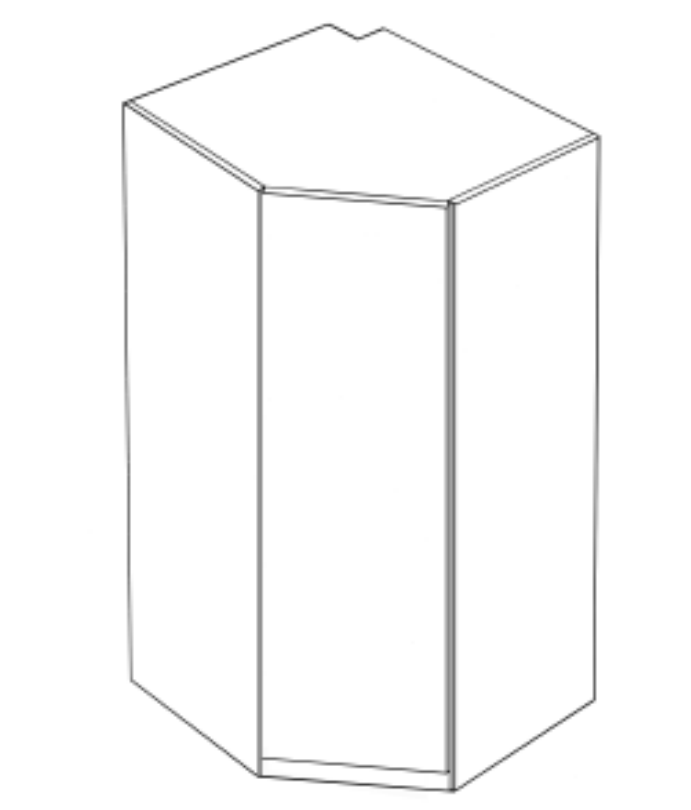


**Hardware Fixing Positions**


A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

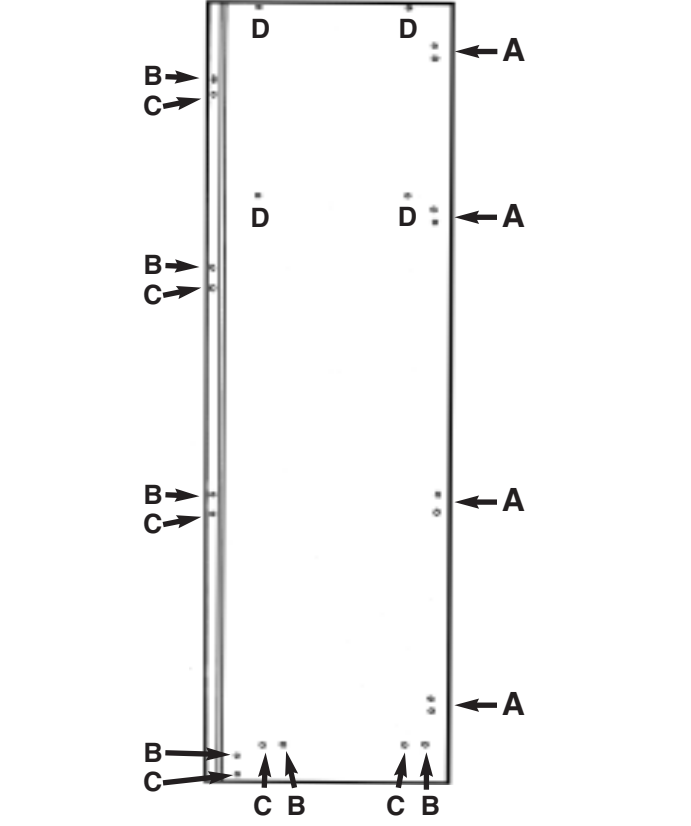



**DIAGONAL CORNER ROBE UNIT**

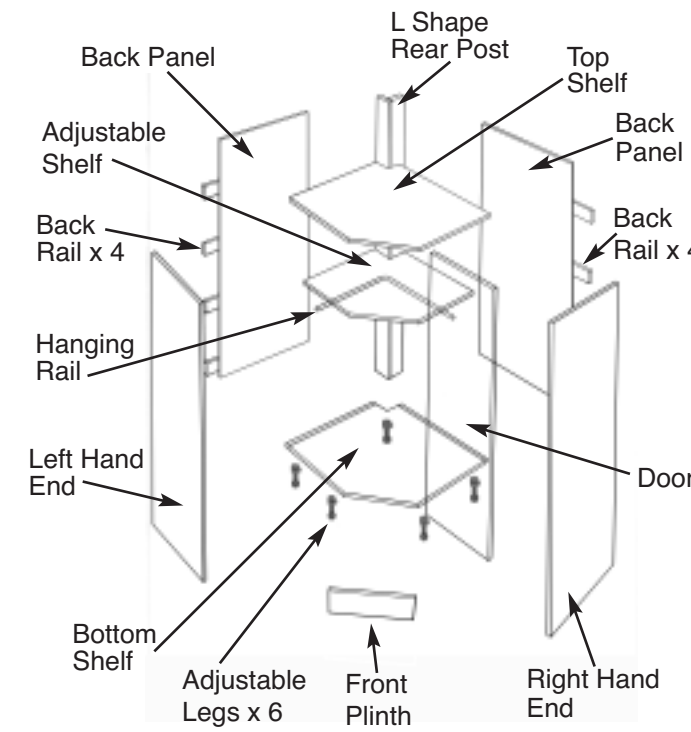


**DIAGONAL CORNER ROBE UNIT**

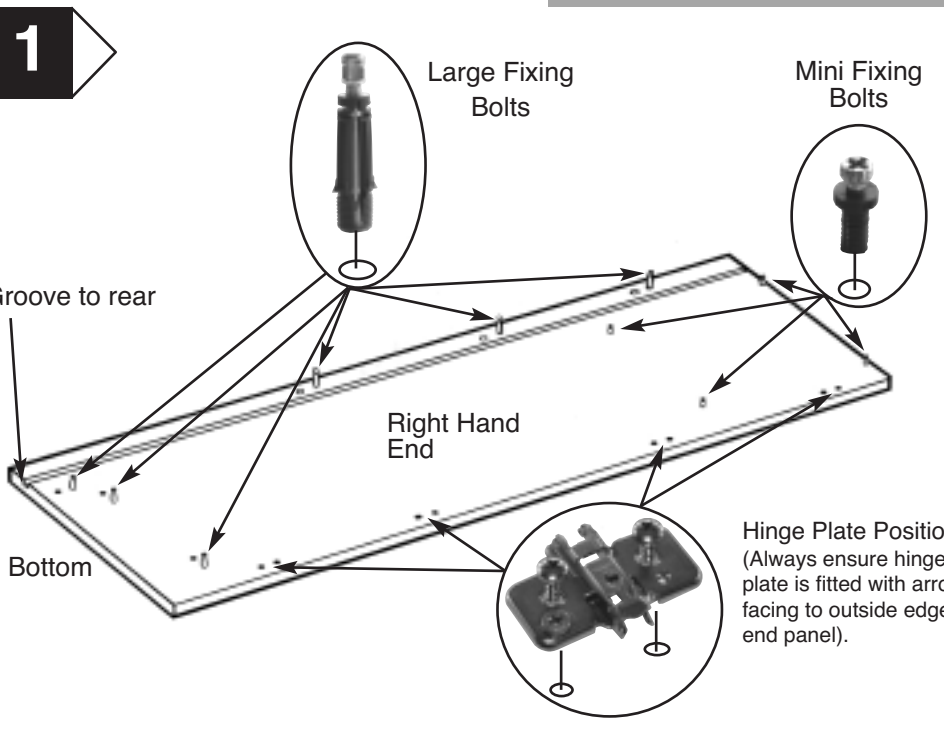





Lay end panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts, Mini Fix Bolts & Hinge Plates into positions indicated. Repeat operation for Left Hand End Panel.

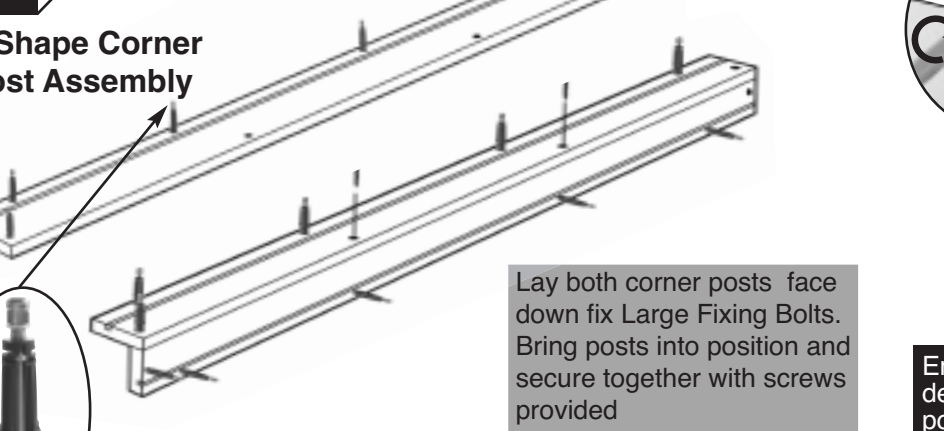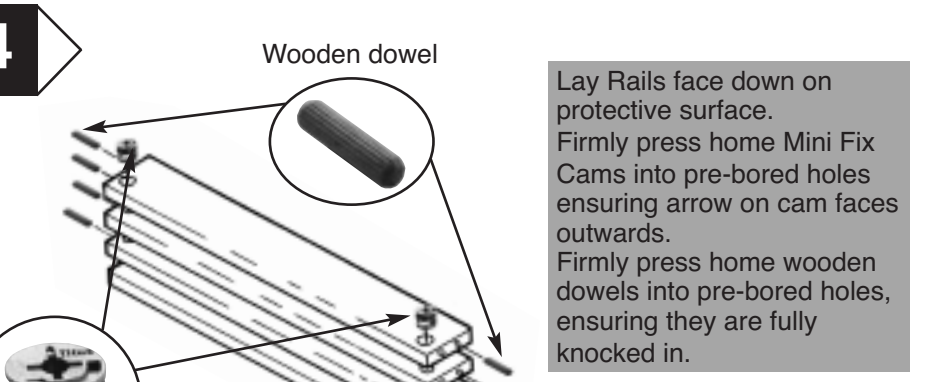


**DIAGONAL CORNER ROBE UNIT**

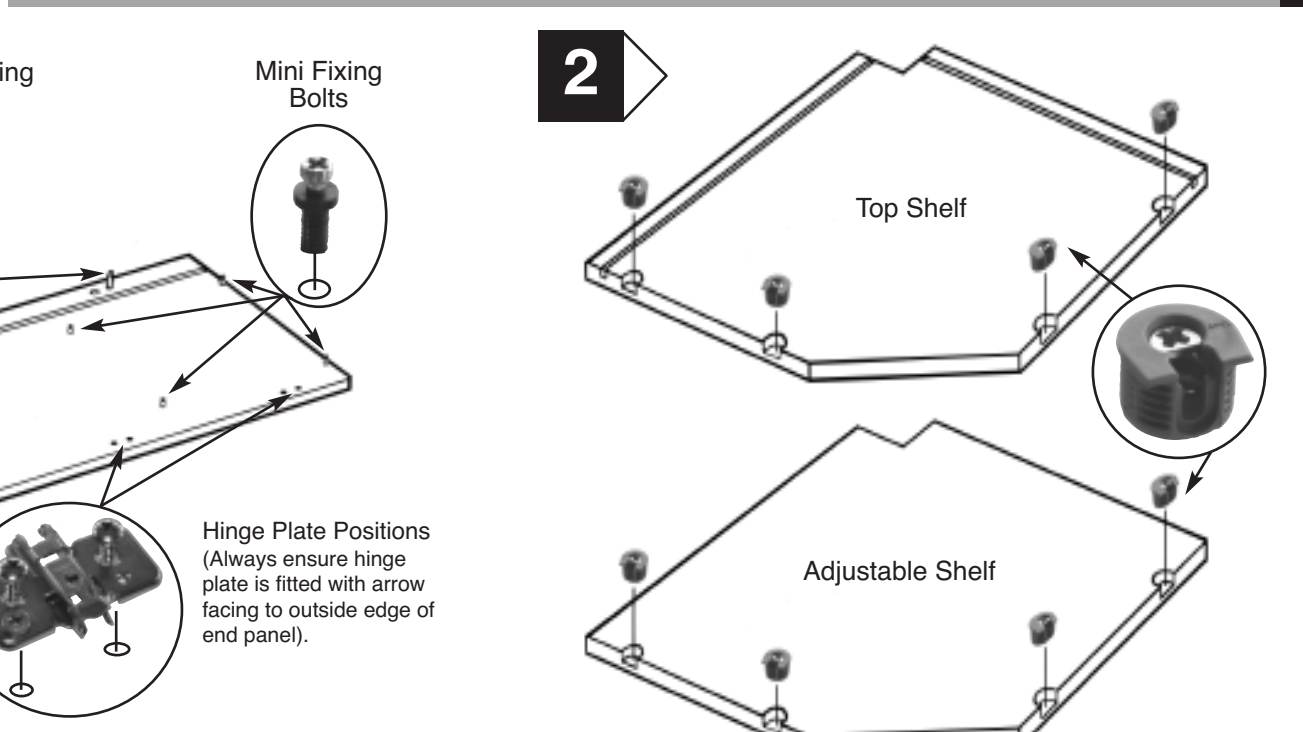




Lay Top Shelf & Adjustable Shelf face down on protective surface (with groove in Top Shelf facing upwards). Firmly press home Fixed Shelf Cams into pre-bored holes ensuring opening in cams face outwards. As an option additional adjustable shelves can be purchased to increase storage capacity. Assembly & installation is as shown in this instruction.

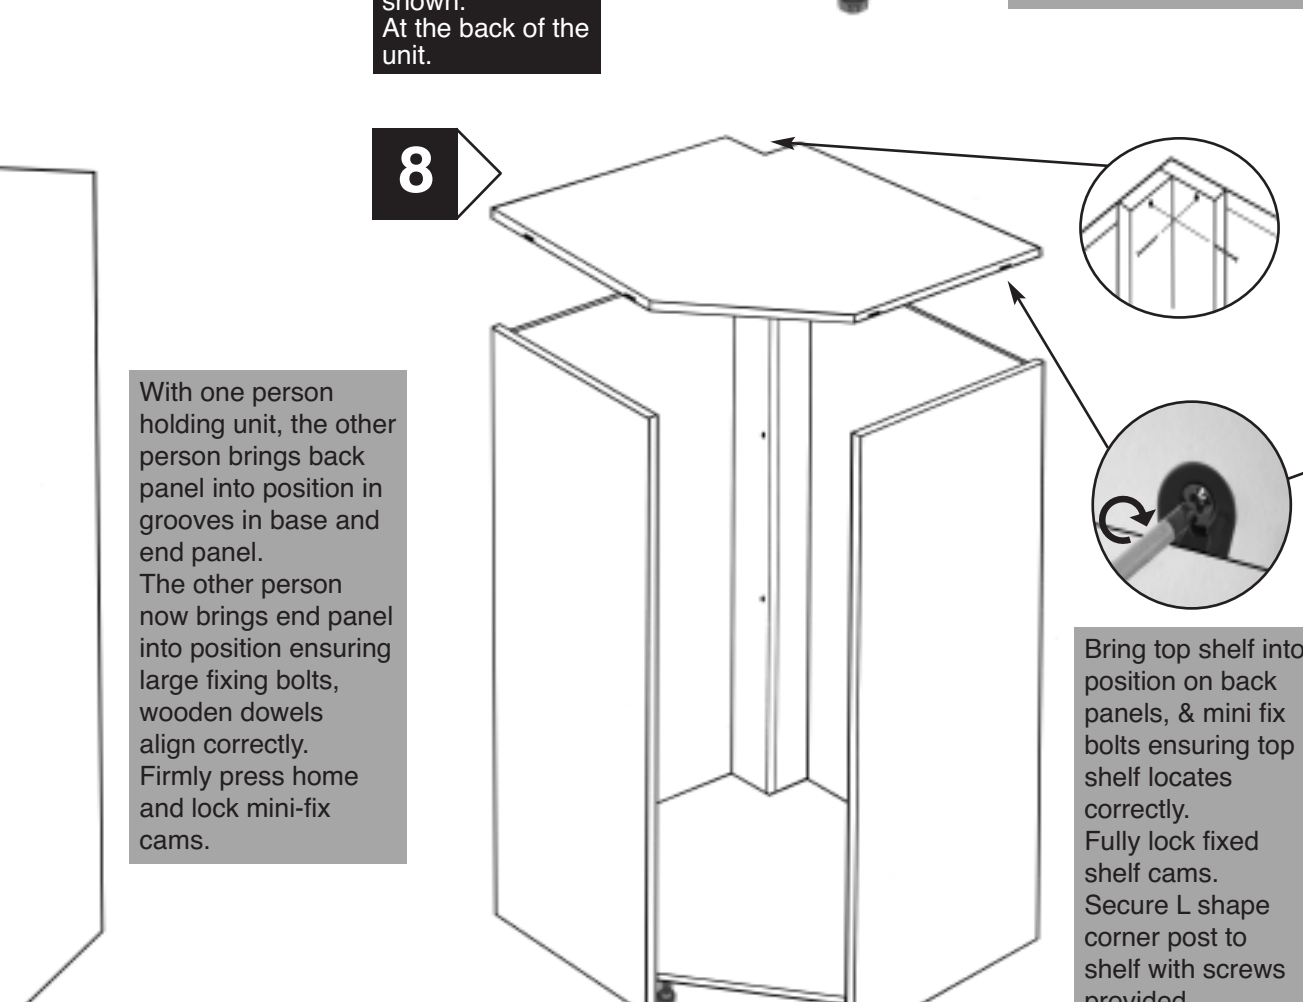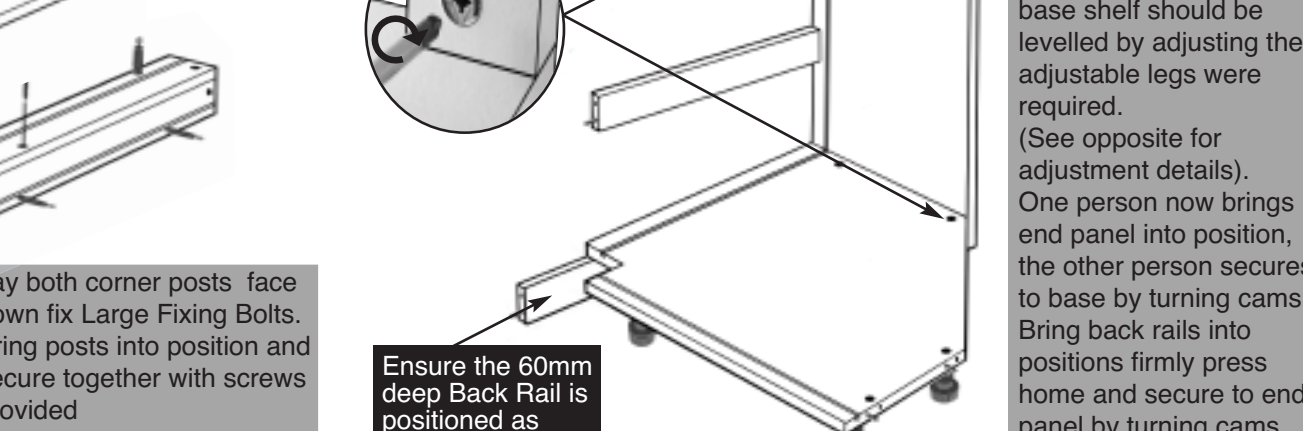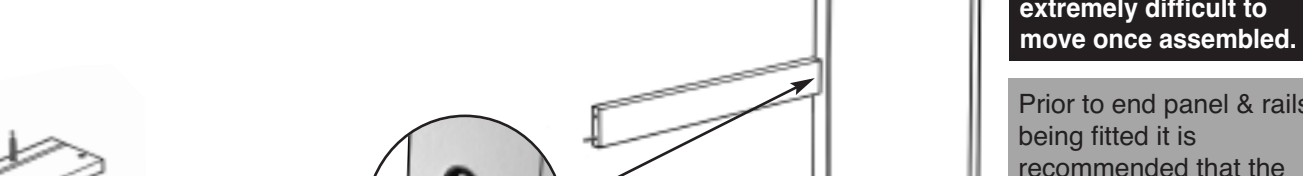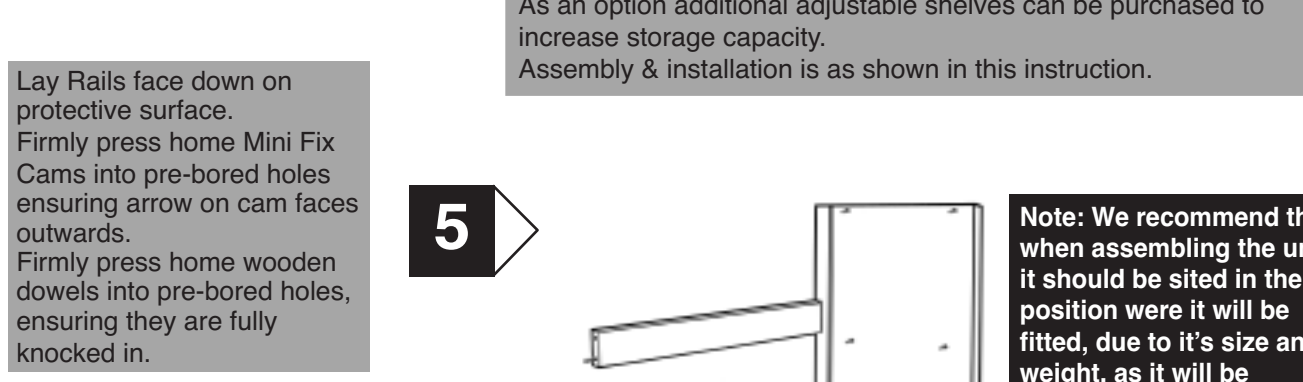

**DIAGONAL CORNER ROBE UNIT**

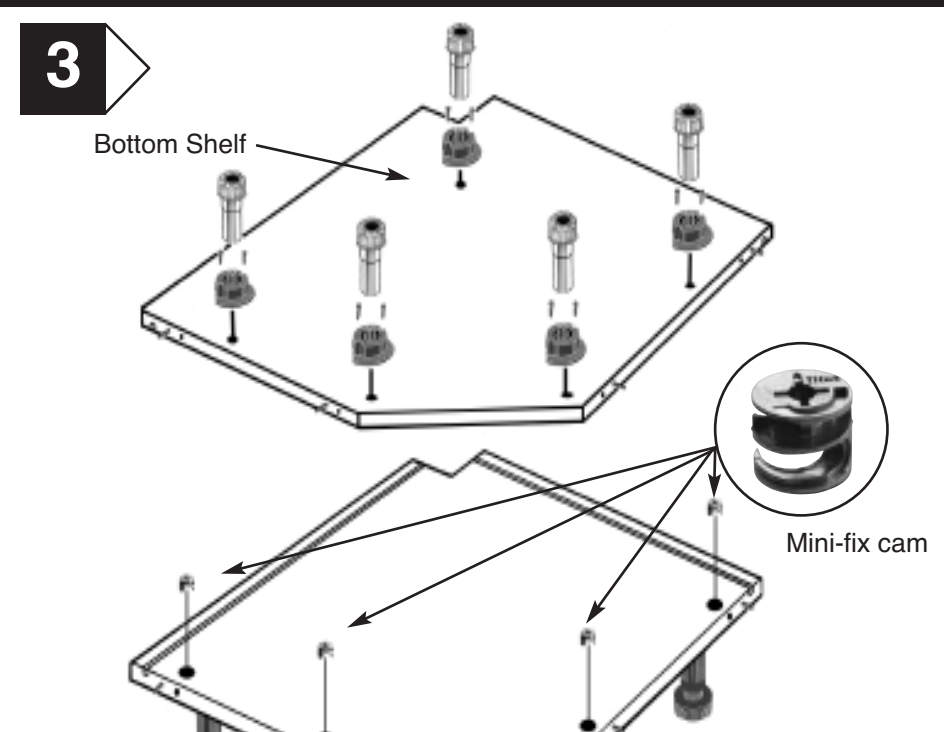

Lay Bottom Shelf face down on protective surface (with groove facing downwards). Firmly press home base for adjustable legs and secure with screws provided. Firmly press home adjustable legs into bases. Turn shelf over onto legs. Firmly press home Mini-fix cams into pre-bored holes ensuring arrow on cam faces outwards.

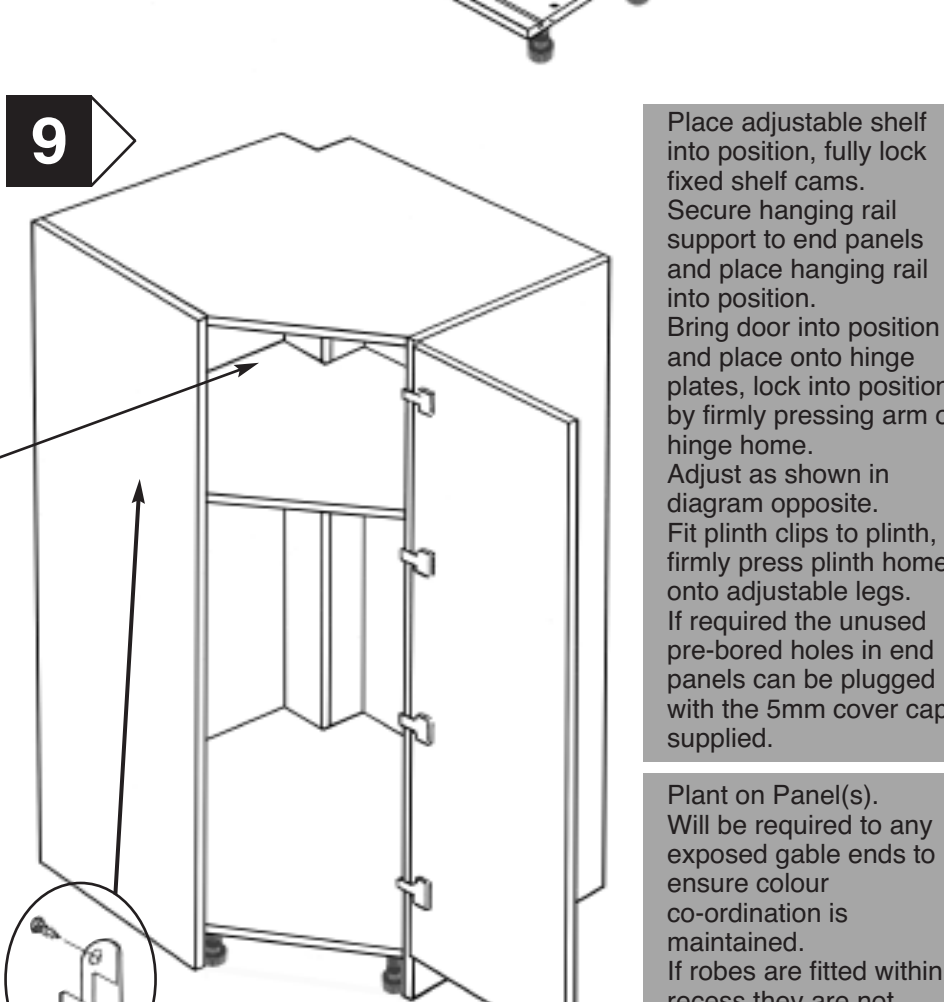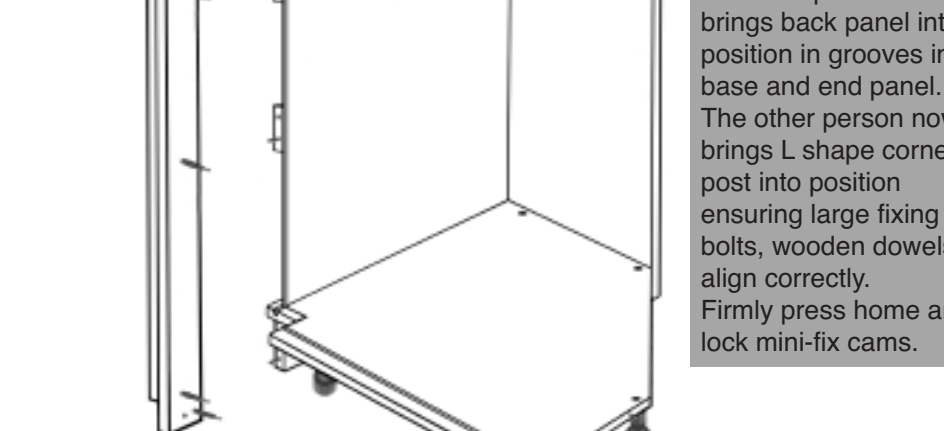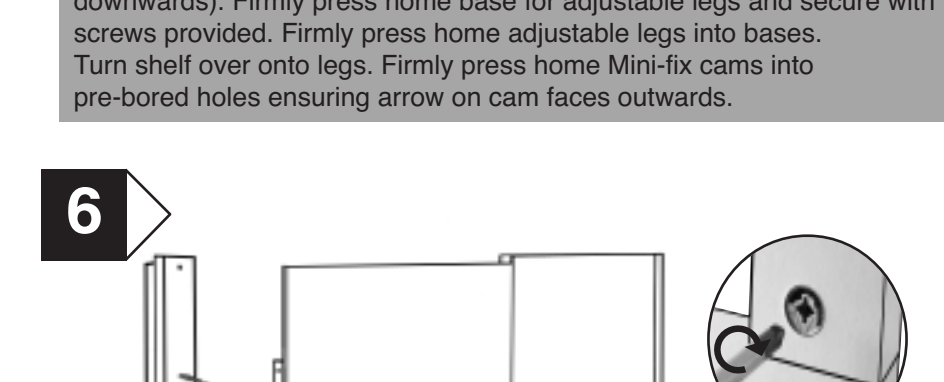


Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


**CONTENTS CHECK LIST**



**DOORS**

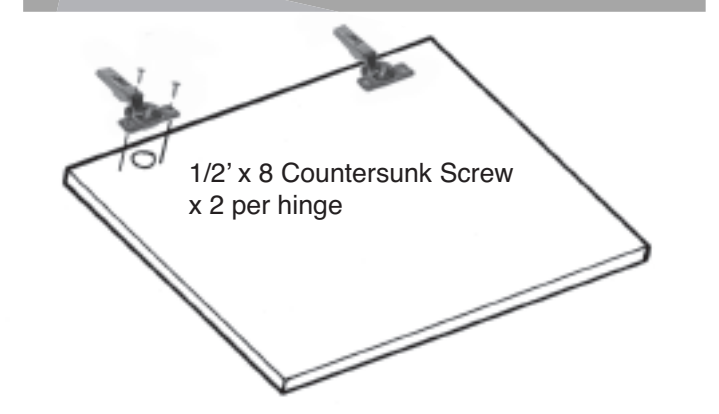

**CLIP-ON HINGE ADJUSTMENT**

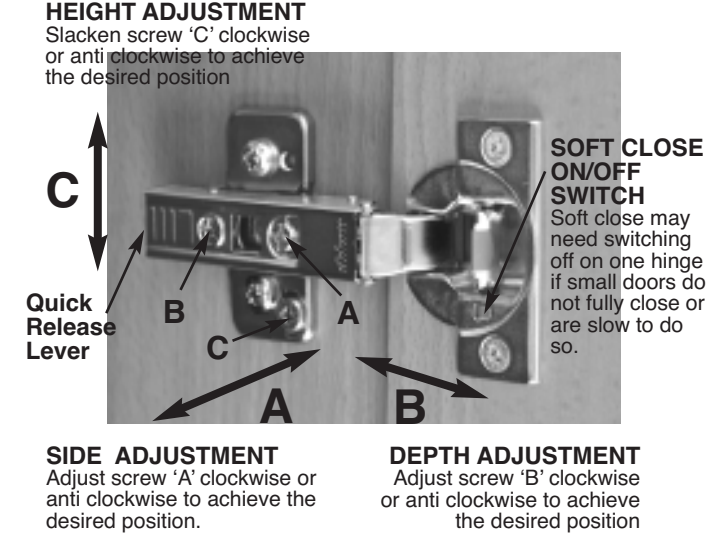

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


**Robe Assembly - Upright Position**

If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.

**HOLCOMBE BEDROOM FURNITURE**


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

**SINGLE/DOUBLE ROBE UNITS**

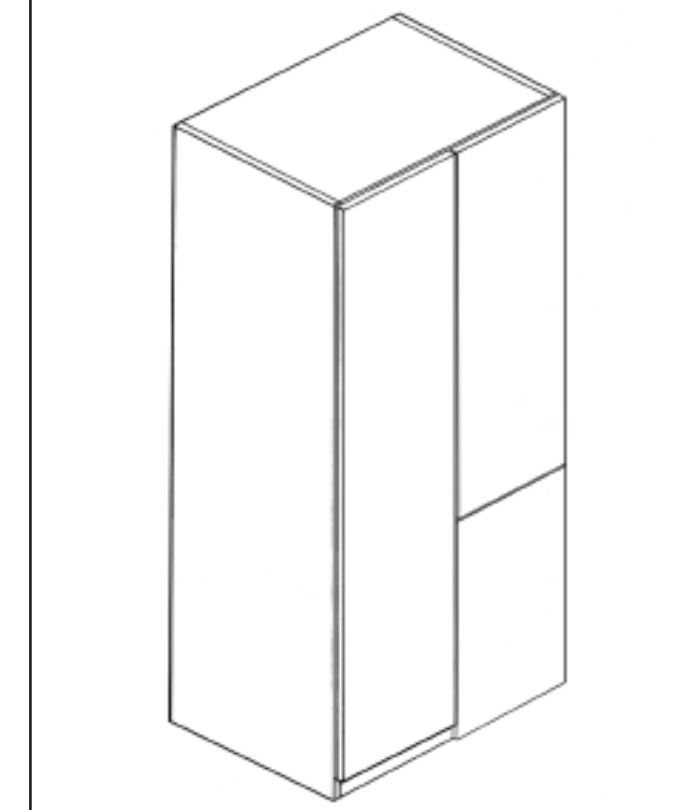


**Hardware Fixing Positions**

A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

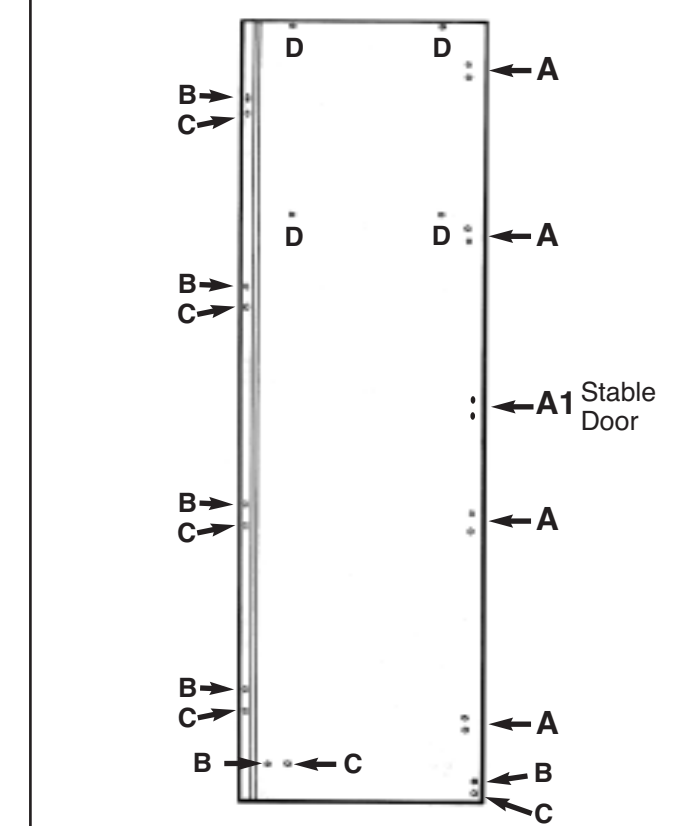


**DOUBLE ROBE UNIT**

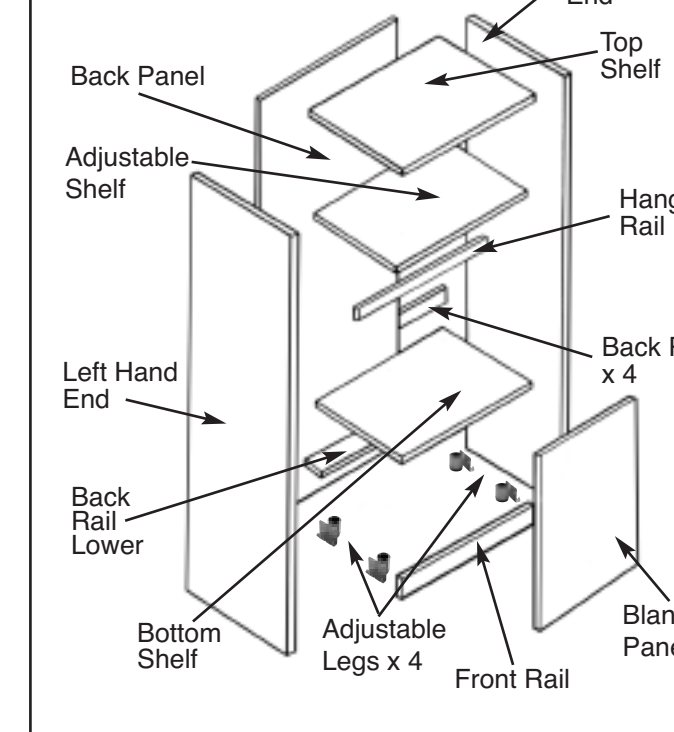

**STABLE ROBE UNIT**

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.





**ASSEMBLY INSTRUCTIONS**

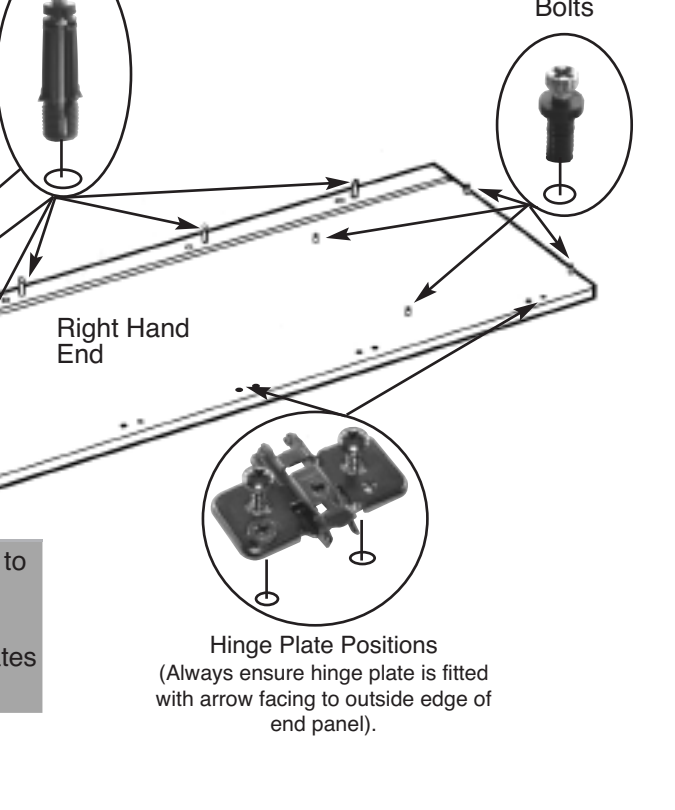

Lay end panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts, Mini Fix Bolts & Hinge Plates into positions indicated. Repeat operation for Left Hand End Panel.

The diagram shows the stable door being fitted to the right hand end panel, if left hand option is required repeat assembly as shown. If double robe option is being used, fit hinge plates as shown in standard robe instructions.

Hinge Plate Positions (Always ensure hinge plate is fitted with arrow facing to outside edge of end panel).

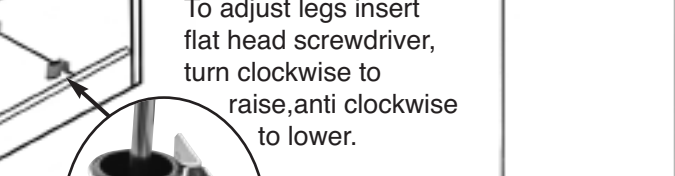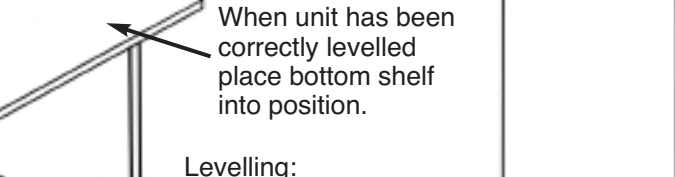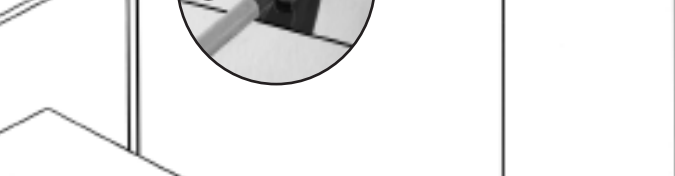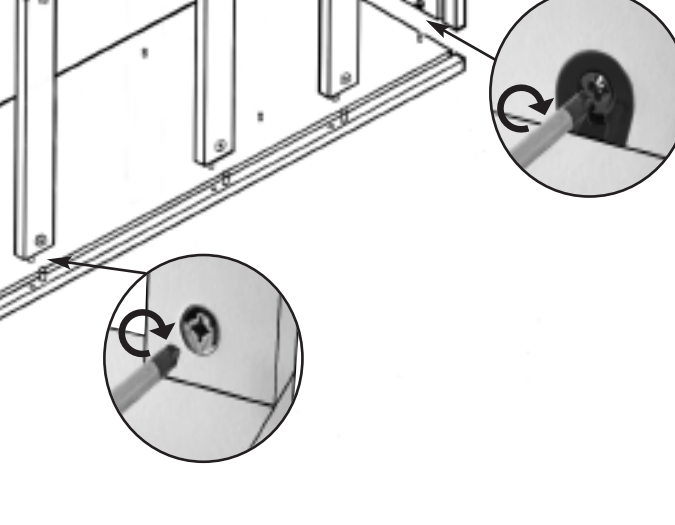


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

**STABLE ROBE UNIT**

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.







**ASSEMBLY INSTRUCTIONS**

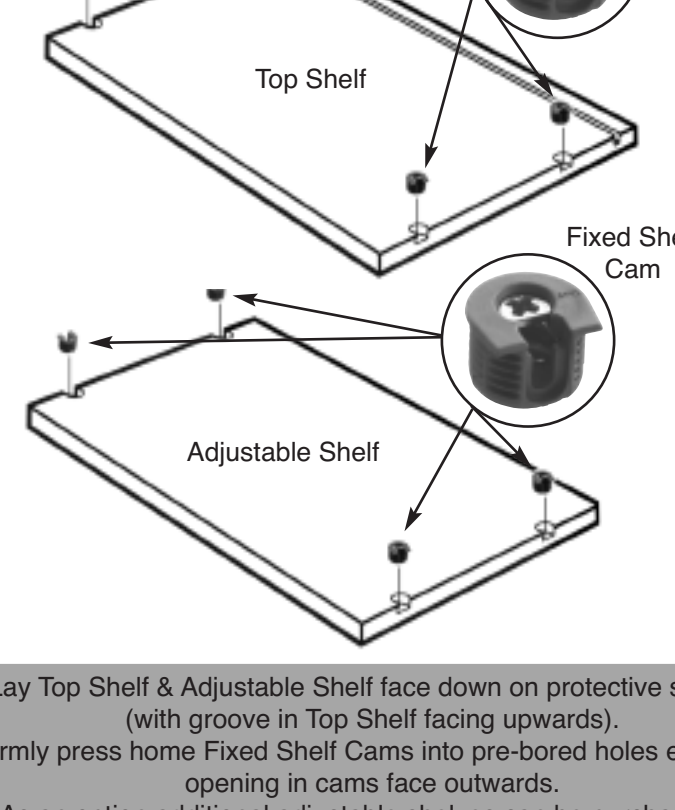

Lay Top Shelf & Adjustable Shelf face down on protective surface (with groove in Top Shelf facing upwards). Firmly press home Fixed Shelf Cams into pre-bored holes ensuring opening in cams face outwards. As an option additional adjustable shelves can be purchased to increase storage capacity. Assembly & installation is as shown in this instruction.

Lay RAILS face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. NB: All back rails and back rail lower are 90mm deep, the front rail is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

Tap adjustable feet into gable end edge until flush and secure with screws.

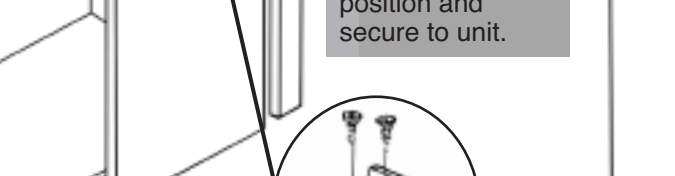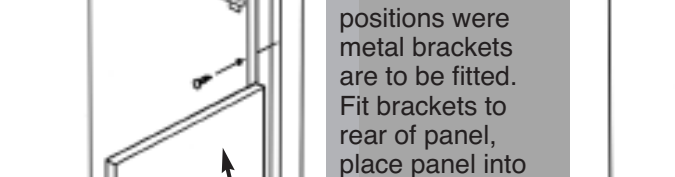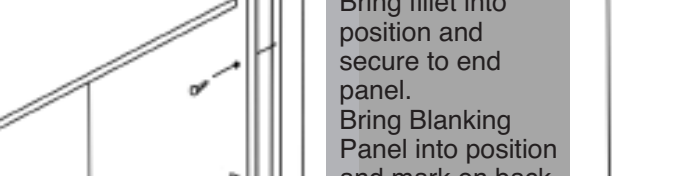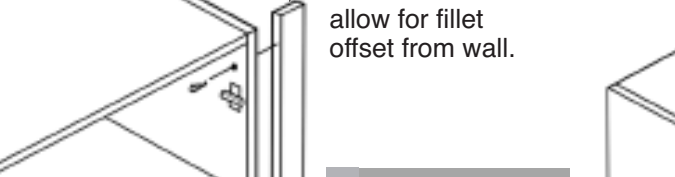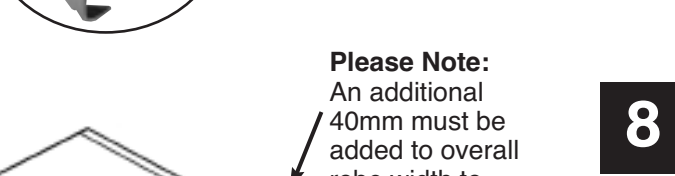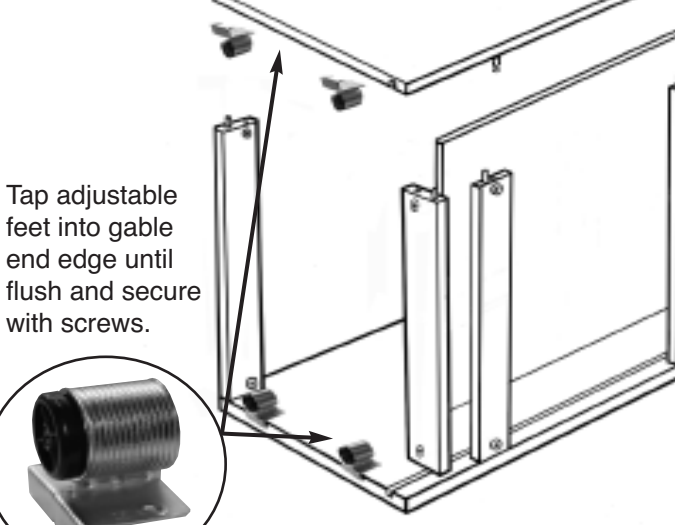


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

**STABLE ROBE UNIT**

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.





**ASSEMBLY INSTRUCTIONS**

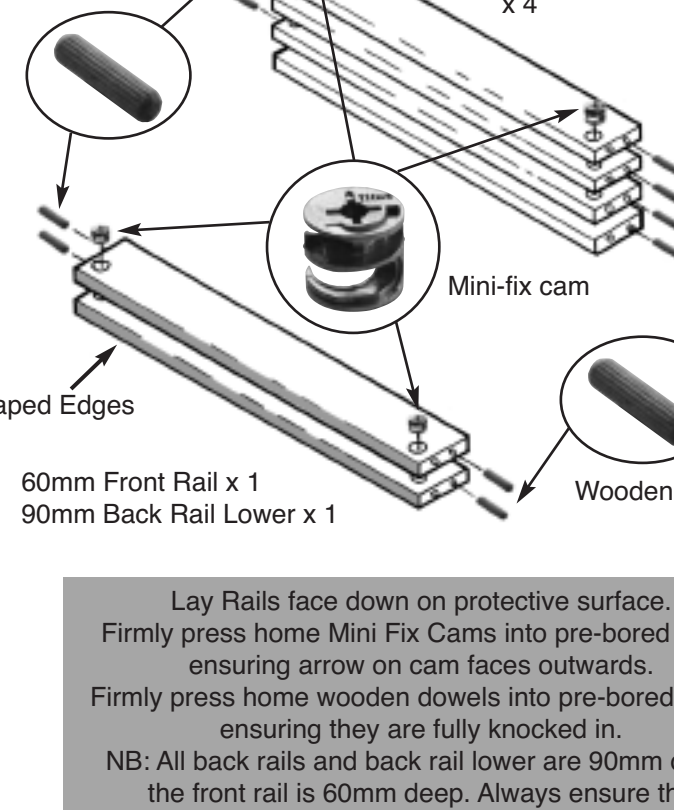

Lay Top Shelf & Adjustable Shelf face down on protective surface (with groove in Top Shelf facing upwards). Firmly press home Fixed Shelf Cams into pre-bored holes ensuring opening in cams face outwards. As an option additional adjustable shelves can be purchased to increase storage capacity. Assembly & installation is as shown in this instruction.

Lay RAILS face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. NB: All back rails and back rail lower are 90mm deep, the front rail is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

Tap adjustable feet into gable end edge until flush and secure with screws.

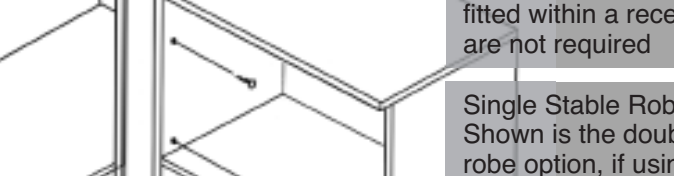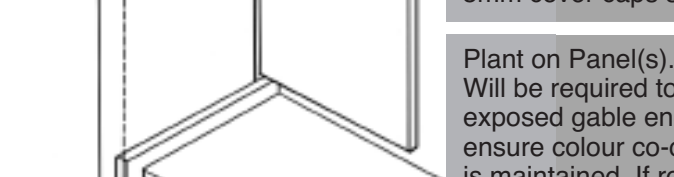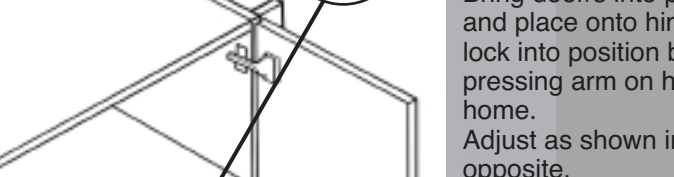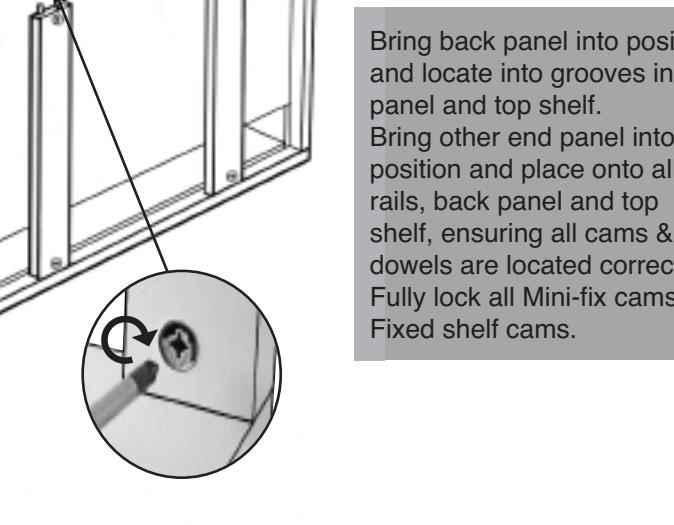


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.

Single Stable Robe. Shown is the double stable robe option, if using a single stable robe only one door is required.




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

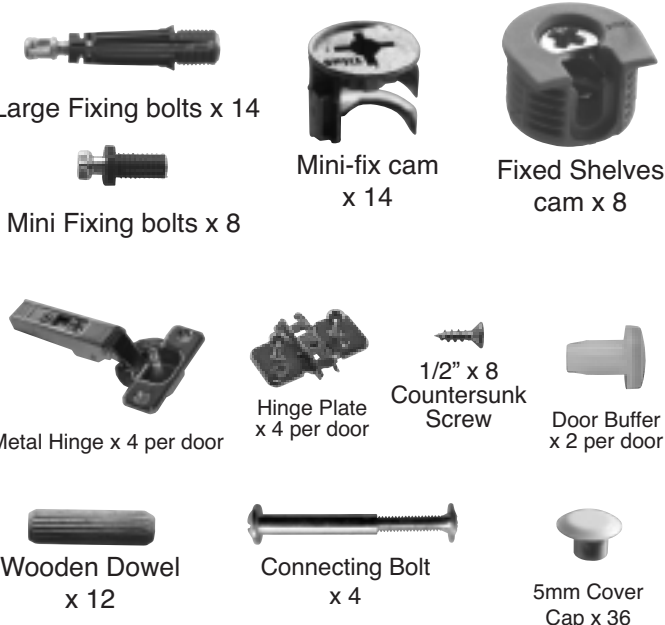

#### DOORS

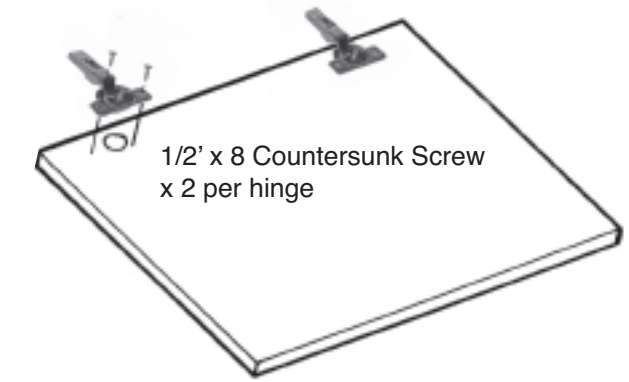

#### CLIP-ON HINGE ADJUSTMENT

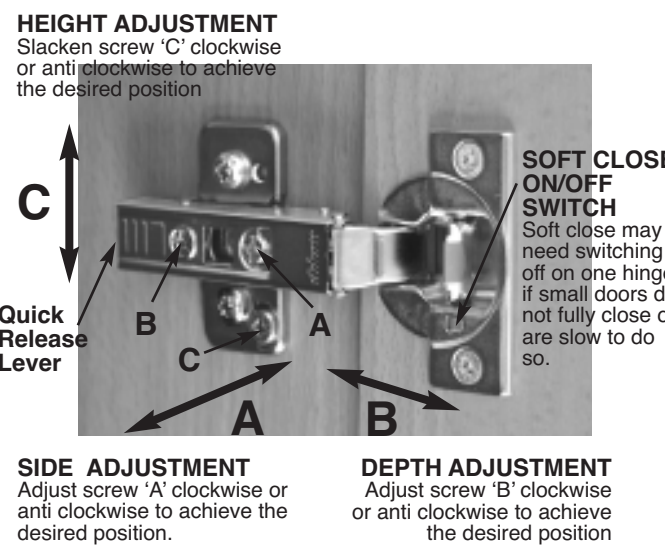

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


#### Robe Assembly - Upright Position

If ceiling height limitations exist, the robe can be assembled in an upright position. If this is the case it will require two people to complete assembly.

### HOLCOMBE BEDROOM FURNITURE


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

#### SINGLE ANGLED ROBE UNITS

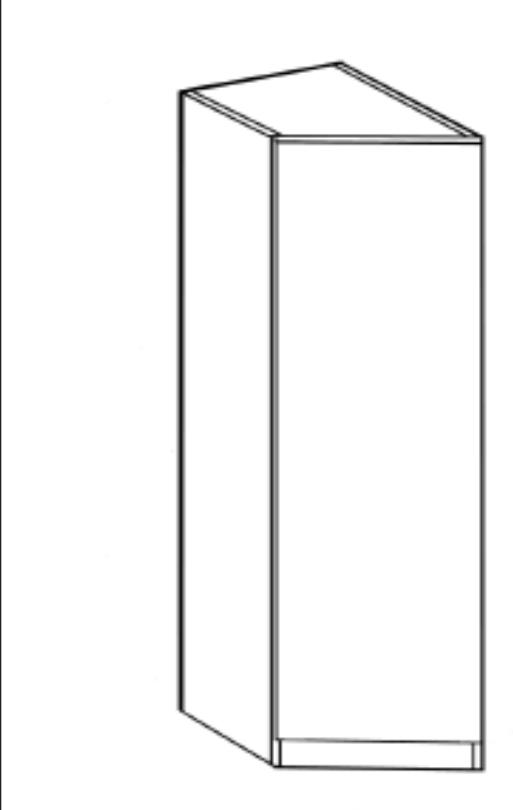


#### Hardware Fixing Positions

A = Hinge Plate Positions  
B = Large Fixing Bolt Positions  
C = Wooden Dowels  
D = Mini Fixing Bolt Positions

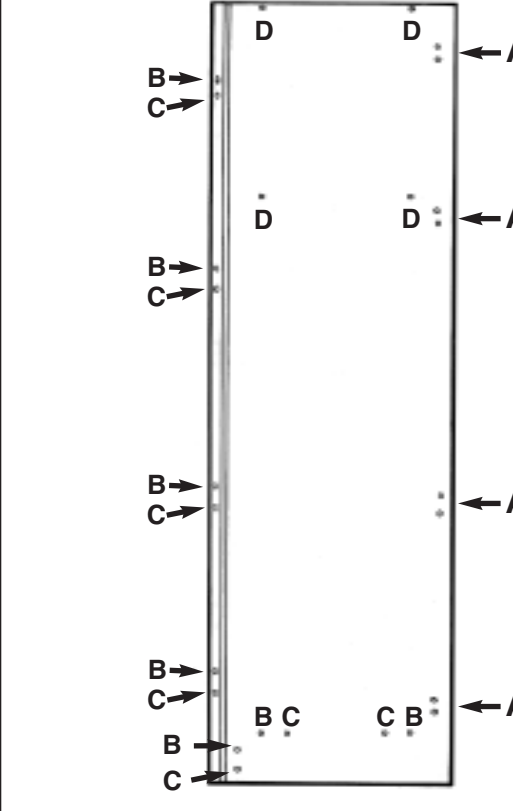


#### ANGLED ROBE UNIT

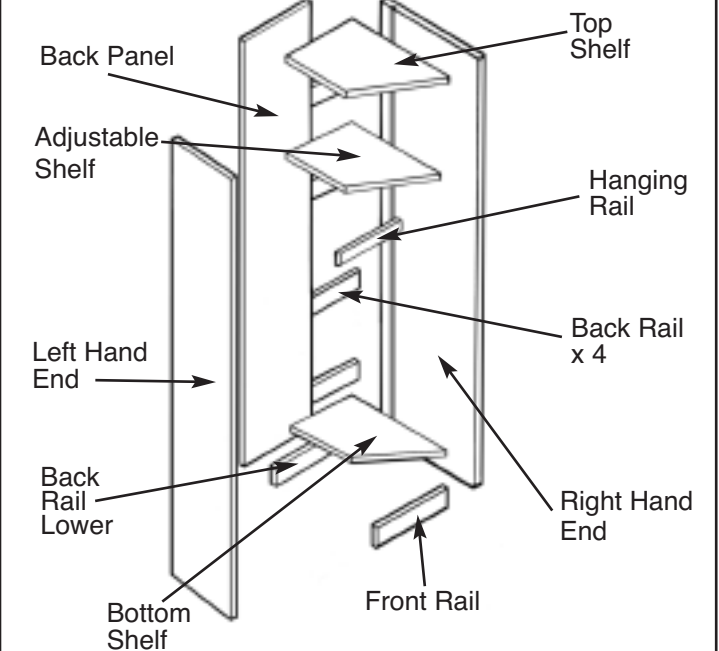


### ANGLED SINGLE ROBE UNITS. ASSEMBLY INSTRUCTIONS


1 Lay Right Hand End Panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts, Mini Fix Bolts & Hinge Plates into positions indicated. Repeat operation for Left Hand End Panel. NB: No hinge plates are to be fitted to Left Hand End Panel.

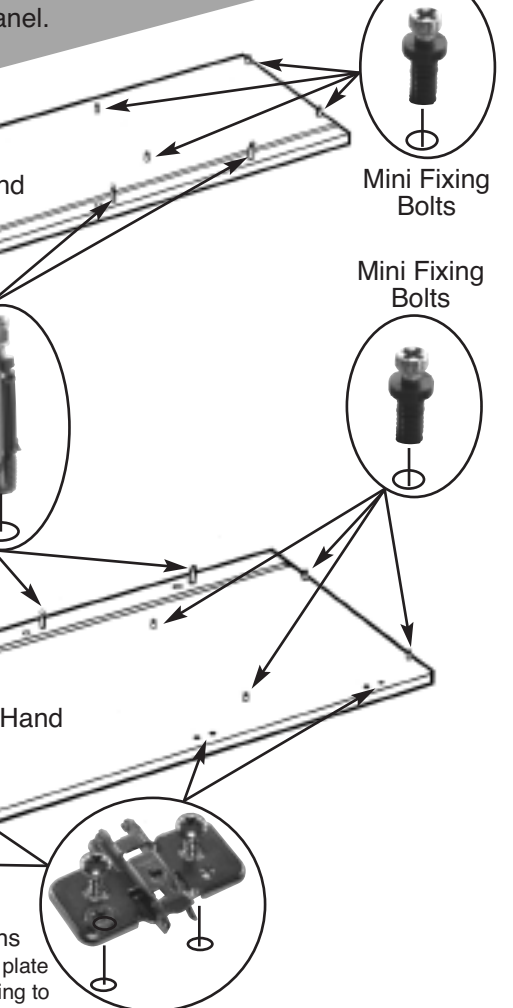


4 Bring bottom shelf and all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring top shelf into position and secure to end panel ensuring Fixed shelf cams are locked fully.

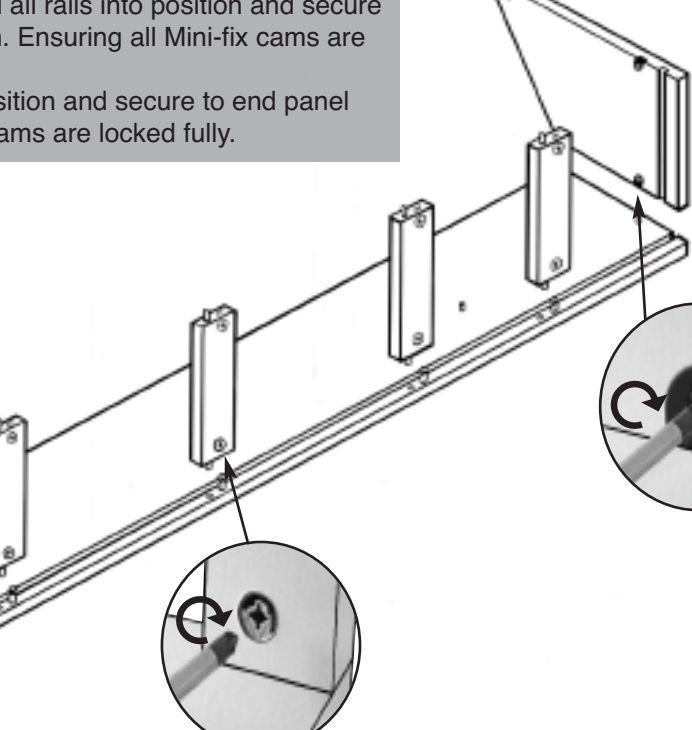


6 Once unit is levelled bring adjustable shelf into position and fully press down onto Mini-fixing bolts. Fully lock all Fixed shelf cams.

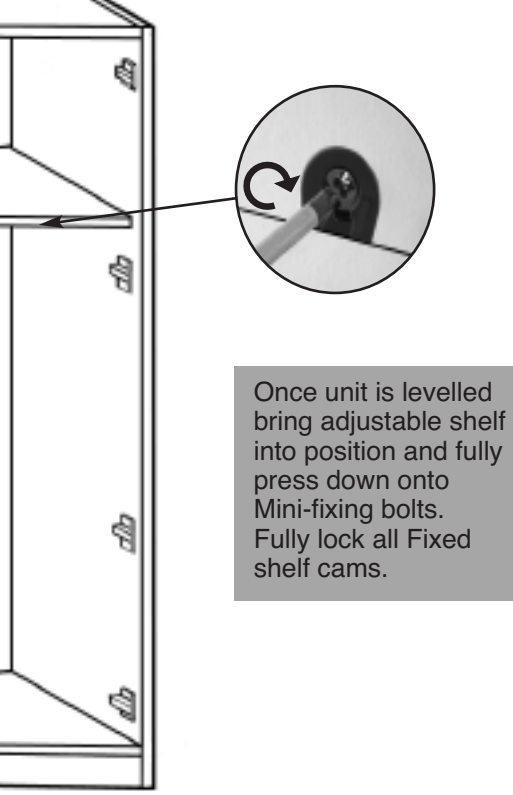


2 Lay Top Shelf face down on protective surface (with groove in Top Shelf facing upwards). Lay Adjustable Shelf face down on protective surface, firmly press home Fixed Shelf Cams into pre-bored holes in both shelves ensuring opening in cams face outwards.

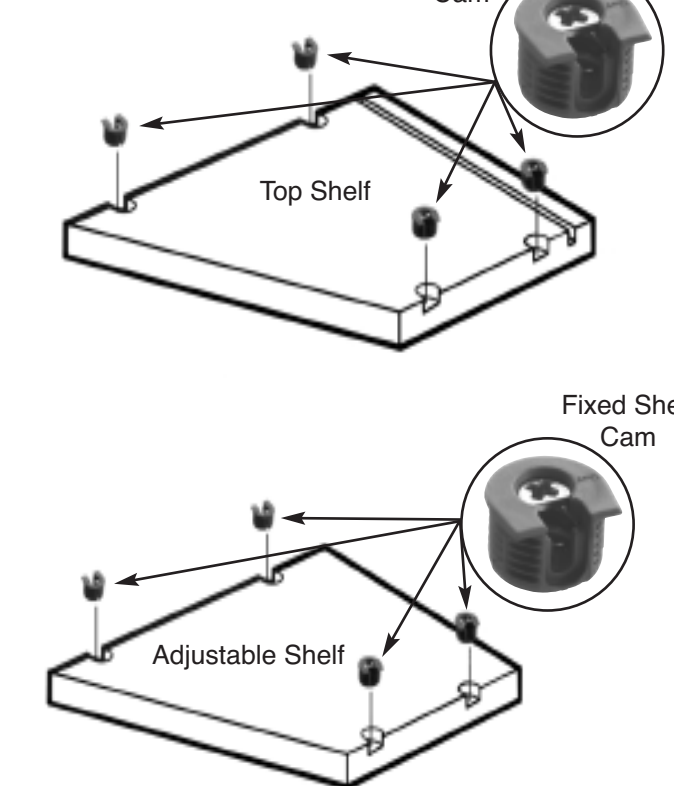


5 Bring back panel into position and locate into grooves in end panel, top and bottom shelves. Bring other end panel into position and place onto all rails, back panel, top and bottom shelves, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams & Fixed shelf cams.

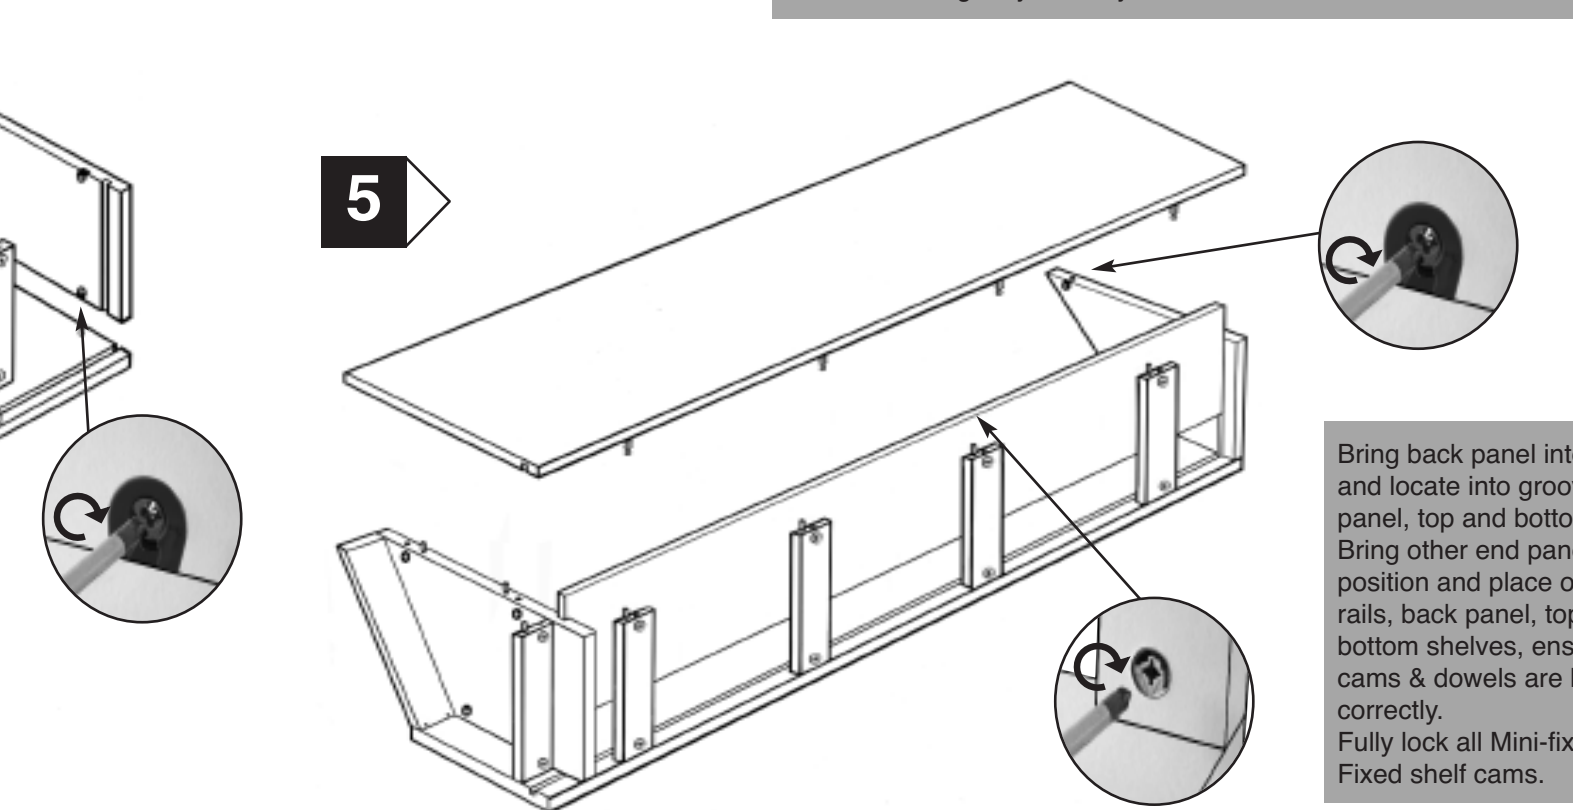

7 Once adjustable shelf has been placed into position, secure hanging rail support to end panels and place hanging rail into position. Bring door into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. If required the unused pre-bored holes in end panels can be plugged with the 5mm cover caps supplied.

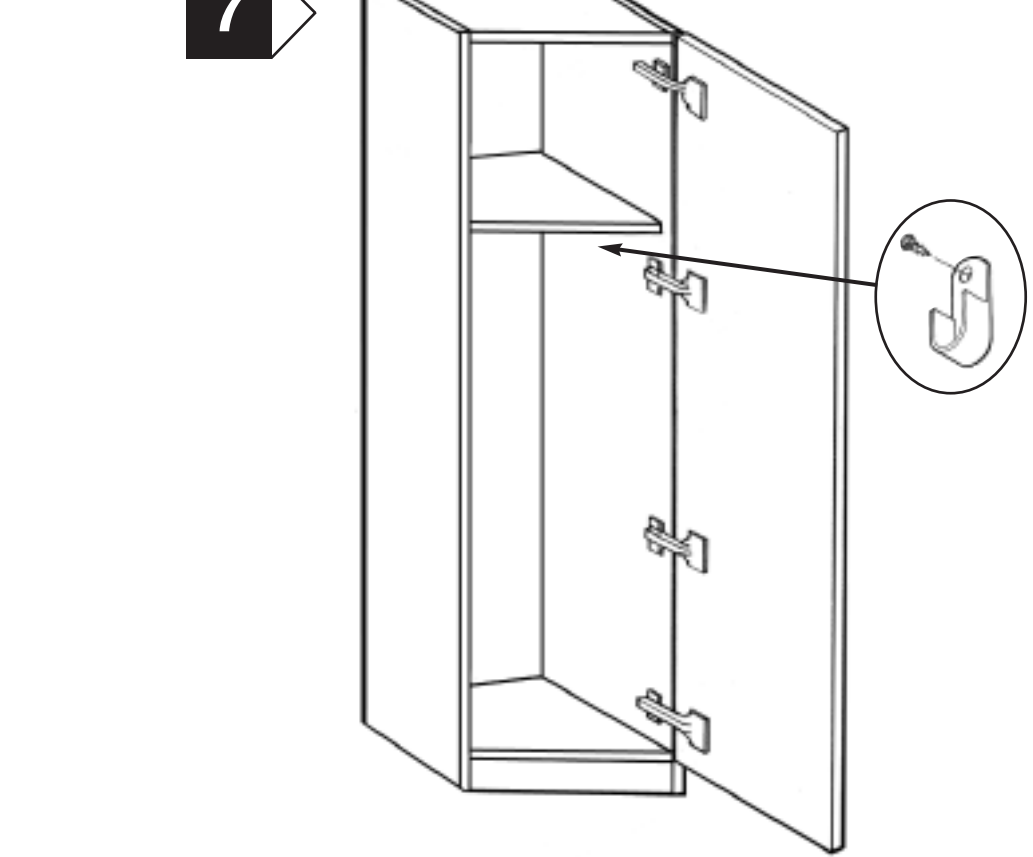

### For more information on product go to: www.jjopl.com

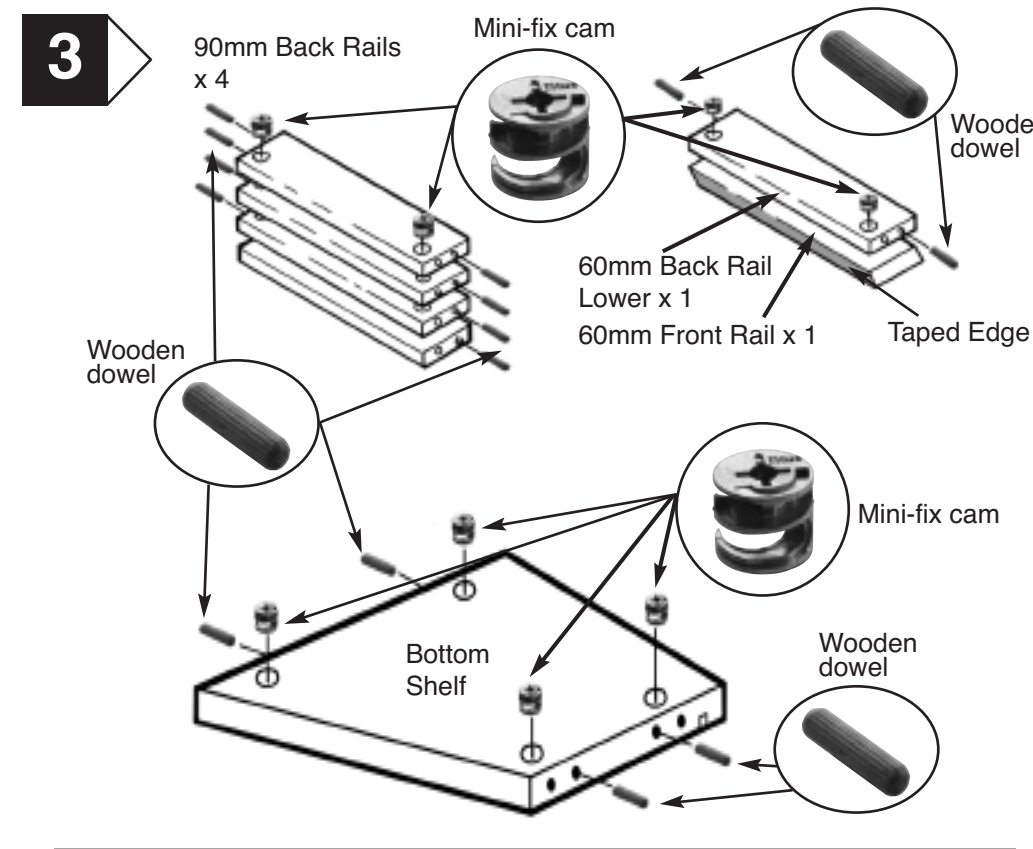


Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: All back rails are 90mm deep. The front rail and back rail lower are 60mm deep. Always ensure the front rail is placed in the correct position when assembling. Lay Bottom Shelf face down on protective surface (with groove facing downwards). Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in.

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST



#### DOORS

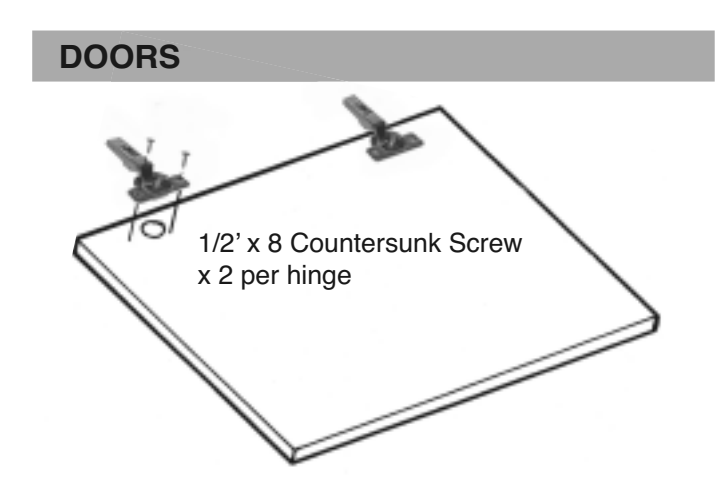

#### CLIP-ON HINGE ADJUSTMENT

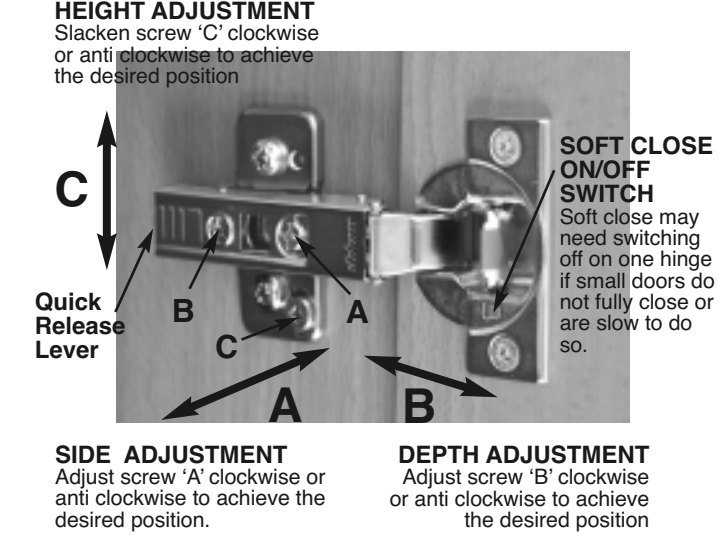


To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


### HOLCOMBE BEDROOM FURNITURE

Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.


#### SINGLE/DOUBLE BRIDGING UNITS

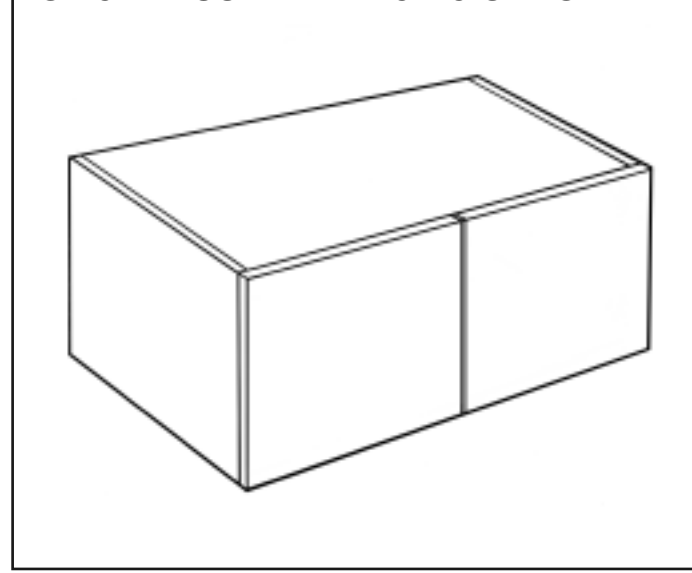


#### DOUBLE BRIDGING UNIT

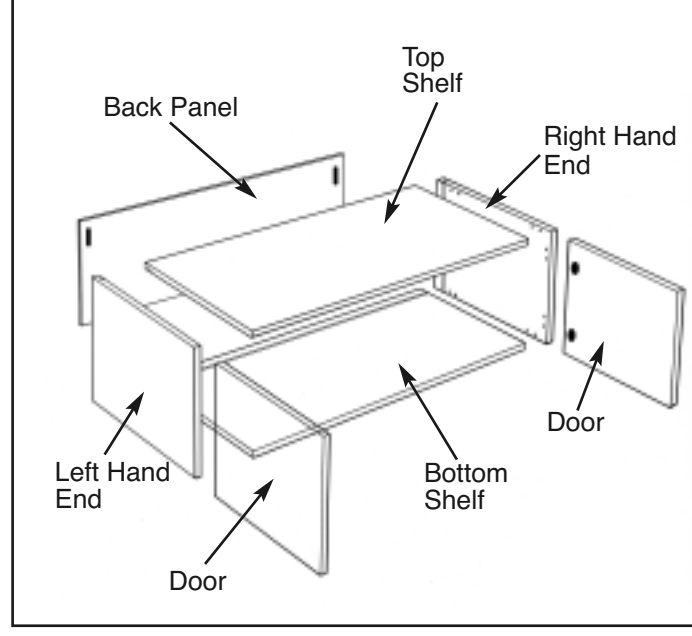

#### WALL HANGING BRACKET ADJUSTMENT

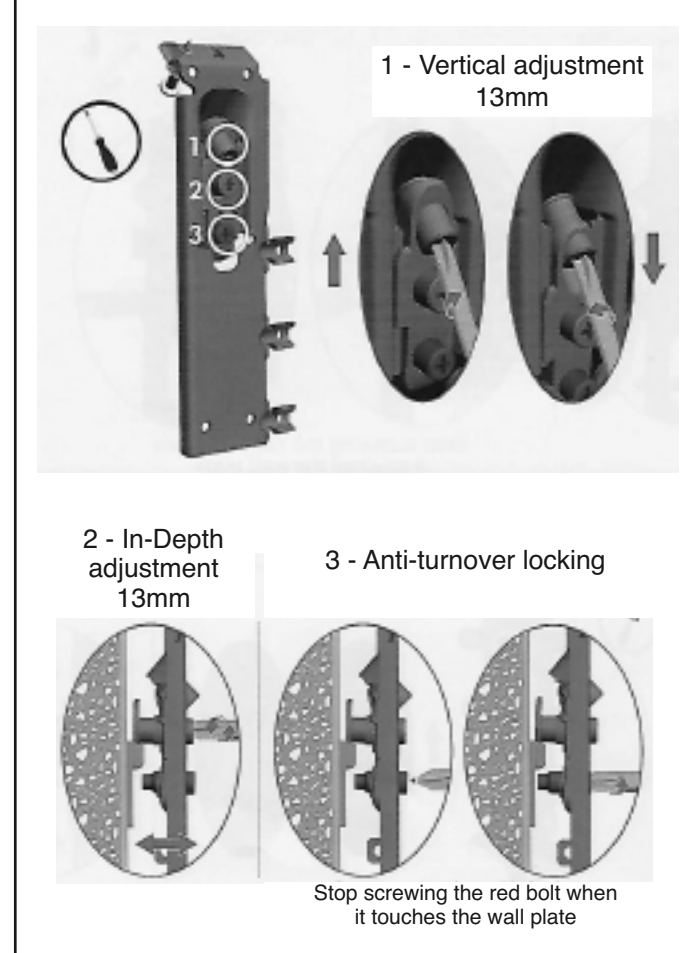


6 Bring back panel into position and locate into grooves in end panel and top & bottom shelves. Ensuring cut out's in back panel face top shelf. Bring other end panel into position and place onto back panel and top & bottom shelves, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams.




### SINGLE & DOUBLE BRIDGING CUPBOARDS. ASSEMBLY INSTRUCTIONS


1 Lay end panel face down on protective surface with groove facing upwards. Fix Large Fixing Bolts & Hinge Plates into positions indicated. Repeat operation for Left Hand End Panel.

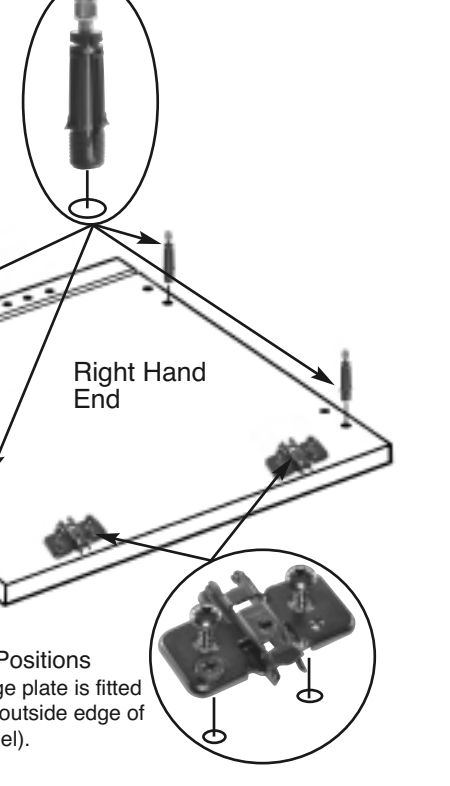



4 Bring back panel into position and locate into grooves in end panel and top & bottom shelves. Ensuring cut out's in back panel face top shelf. Bring other end panel into position and place onto back panel and top & bottom shelves, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams.

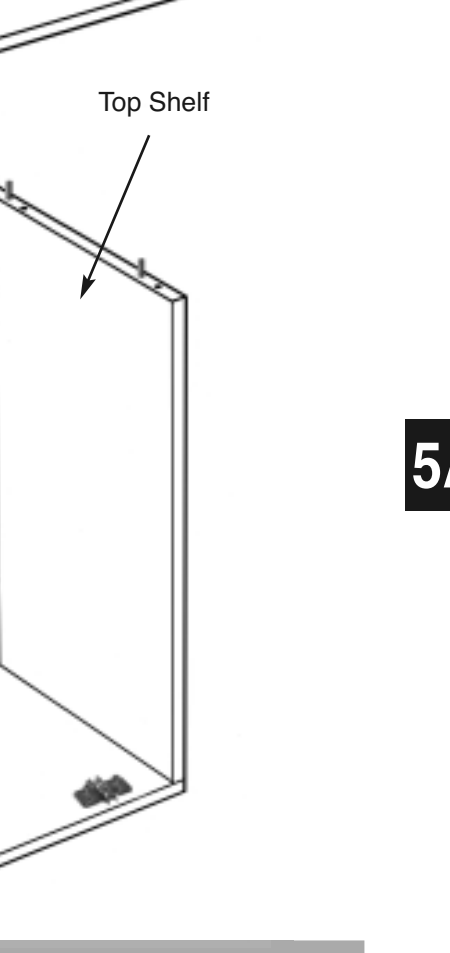


6 Bring back panel into position and locate into grooves in end panel and top & bottom shelves. Ensuring cut out's in back panel face top shelf. Bring other end panel into position and place onto back panel and top & bottom shelves, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams.

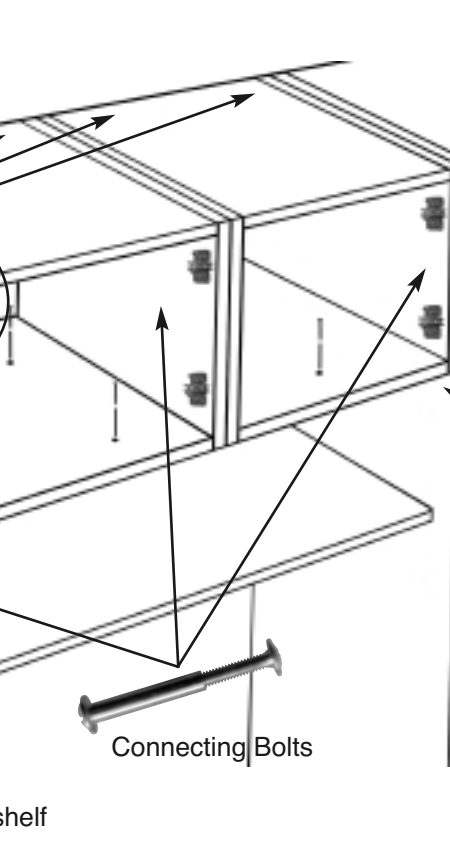

2 Lay Top Shelf & Bottom Shelf face down on protective surface (with groove facing downwards). Firmly press home Mini-fix Cams into pre-bored holes ensuring arrow on cams face outwards. Repeat operation for other shelf. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in.

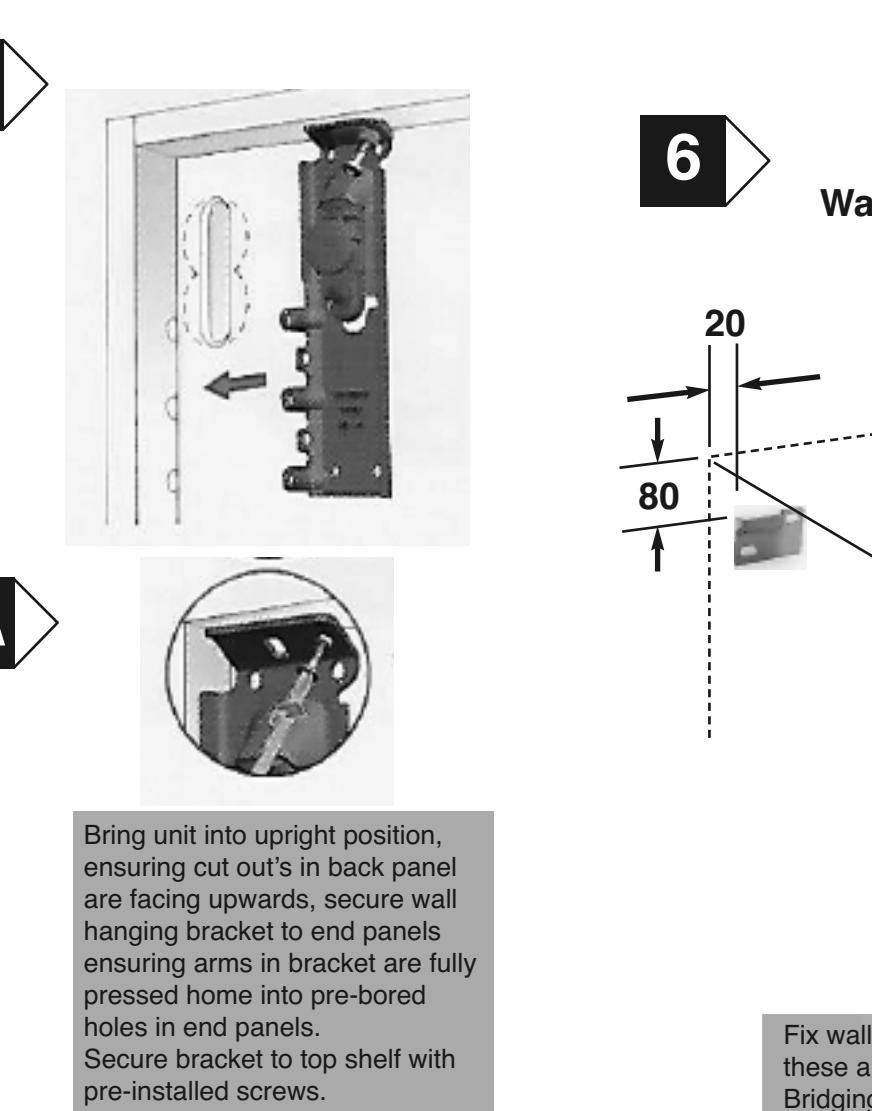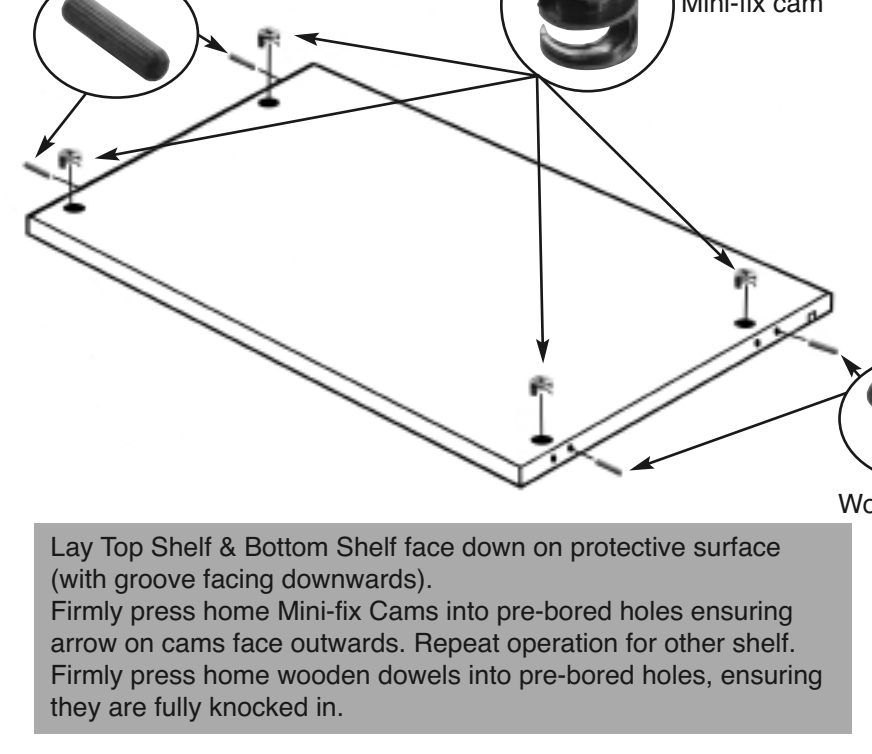


6 Bring back panel into position and locate into grooves in end panel and top & bottom shelves. Ensuring cut out's in back panel face top shelf. Bring other end panel into position and place onto back panel and top & bottom shelves, ensuring all cams & dowels are located correctly. Fully lock all Mini-fix cams.

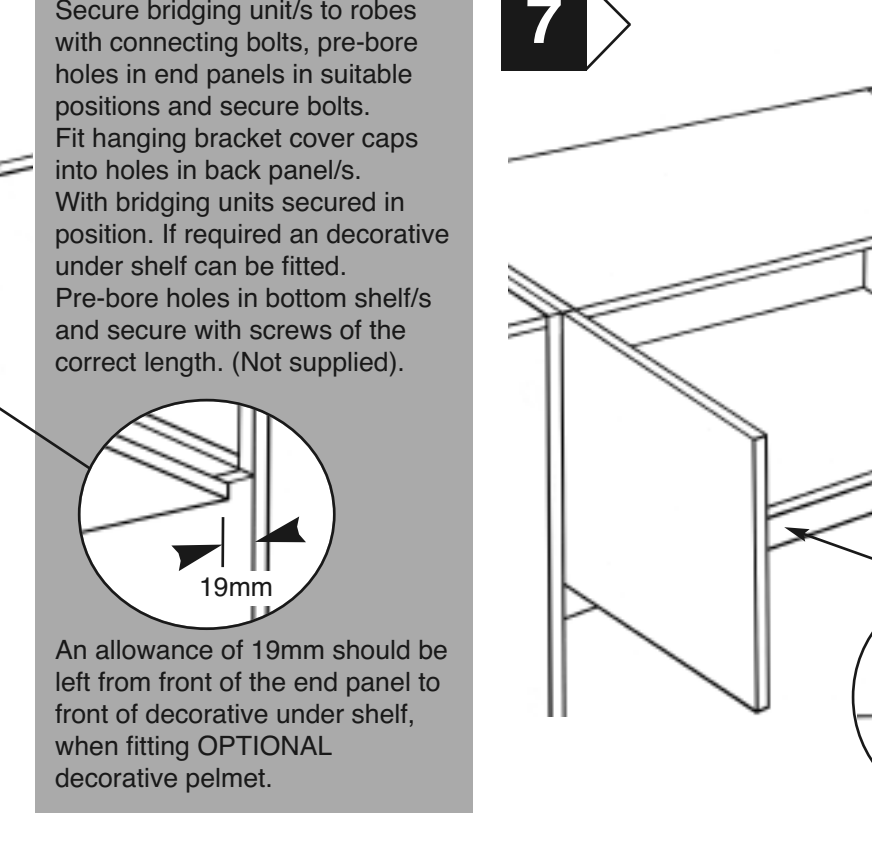


### For more information on product go to: www.jjopl.com


3 Bring Top & Bottom shelves into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully.

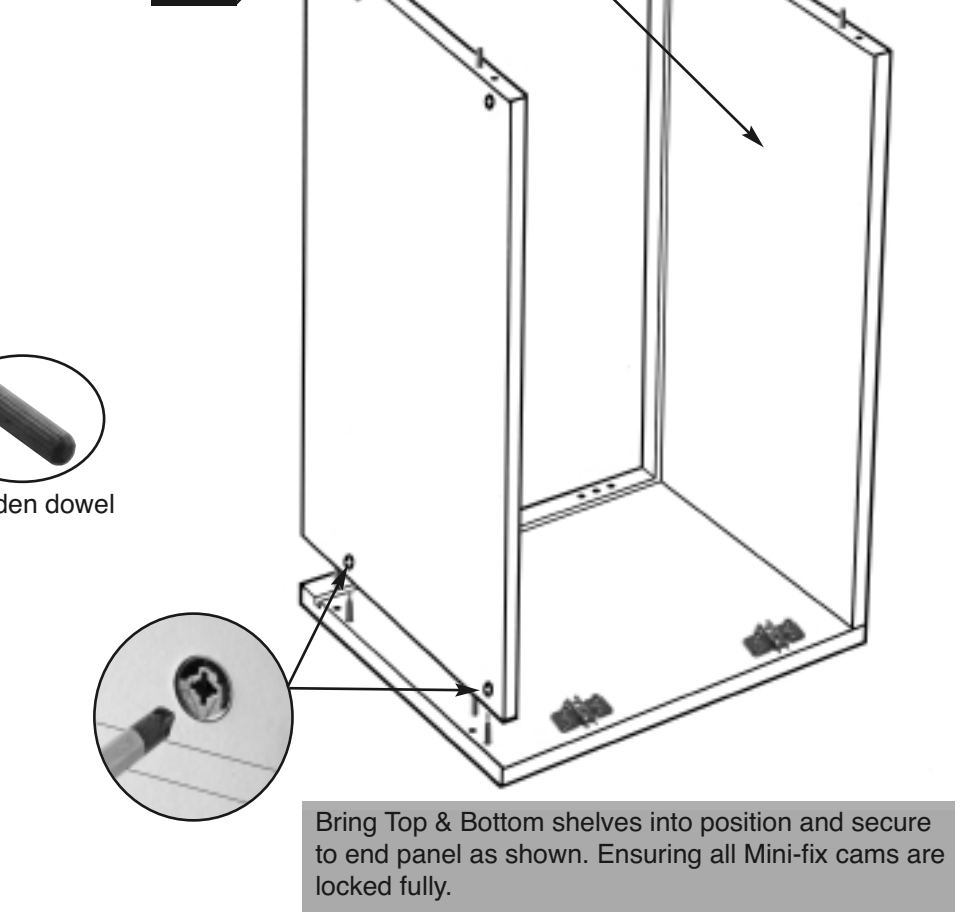

#### Wall Hanging Plate Positioning

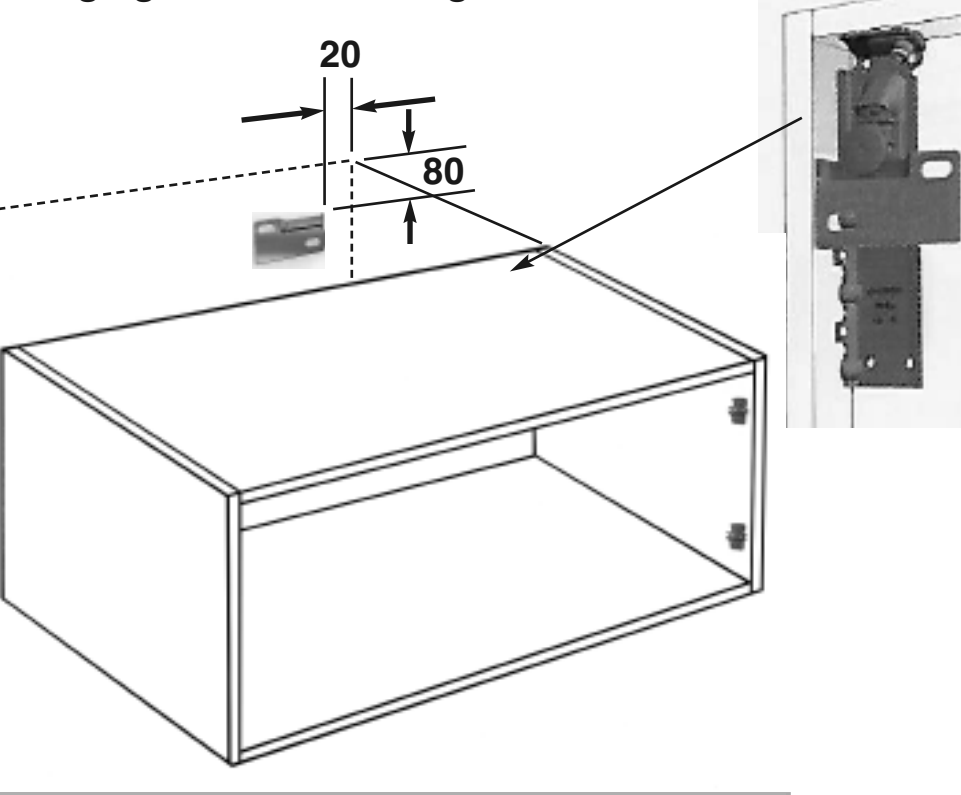

Fix wall hanging plates to walls in positions shown, using suitable screws, these are not provided because of differing wall construction. Bridging cupboards can be sited in multiple locations, if they are to be sited between robes always ensure robes are correctly levelled in all plains prior to bridging cupboard/s being installed. For adjustment of wall hanging brackets see diagrams opposite.

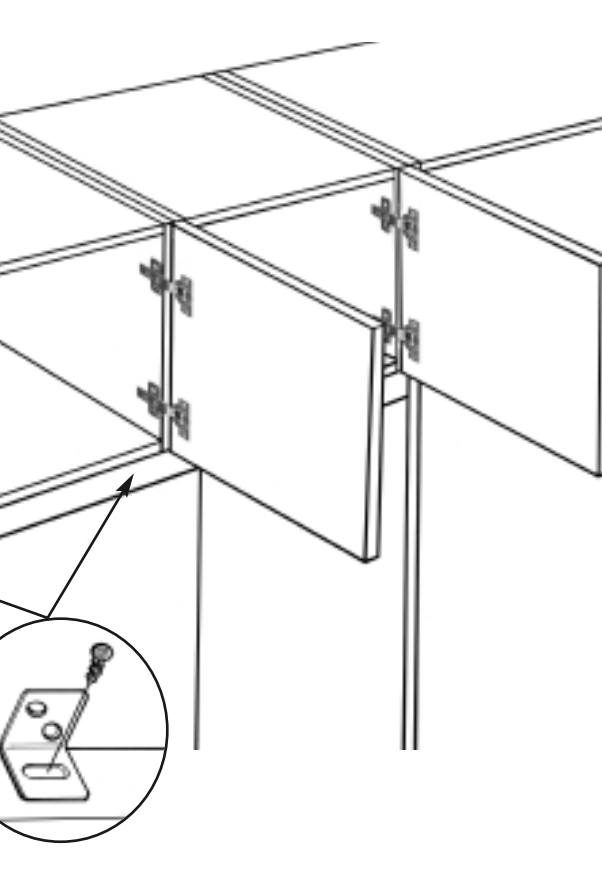

If fitting the OPTIONAL PELMET, fit metal brackets (not supplied) to rear of pelmet prior to fitting to bridging cupboards. Bring door/s into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home. Adjust as shown in diagram opposite. If required the unused pre-bored holes in end panels can be plugged with the 5mm cover caps supplied.

Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. If robes are fitted within a recess they are not required.



Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST



#### DRAWER BRACKET



#### FIXING DRAWER BRACKET TO DRAWER FRONT

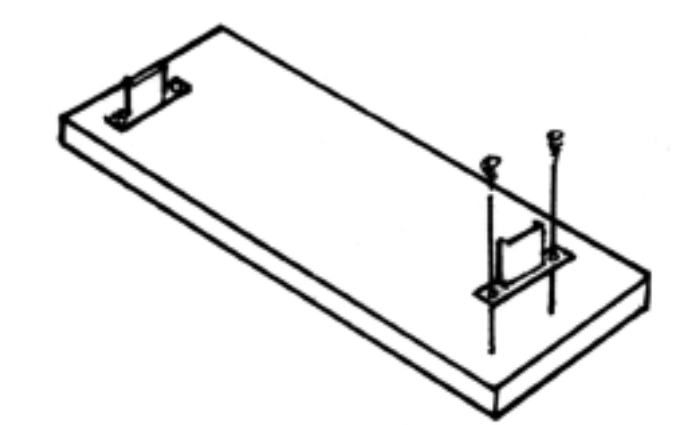

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


### SINGLE & DOUBLE DRAWER CHESTS- BEDSIDE/STANDARD HEIGHT.

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

#### ANTARO DRAWER SYSTEM


##### SINGLE/DOUBLE DRAWER CHESTS BEDSIDE/STANDARD HEIGHT

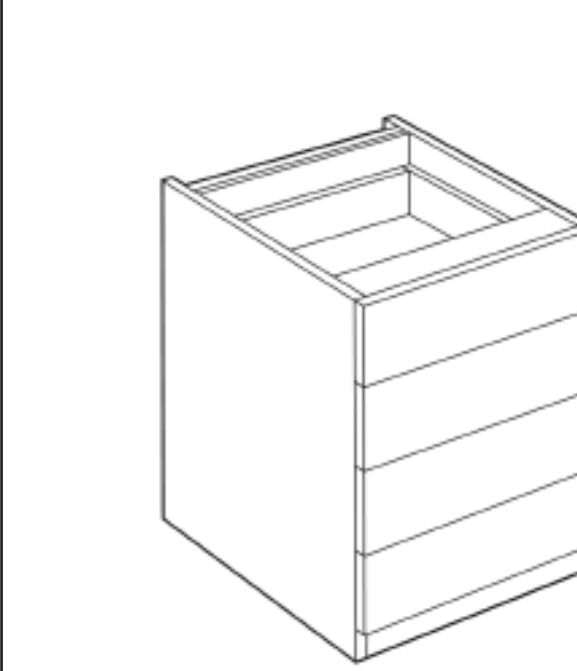

##### SINGLE/DOUBLE DRAWER CHESTS BEDSIDE/STANDARD HEIGHT

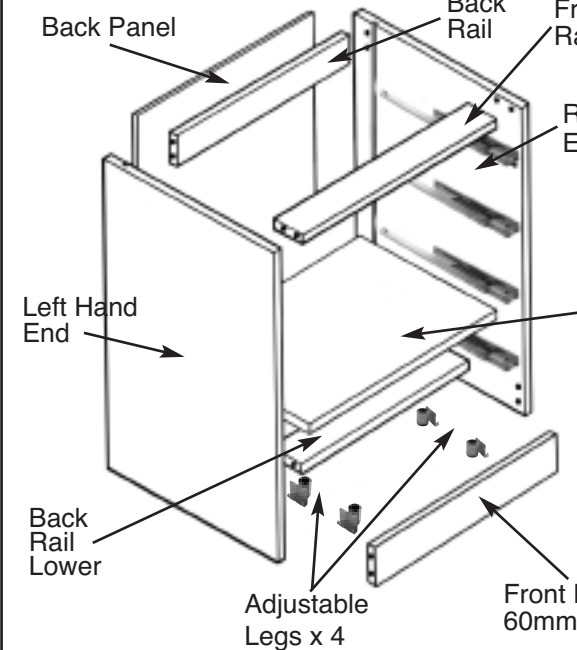

5

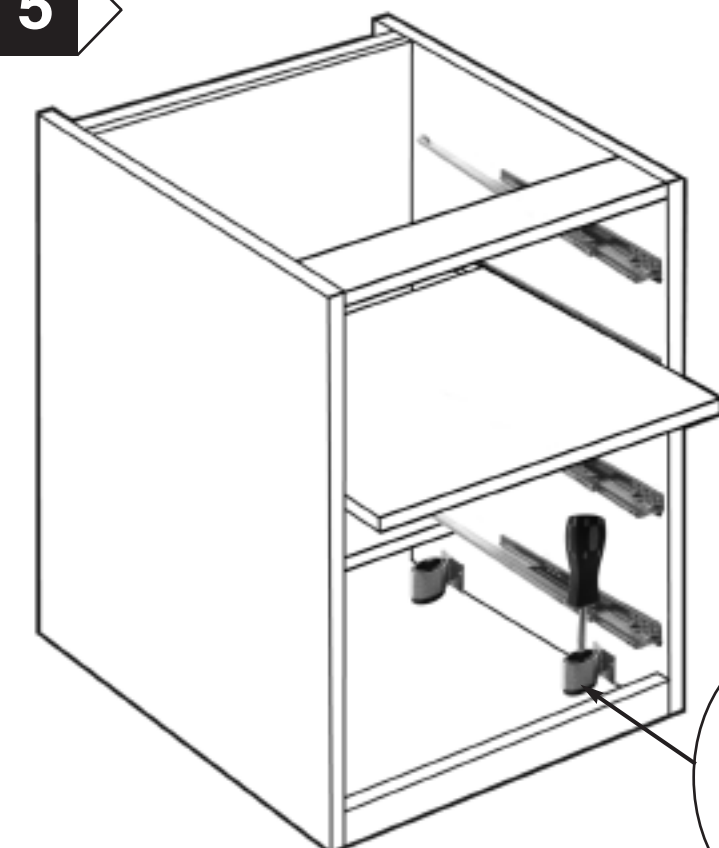

Place unit into position were it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail.




Levelling: To adjust legs insert flat head screwdriver, turn clockwise to raise, anti clockwise to lower.

3

Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring left hand end panel into position and secure to rails ensuring Mini-fix cams are locked fully.




Tap adjustable feet into gable end edge until flush and secure with screws.

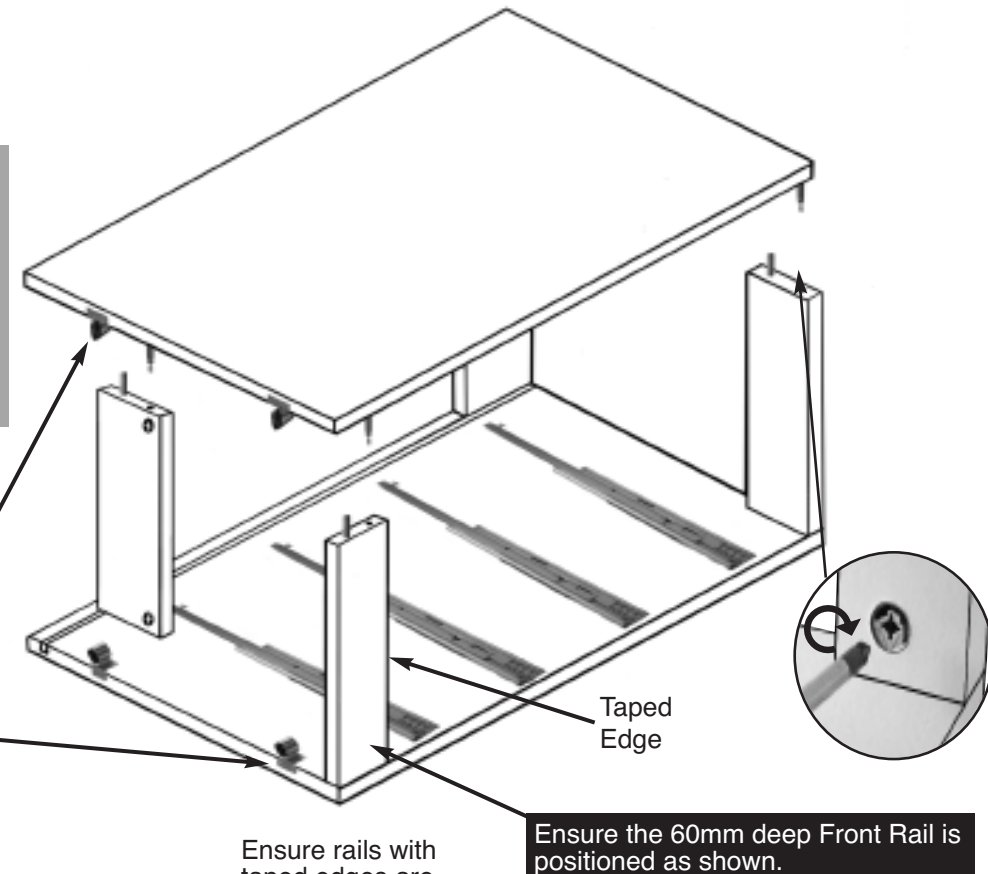

Ensure rails with taped edges are positioned as shown.

Ensure the 60mm deep Front Rail is positioned as shown. At the front of the unit.

6

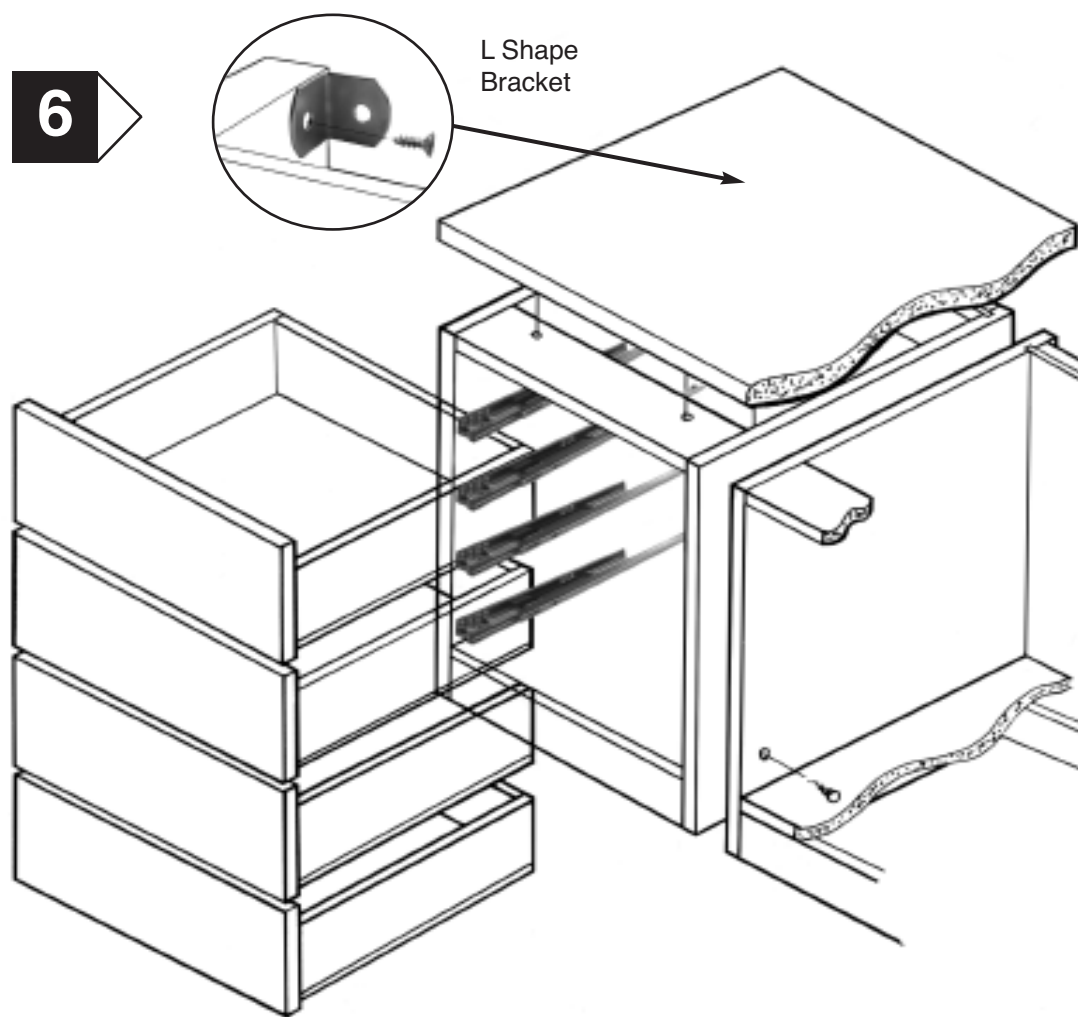

2 x 'L' shaped brackets are supplied for securing unit to wall or securing worktop to unit. If using brackets to secure worktop these will be placed in front of back panel. If using brackets to secure to wall position as indicated. Screws cannot be provided for securing to wall due to differing wall constructions.


Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in front rail where required. Bring screws into position and secure worktop. If unit is to be secured to an adjacent unit, 2 x connecting bolts are supplied. It is left for installer to decide on position and securing of connecting bolts.

Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).

2

Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: Back rail, front rail and back rail lower are 90mm deep, the front rail lower is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

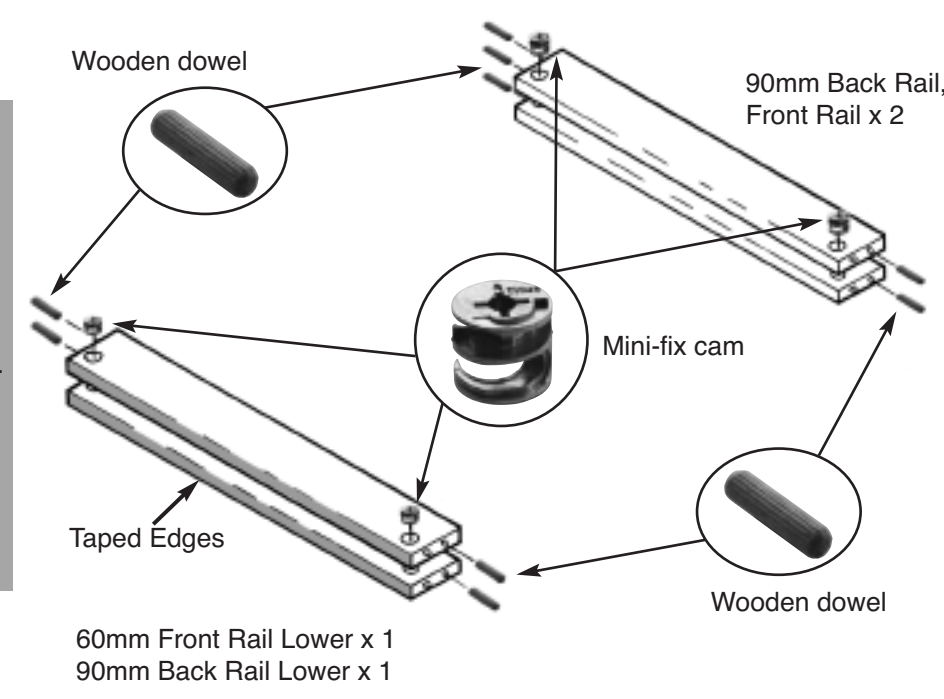


4

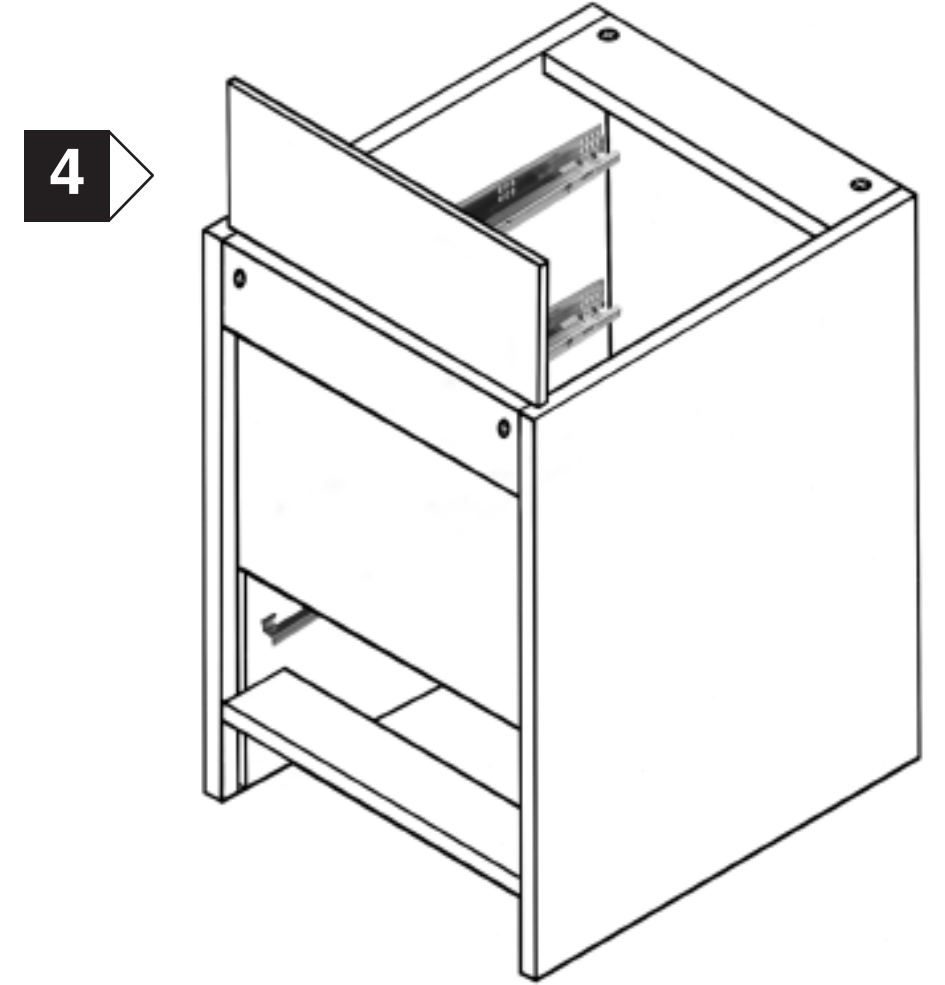


Bring unit into upright position and locate back panel into grooves in end panels.

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

#### CONTENTS CHECK LIST

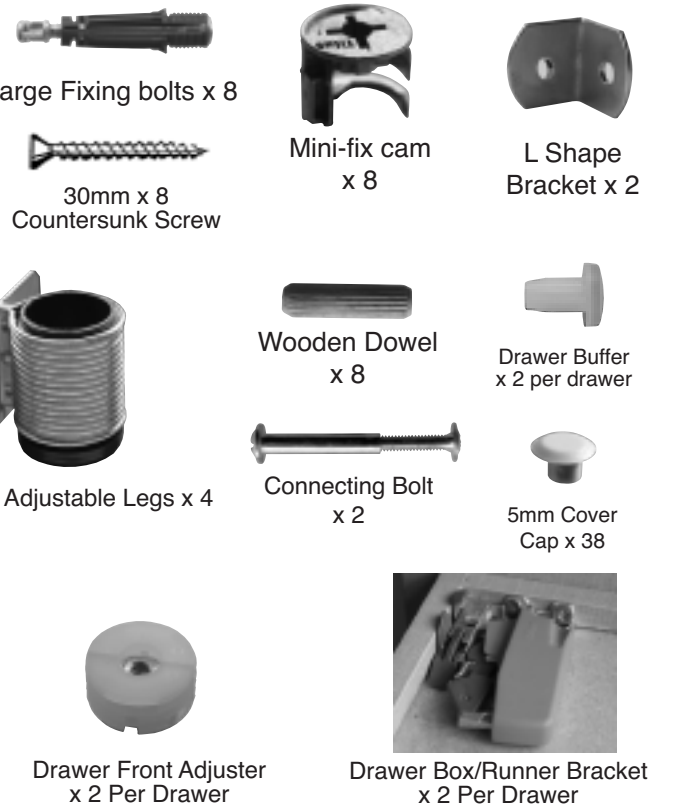

#### FIXING DRAWER FRONT TO DRAWER BOX

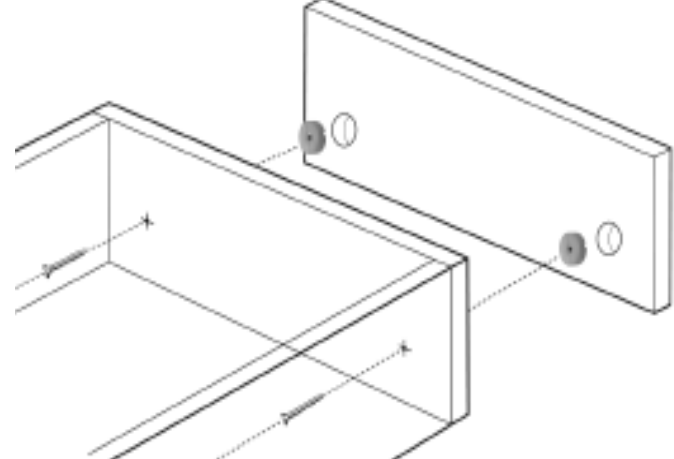

Firmly press drawer front adjusters into pre-bored holes in drawer front, bring drawer box into position and secure to drawer front with screws provided through pre-bored holes in drawer box. Turn drawer over and fit drawer runner brackets to underside of drawer box with screws provided as shown below.



It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


### SINGLE & DOUBLE DRAWER CHESTS- BEDSIDE/STANDARD HEIGHT.

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

#### GREY TEXTILE DRAWER SYSTEM

##### SINGLE/DOUBLE DRAWER CHESTS BEDSIDE/STANDARD HEIGHT

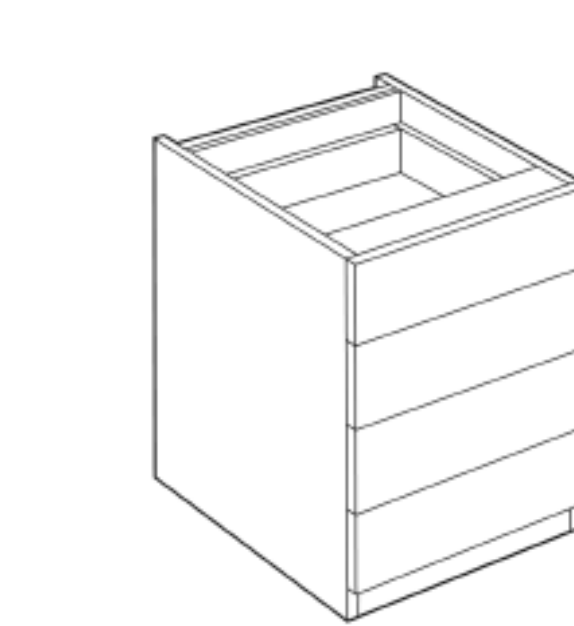


##### SINGLE/DOUBLE DRAWER CHESTS BEDSIDE/STANDARD HEIGHT

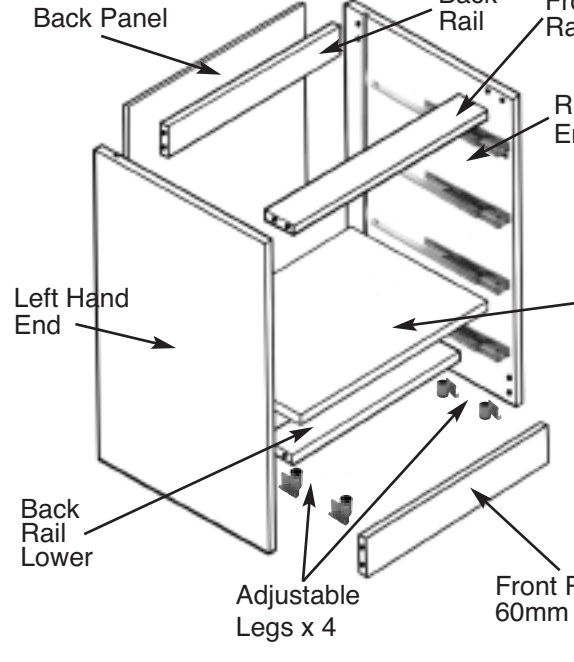

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

5

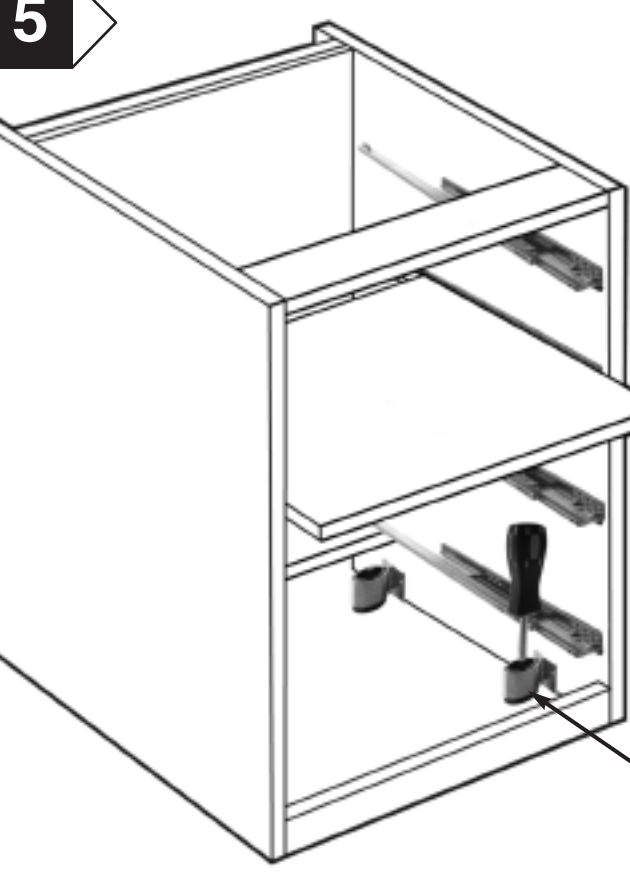

Place unit into position were it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail.




Levelling: To adjust legs insert flat head screwdriver, turn clockwise to raise, anti clockwise to lower.

3

Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring left hand end panel into position and secure to rails ensuring Mini-fix cams are locked fully.




Tap adjustable feet into gable end edge until flush and secure with screws.

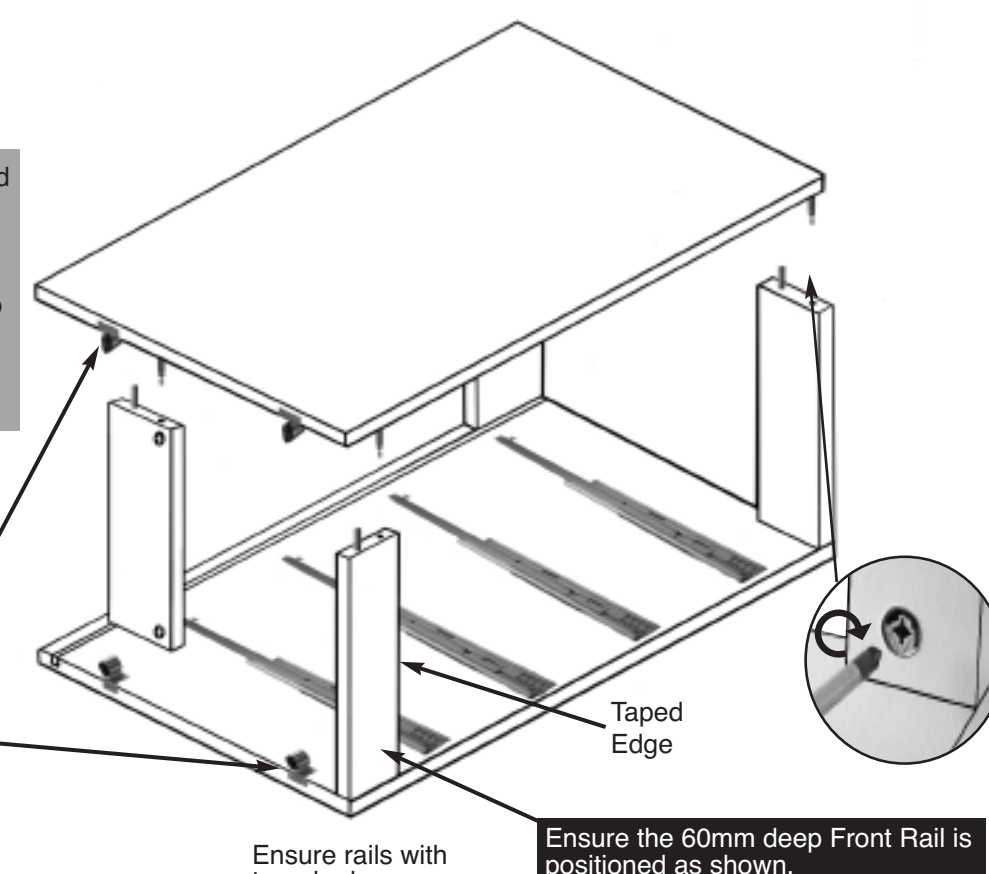

Ensure rails with taped edges are positioned as shown.

Ensure the 60mm deep Front Rail is positioned as shown. At the front of the unit.

6

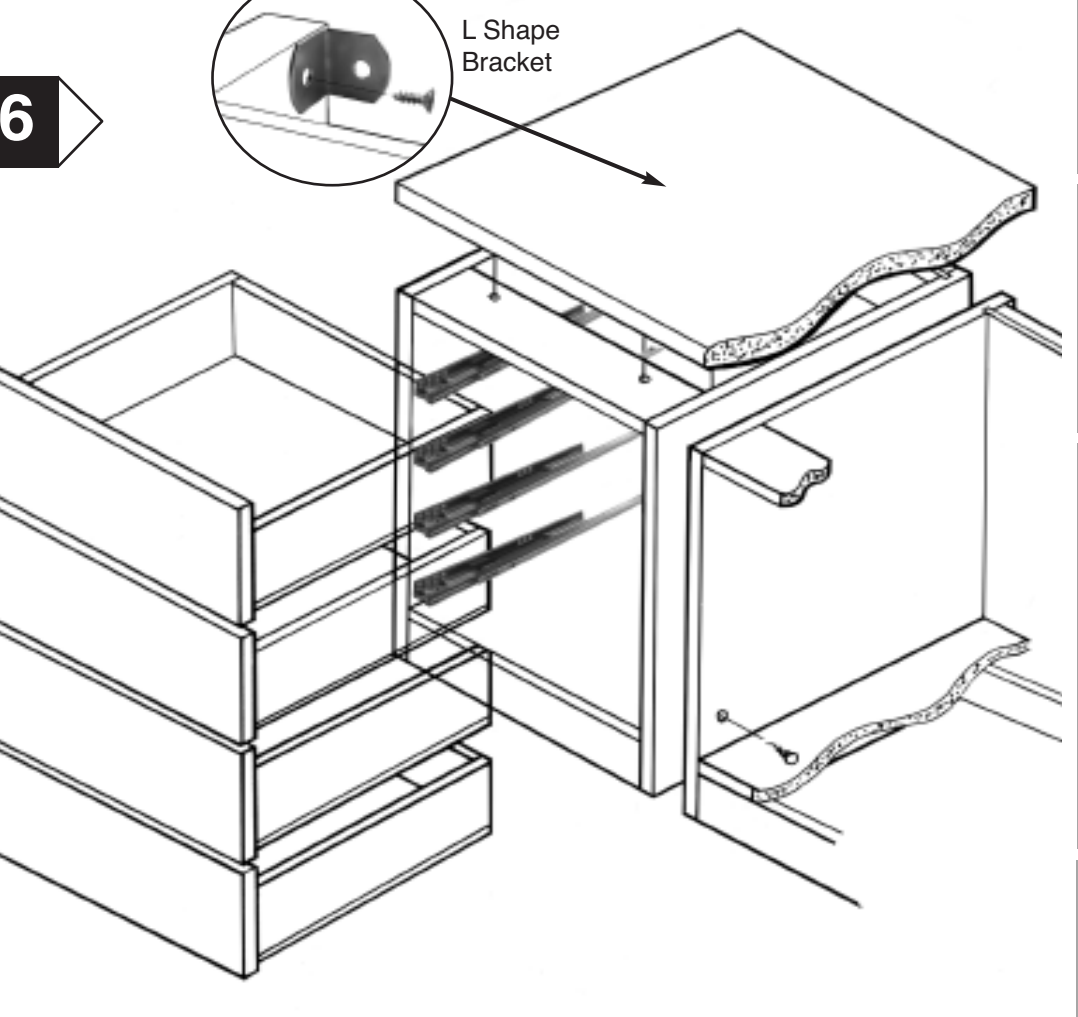

2 x 'L' shaped brackets are supplied for securing unit to wall or securing worktop to unit. If using brackets to secure worktop these will be placed in front of back panel. If using brackets to secure to wall position as indicated. Screws cannot be provided for securing to wall due to differing wall constructions.


Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in front rail where required. Bring screws into position and secure worktop. If unit is to be secured to an adjacent unit, 2 x connecting bolts are supplied. It is left for installer to decide on position and securing of connecting bolts.

Bring drawers into position and place on to fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.


Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).

2

Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: Back rail, front rail and back rail lower are 90mm deep, the front rail lower is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

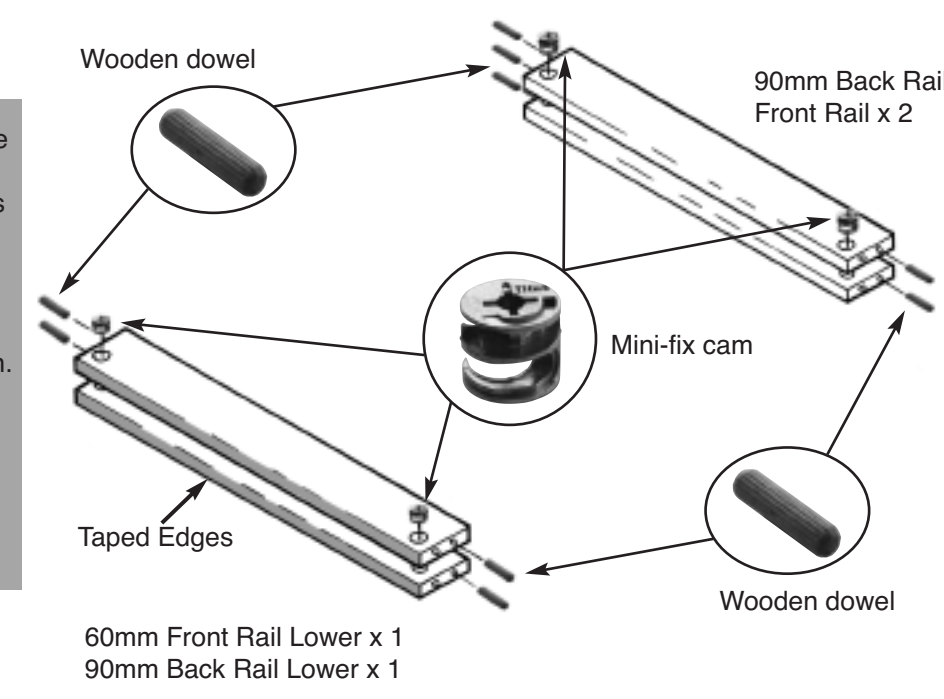

4

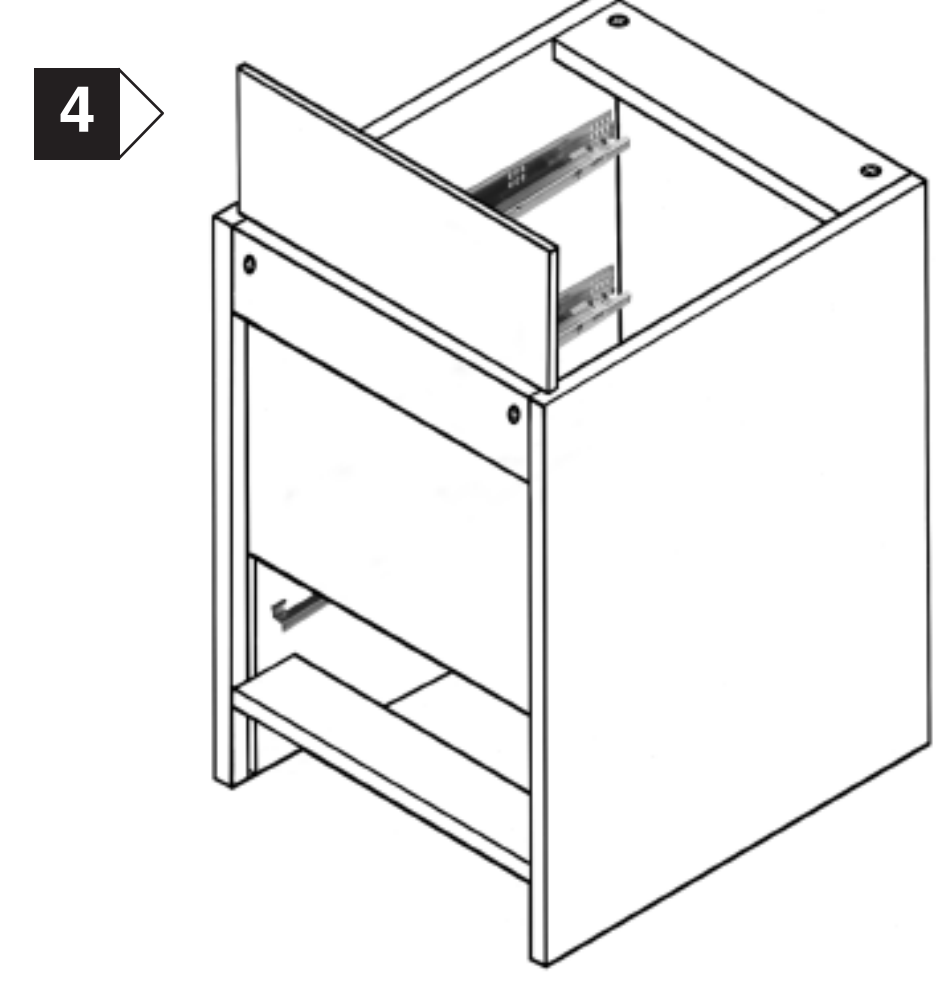

Bring unit into upright position and locate back panel into grooves in end panels.




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

#### CONTENTS CHECK LIST



#### DRAWER BRACKET

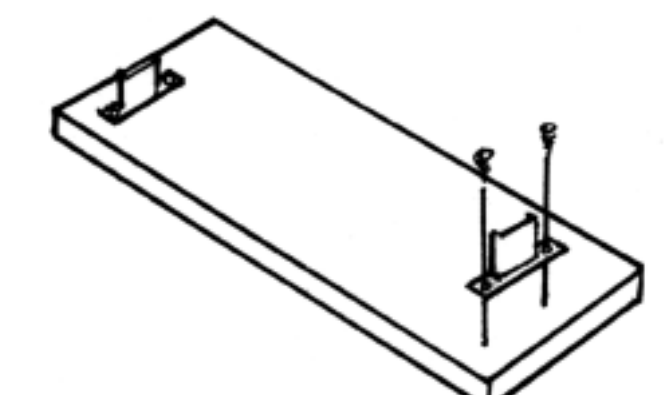

#### FIXING DRAWER BRACKET TO DRAWER FRONT

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that drawers should only be fitted once units have been installed.


### HOLCOMBE BEDROOM FURNITURE

### TALL BOYS DRAWER CHESTS


For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

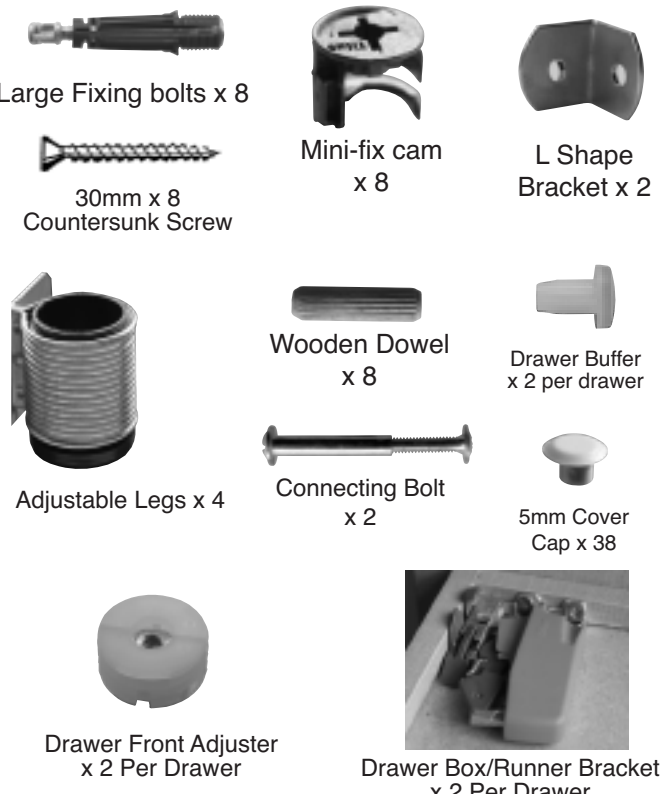

#### FIXING DRAWER FRONT TO DRAWER BOX

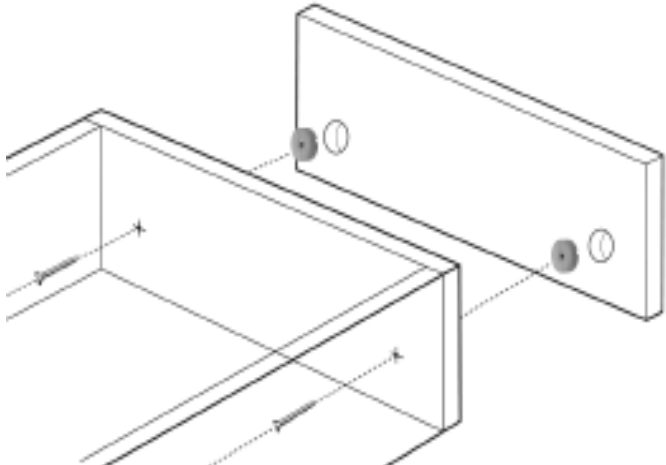

Firmly press drawer front adjusters into pre-bored holes in drawer front, bring drawer box into position and secure to drawer front with screws provided through pre-bored holes in drawer box. Turn drawer over and fit drawer runner brackets to underside of drawer box with screws provided as shown below.

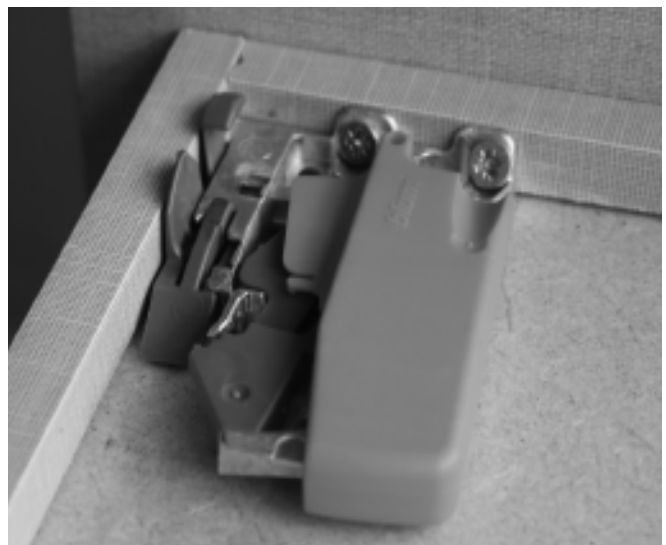

It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


### TALL BOYS DRAWER CHESTS

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


Note: End panels are handed, right or left. when assembling groove in panels should always face to rear.

#### GREY TEXTILE DRAWER SYSTEM

**TALL BOYS**  
There are multiple options of tall boys in various configurations. Shown is the 3 drawer pack. Assembly for other options is the same apart from the amount of drawers being fitted.

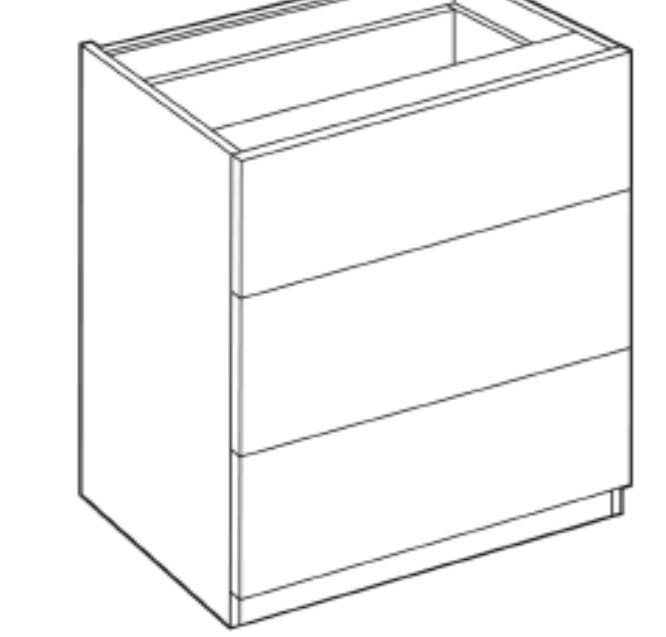

#### TALL BOYS

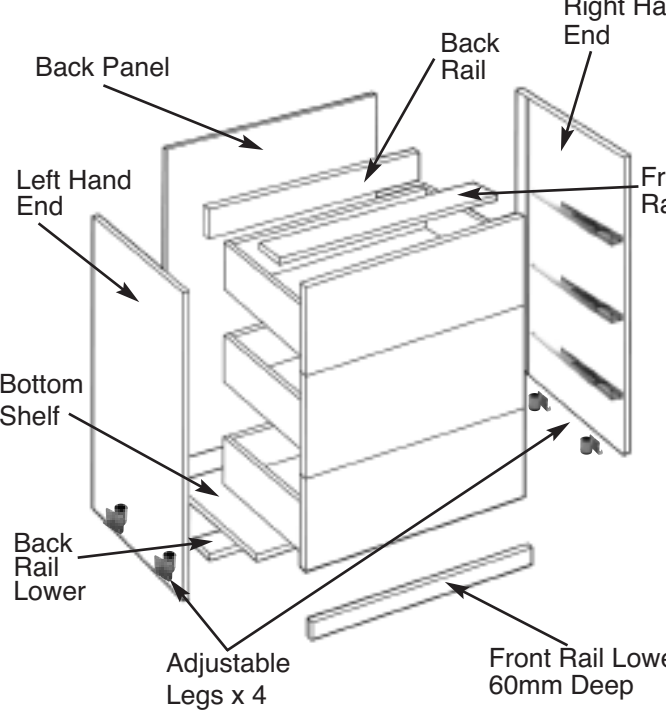


To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.



It is recommended that drawers should only be fitted once units have been installed.


1

Lay end panels face down on protective surface with groove facing upwards. Fix Large Fixing Bolts into positions indicated. Bring Drawer runners into position and fix to end panels into pre-bored holes with runner screws. Bring Drawer dampers into position on Left hand end panel and secure with screws provided. (Dampers can only be fitted to Left hand end panel).

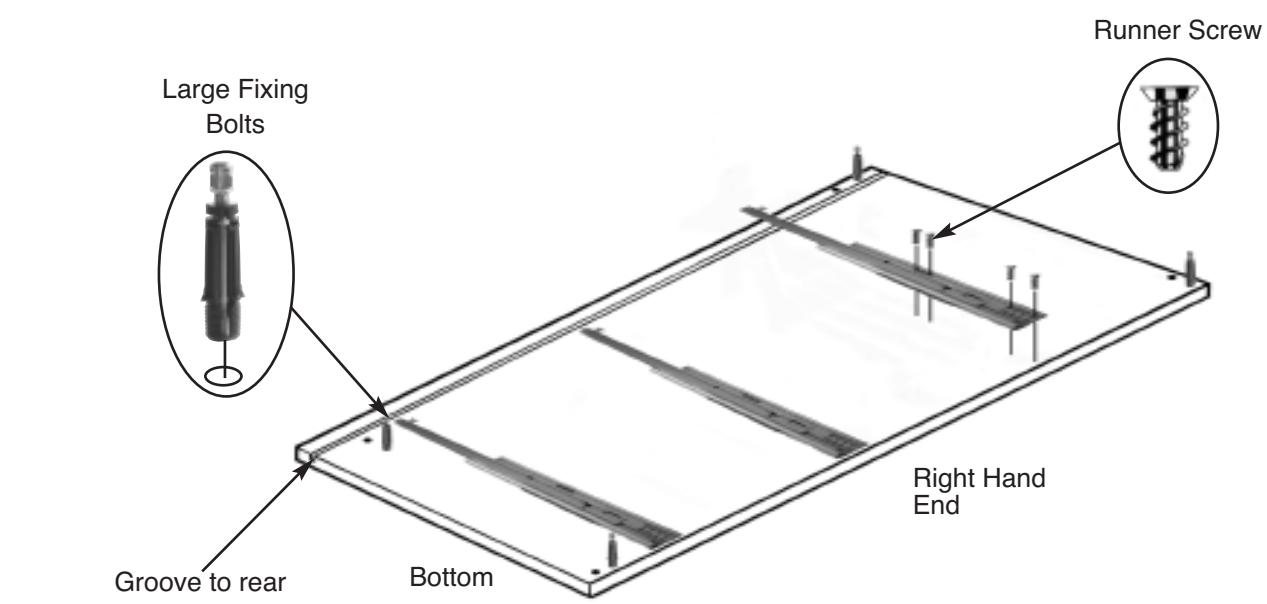


3

Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring left hand end panel into position and secure to rails ensuring Mini-fix cams are locked fully.

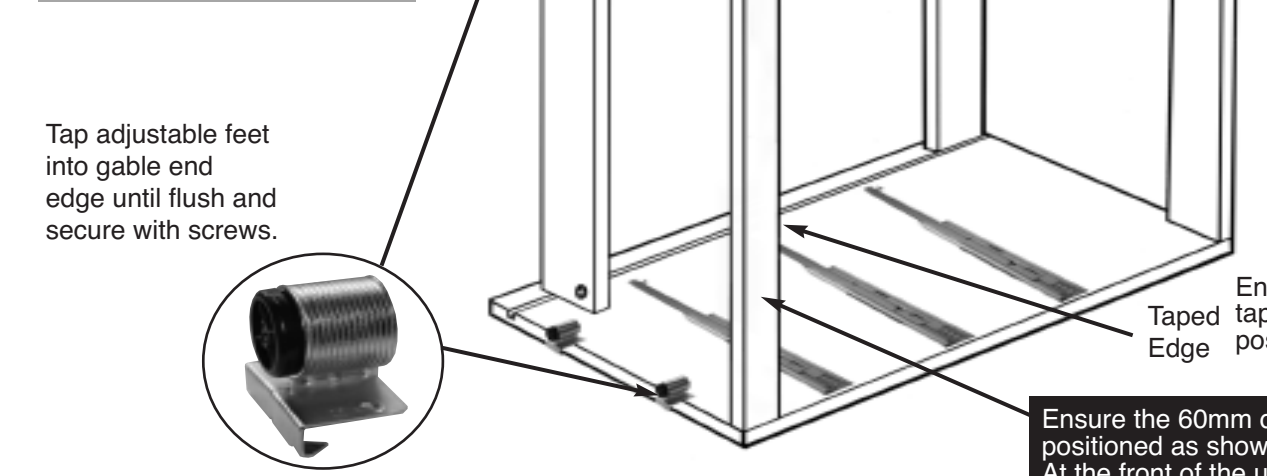


5

Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail.


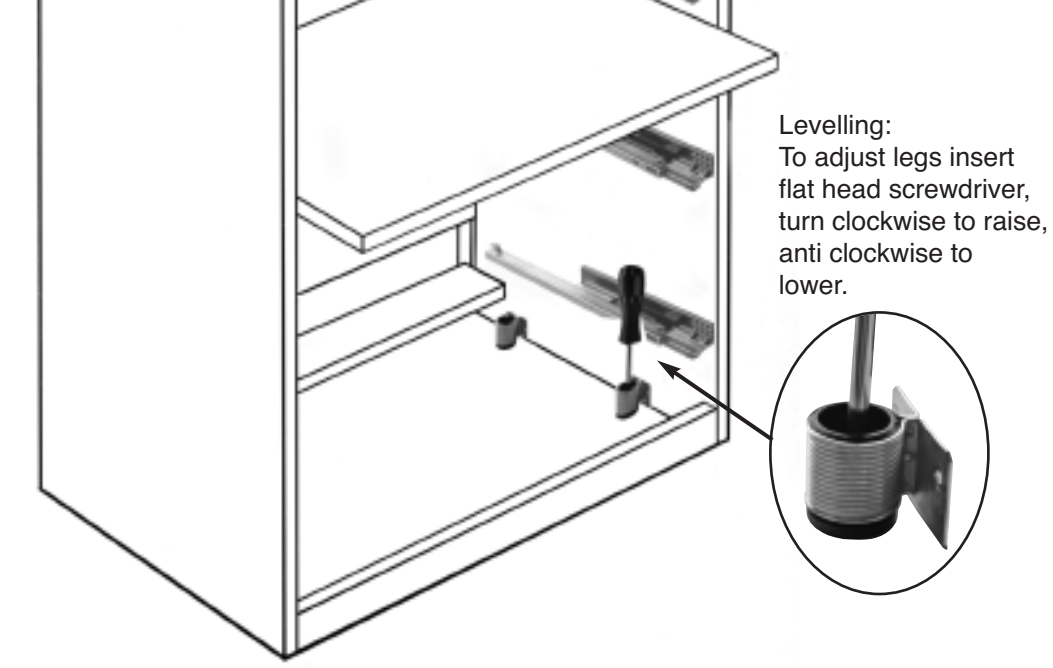


6

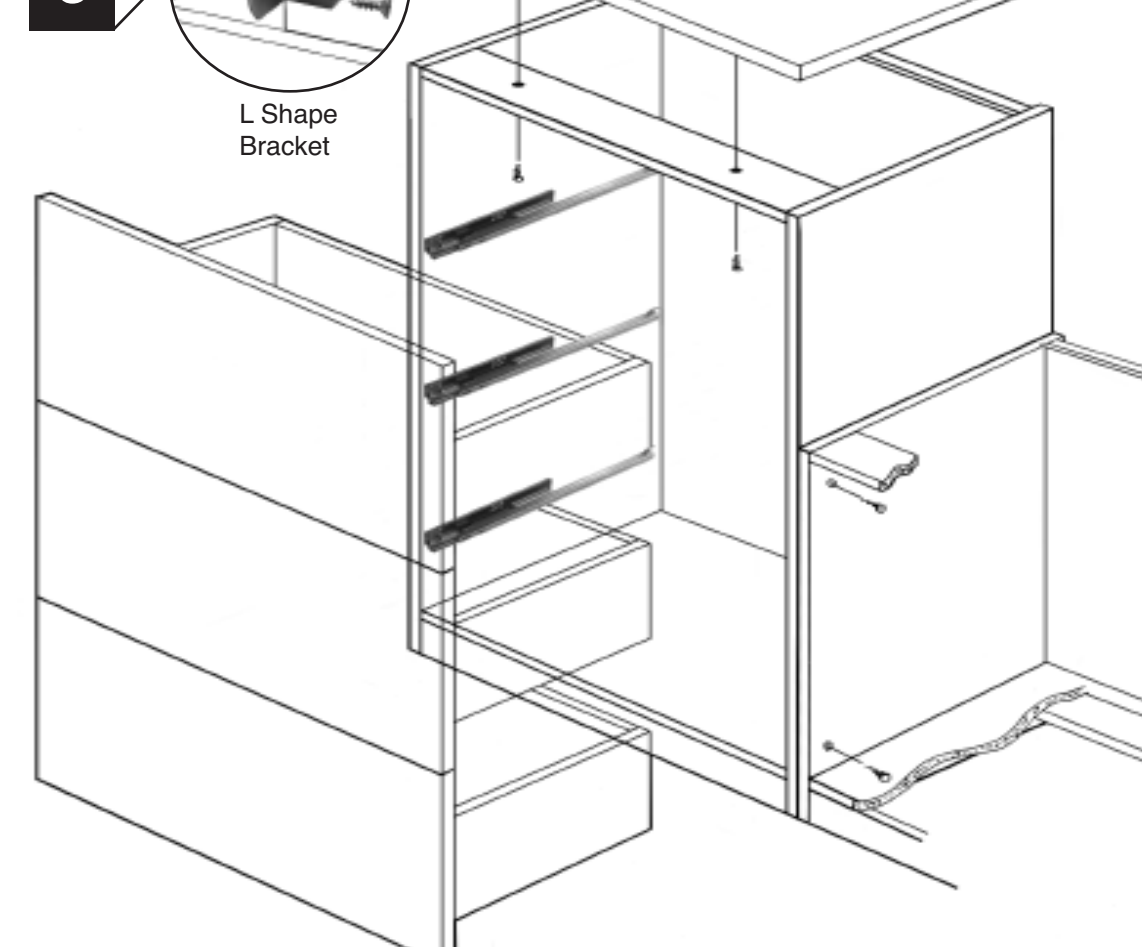

2

Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: Back rail, front rail and back rail lower are 90mm deep, the front rail lower is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

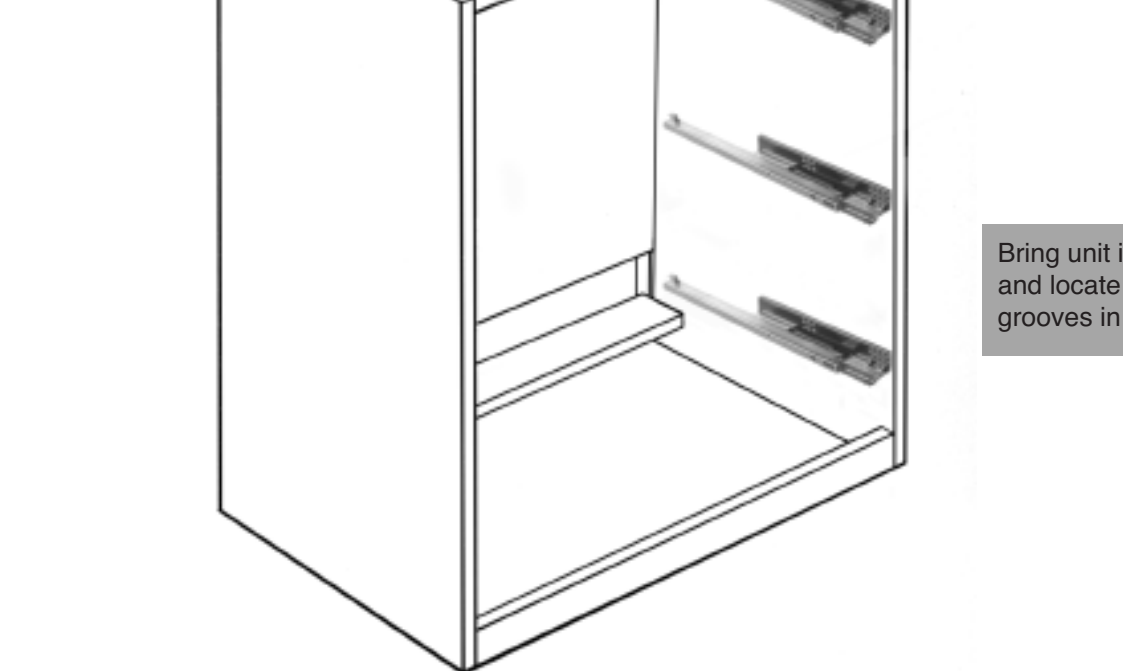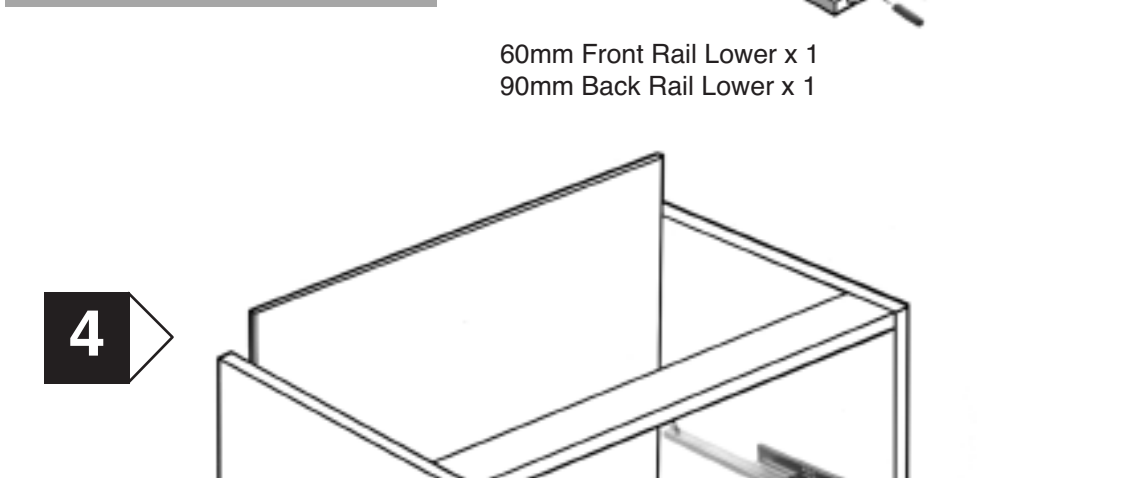

2 x 1' L' shaped brackets are supplied for securing unit to wall or securing worktop to unit. If using brackets to secure worktop these will be placed in front of back panel. If using brackets to secure to wall position as indicated. Screws cannot be provided for securing to wall due to differing wall constructions.


Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in front rail where required. Bring screws into position and secure worktop. If unit is to be secured to an adjacent unit, 2 x connecting bolts are supplied. It is left for installer to decide on position and securing of connecting bolts.

Bring drawers into position and place on to fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).


1

Lay end panels face down on protective surface with groove facing upwards. Fix Large Fixing Bolts into positions indicated. Bring Drawer runners into position and fix to end panels into pre-bored holes with runner screws. Bring Drawer dampers into position on Left hand end panel and secure with screws provided. (Dampers can only be fitted to Left hand end panel).

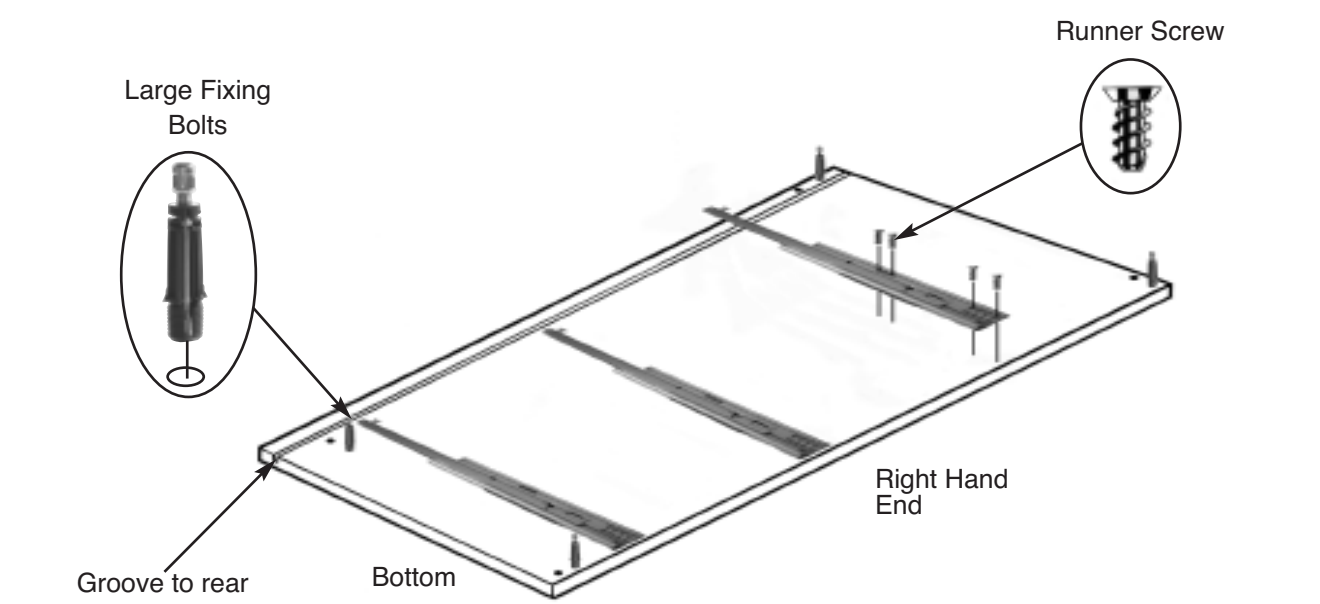


3

Bring all rails into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. Bring left hand end panel into position and secure to rails ensuring Mini-fix cams are locked fully.

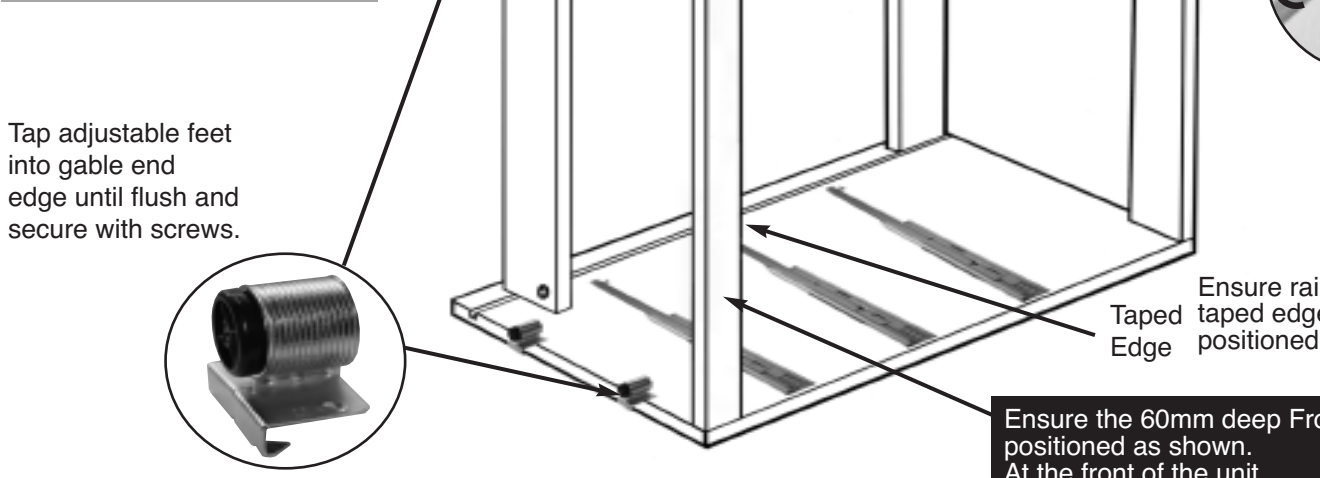


5

Place unit into position where it is to be located. Level unit by adjusting height in adjustable feet. Once unit is levelled place bottom shelf into position on back rail and front rail.


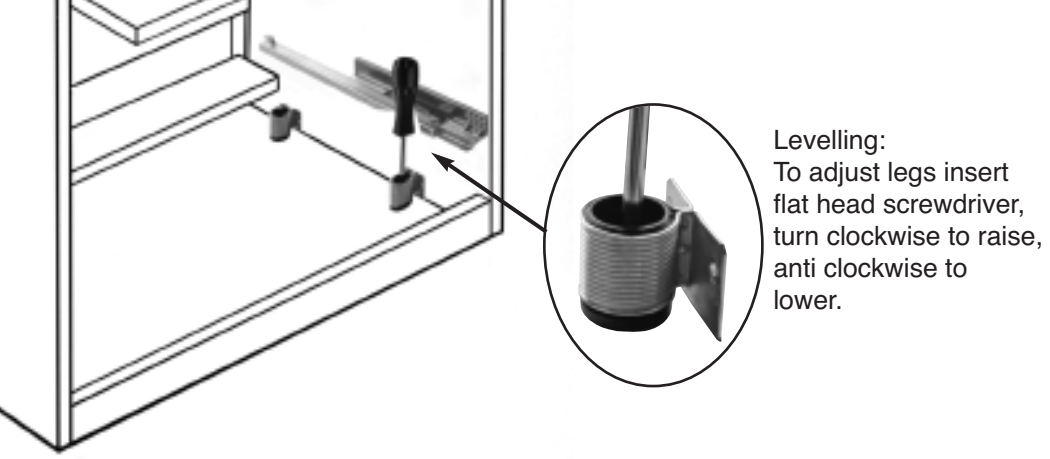


6

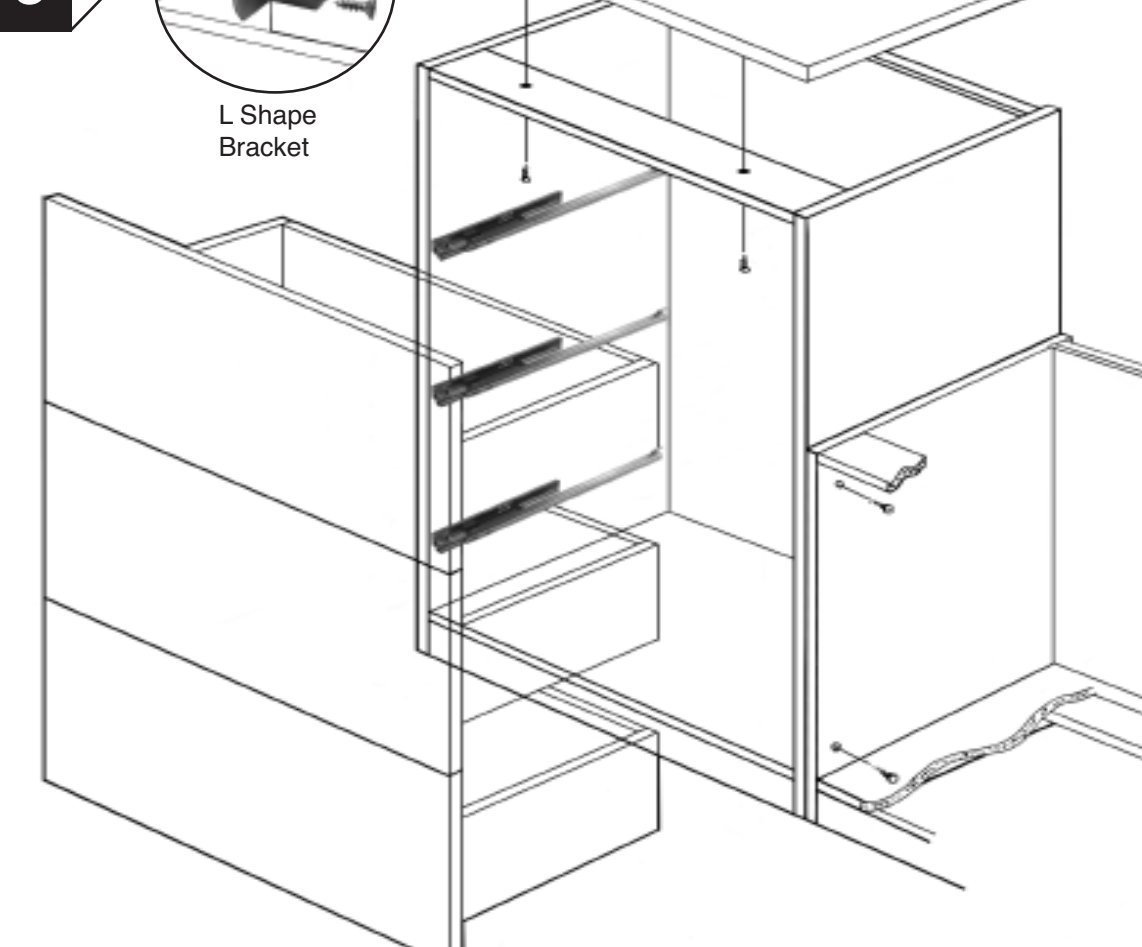

2

Lay Rails face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: Back rail, front rail and back rail lower are 90mm deep, the front rail lower is 60mm deep. Always ensure the front rail is placed in the correct position when assembling.

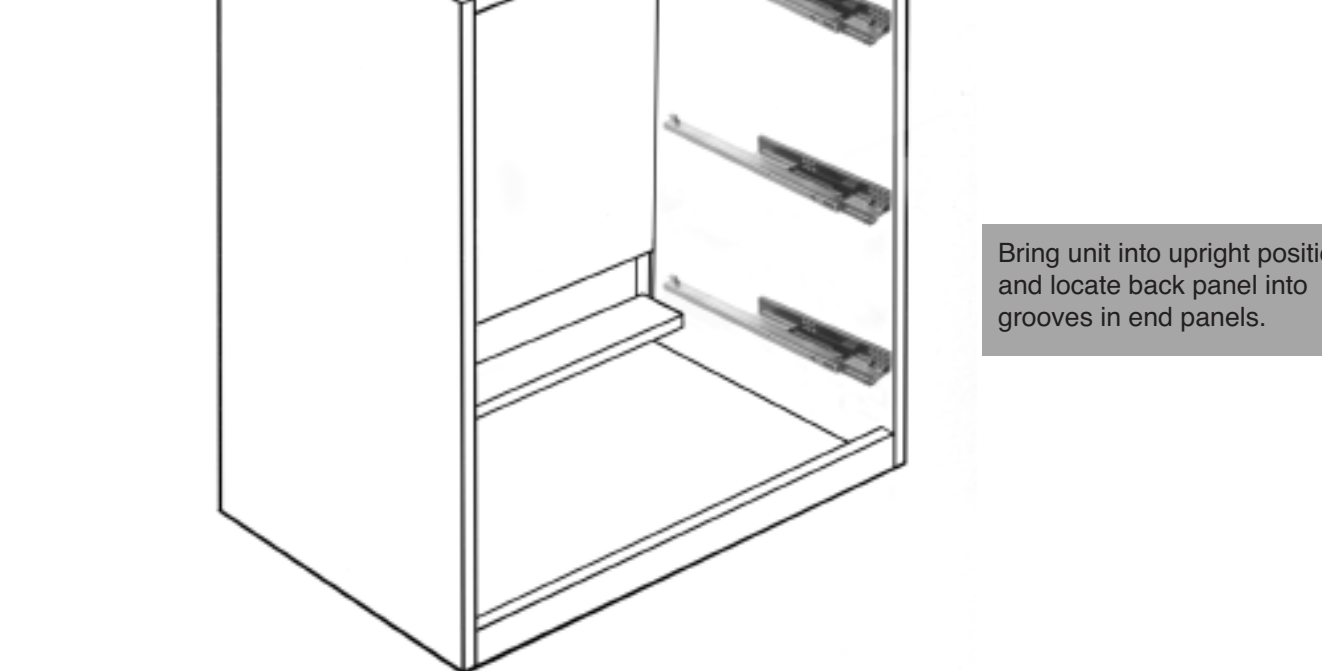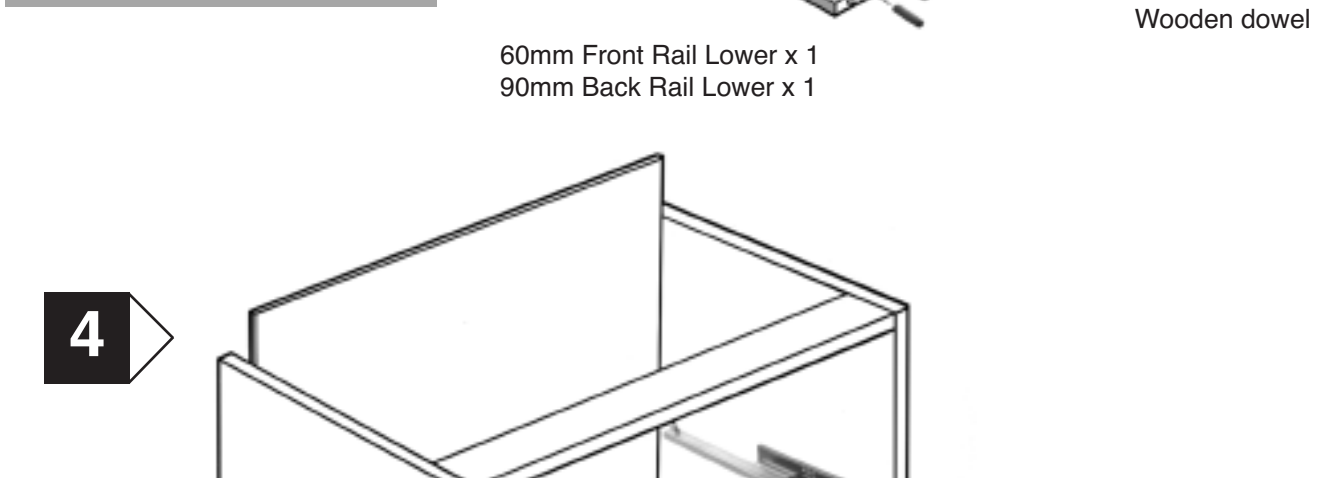

2 x 1' L' shaped brackets are supplied for securing unit to wall or securing worktop to unit. If using brackets to secure worktop these will be placed in front of back panel. If using brackets to secure to wall position as indicated. Screws cannot be provided for securing to wall due to differing wall constructions.

Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in front rail where required. Bring screws into position and secure worktop. If unit is to be secured to an adjacent unit, 2 x connecting bolts are supplied. It is left for installer to decide on position and securing of connecting bolts.

Bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. Repeat this action with each drawer. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

Plant on Panel(s). Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).








Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

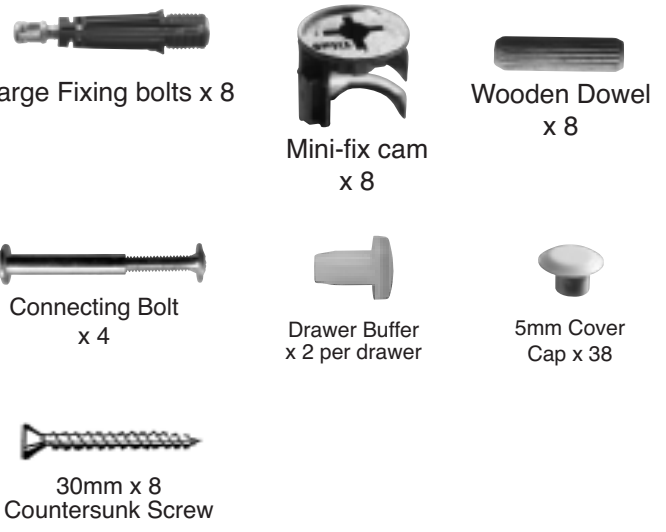

#### DRAWER BRACKET



#### FIXING DRAWER BRACKET TO DRAWER FRONT

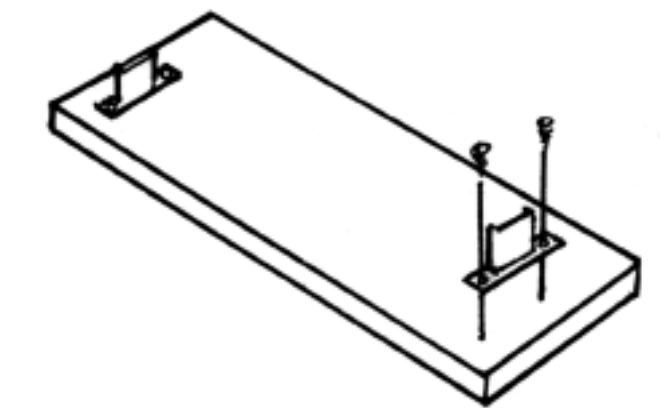

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


### DRESSING TABLE & KNEE HOLES

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

#### ANTARO DRAWER SYSTEM


##### DRESSING TABLE & KNEE HOLES

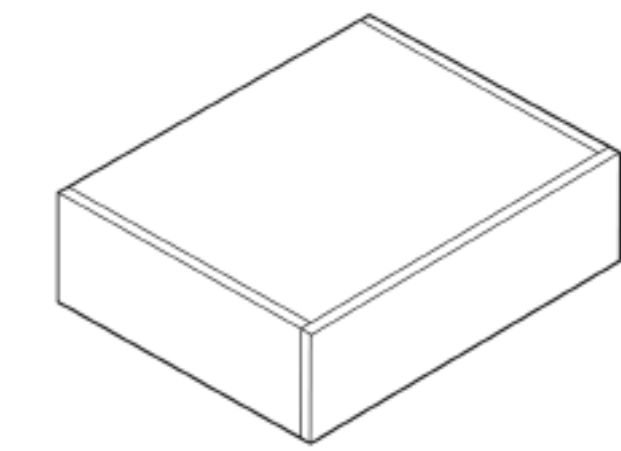


##### DRESSING TABLE & KNEE HOLES

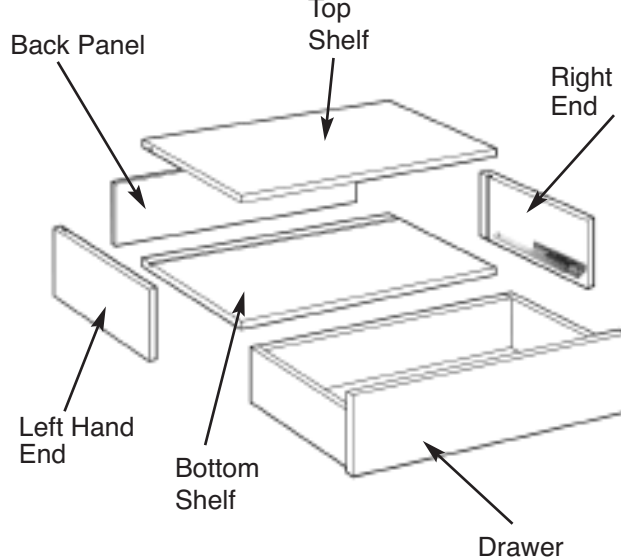


1 Lay end panels face down on protective surface with groove facing upwards. Fix Large Fixing Bolts into positions indicated. Bring Drawer runners into position and fix to end panels into pre-bored holes with runner screws. Repeat operation for Left hand end panel.

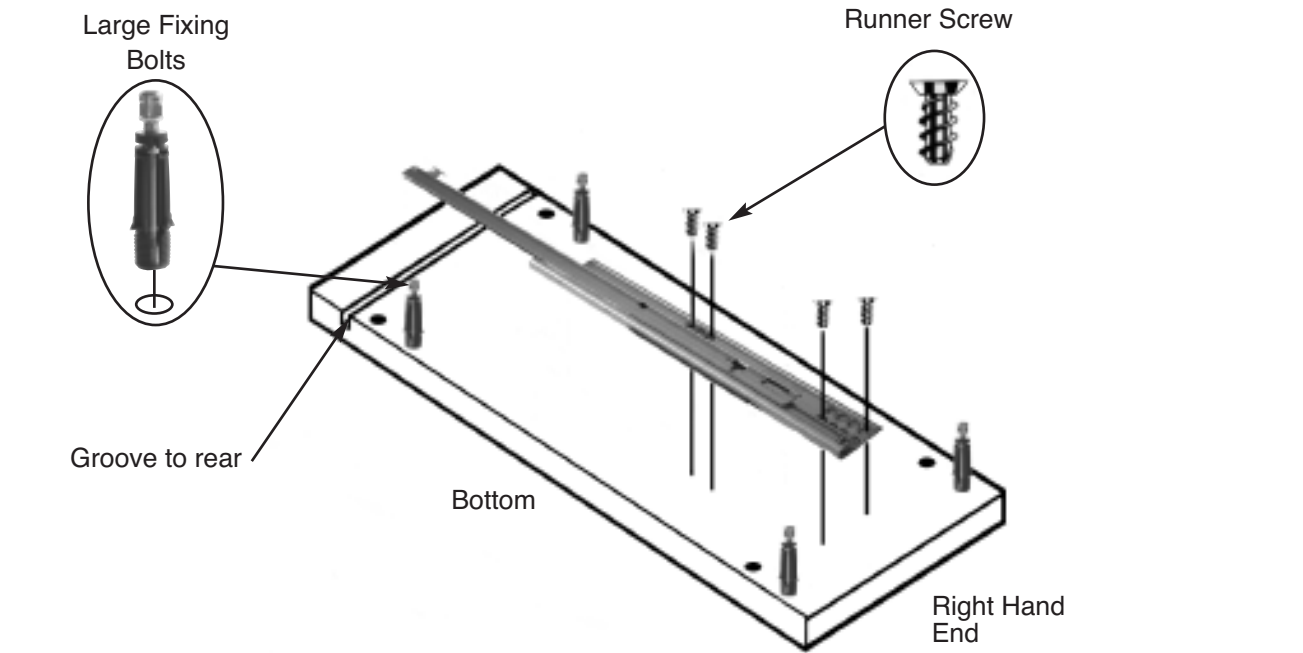


3 Bring top & bottom shelves into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. NB. Ensure grooves in shelves are facing inwards.

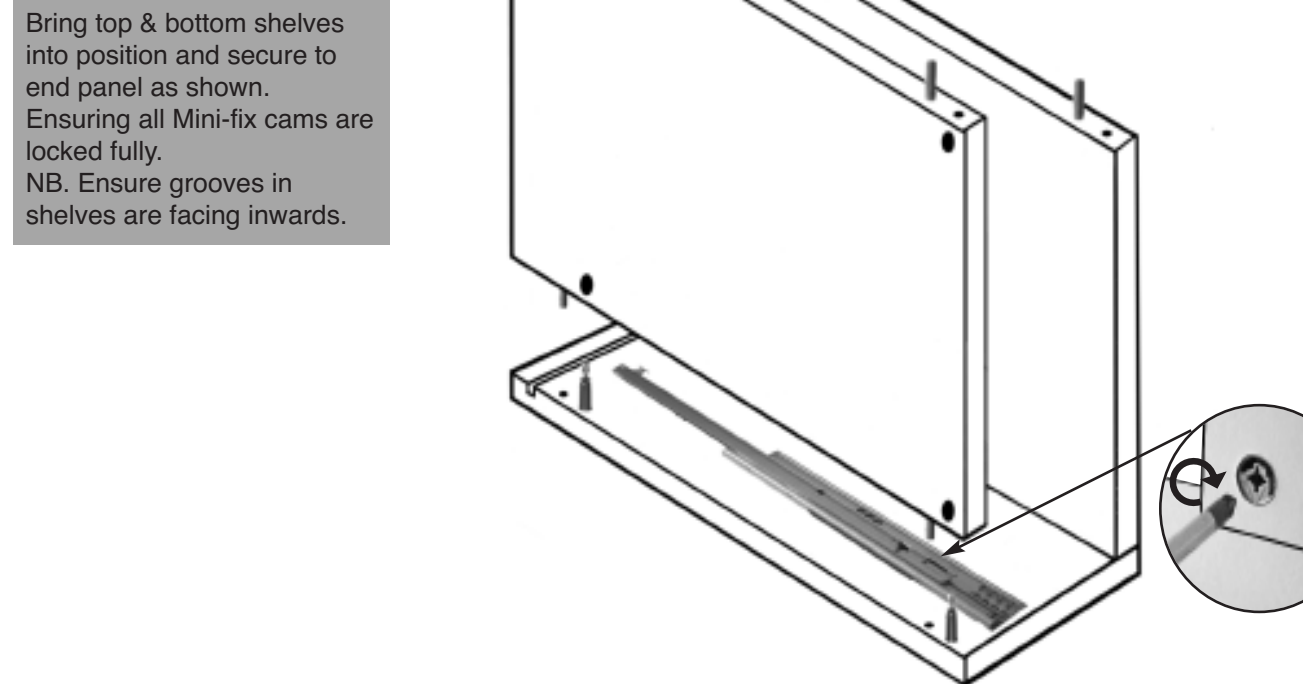


5

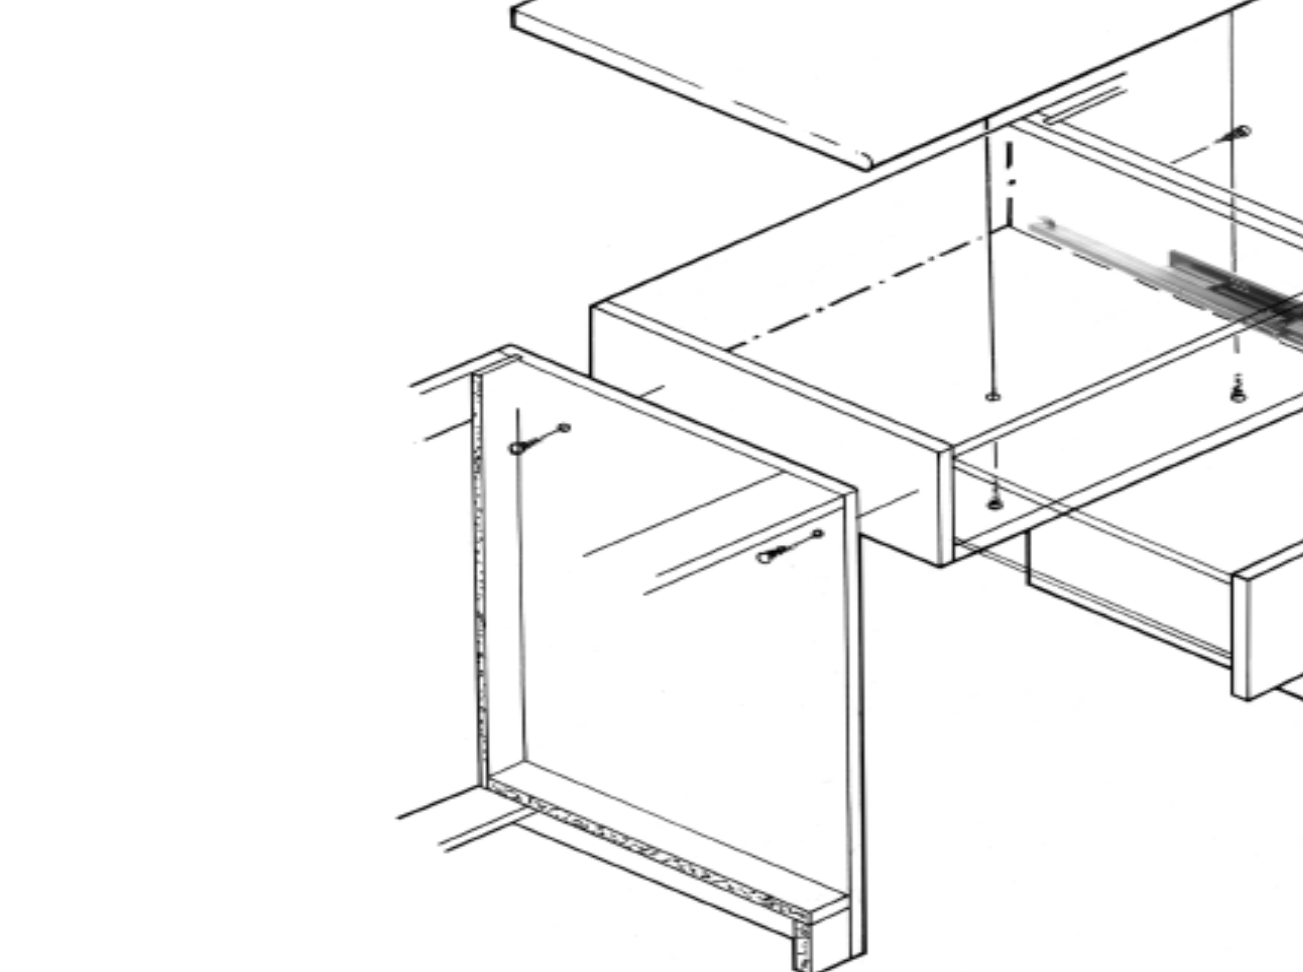

2 Lay Top & Bottom shelves face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in.

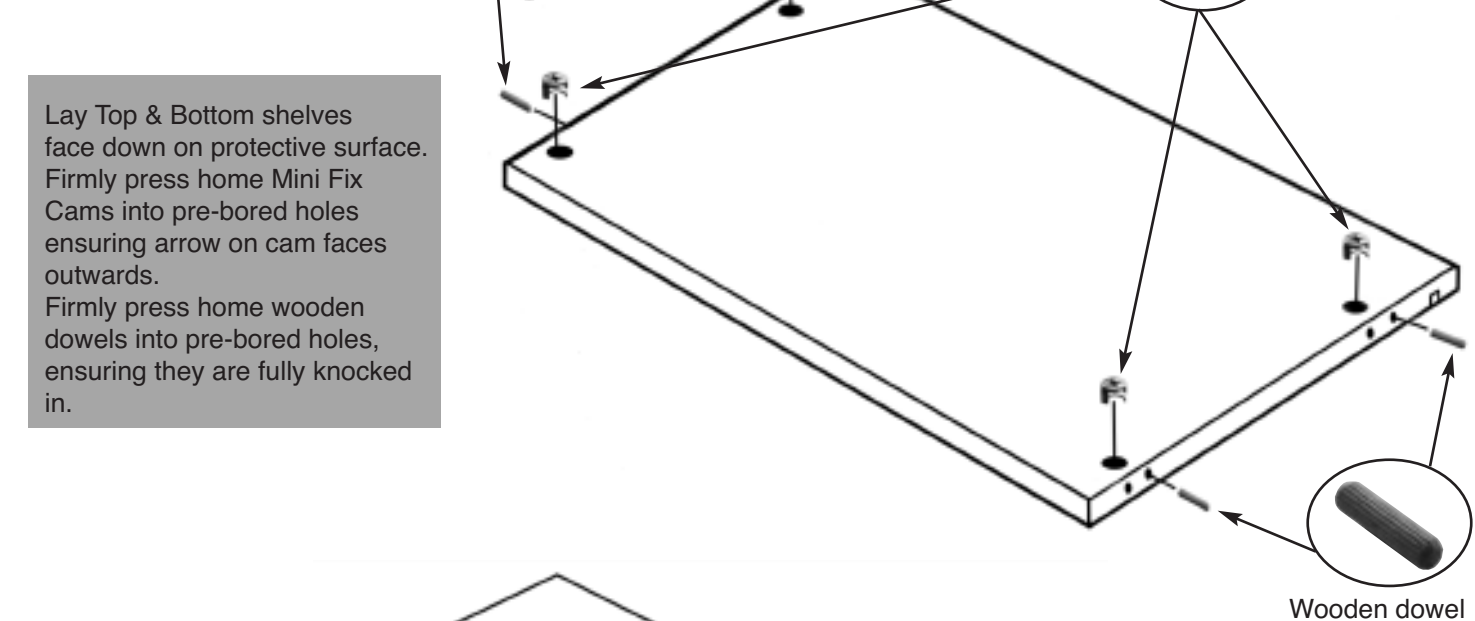

4

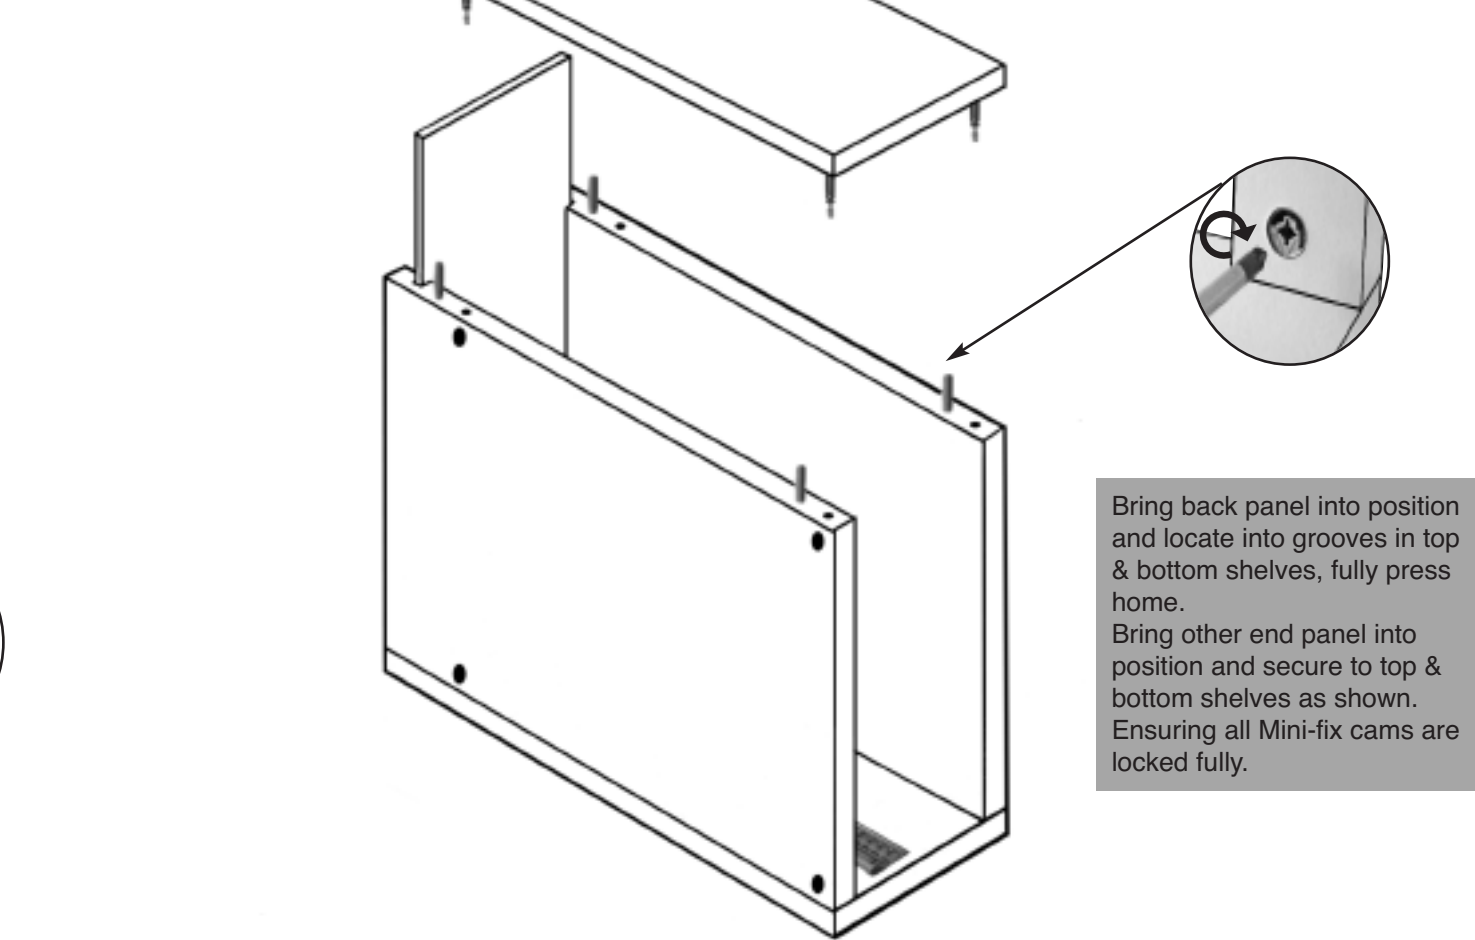


The dressing table should be positioned between two units and secured with either connecting bolts (these are supplied) or screws. It is left to the installer to decide on the position of the holes which require drilling to secure the units together. Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in top shelf where required. Bring screws into position and secure worktop.


Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

#### CONTENTS CHECK LIST

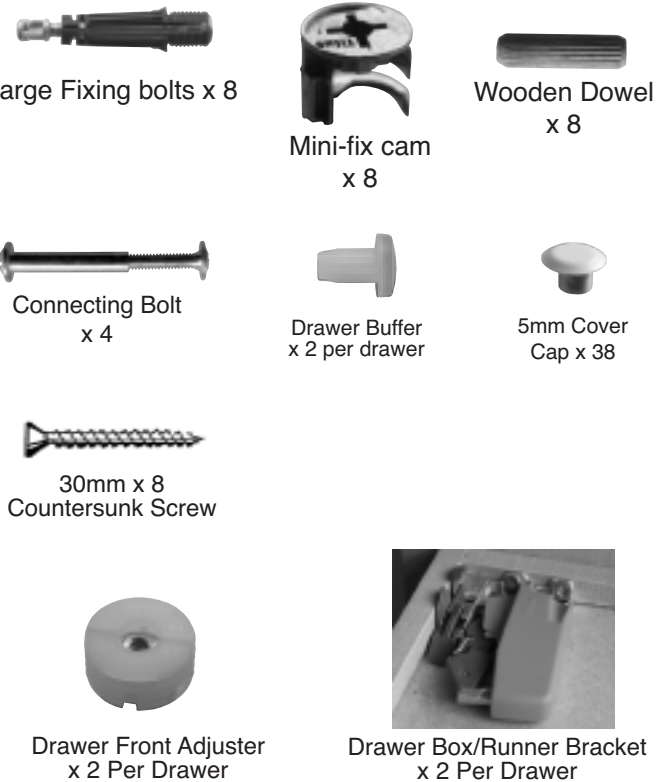

#### FIXING DRAWER FRONT TO DRAWER BOX

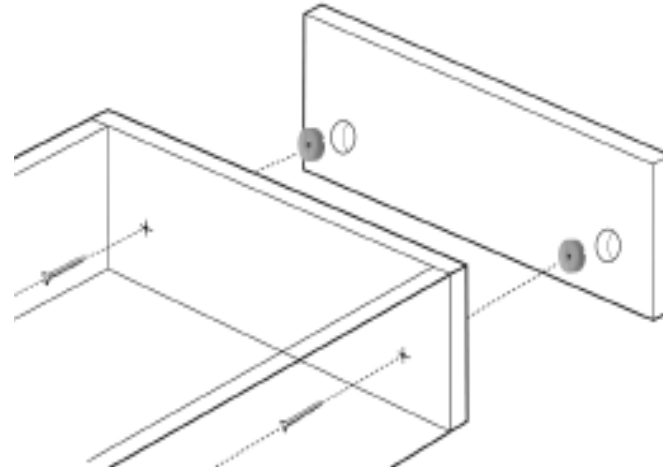

Firmly press drawer front adjusters into pre-bored holes in drawer front, bring drawer box into position and secure to drawer front with screws provided through pre-bored holes in drawer box. Turn drawer over and fit drawer runner brackets to underside of drawer box with screws provided as shown below.



It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


### DRESSING TABLE & KNEE HOLES

For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)


Note: End panels are handed, right or left, when assembling groove in panels should always face to rear.

#### GREY TEXTILE DRAWER SYSTEM

##### DRESSING TABLE & KNEE HOLES

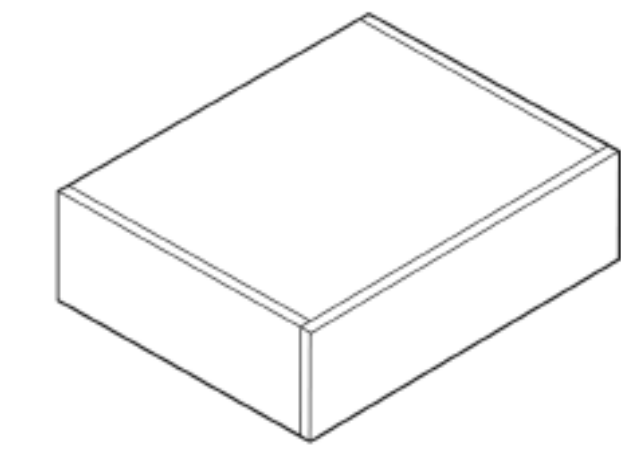


##### DRESSING TABLE & KNEE HOLES

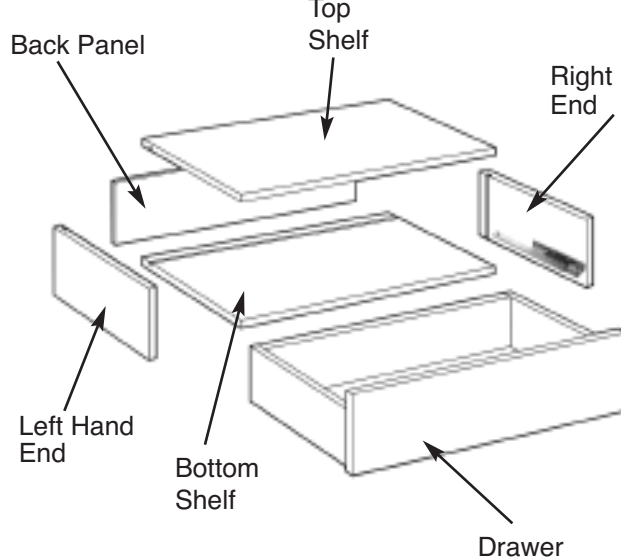


To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.


1 Lay end panels face down on protective surface with groove facing upwards. Fix Large Fixing Bolts into positions indicated. Bring Drawer runners into position and fix to end panels into pre-bored holes with runner screws. Repeat operation for Left hand end panel.

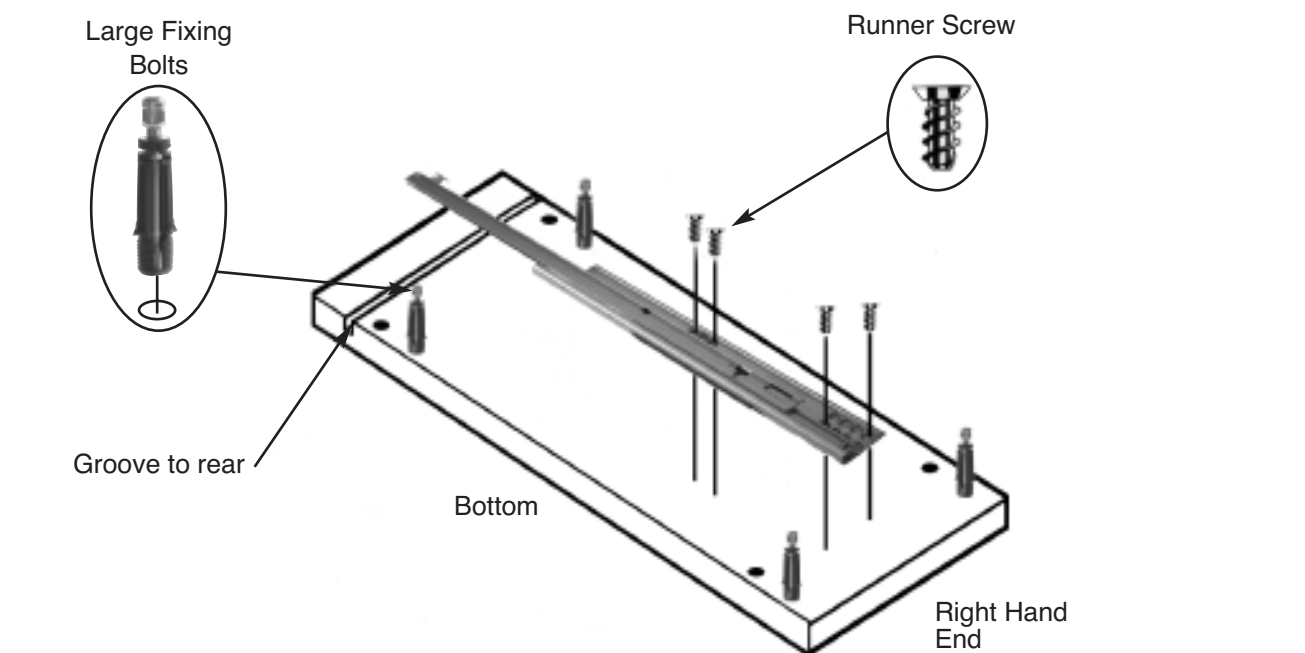


3 Bring top & bottom shelves into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully. NB. Ensure grooves in shelves are facing inwards.

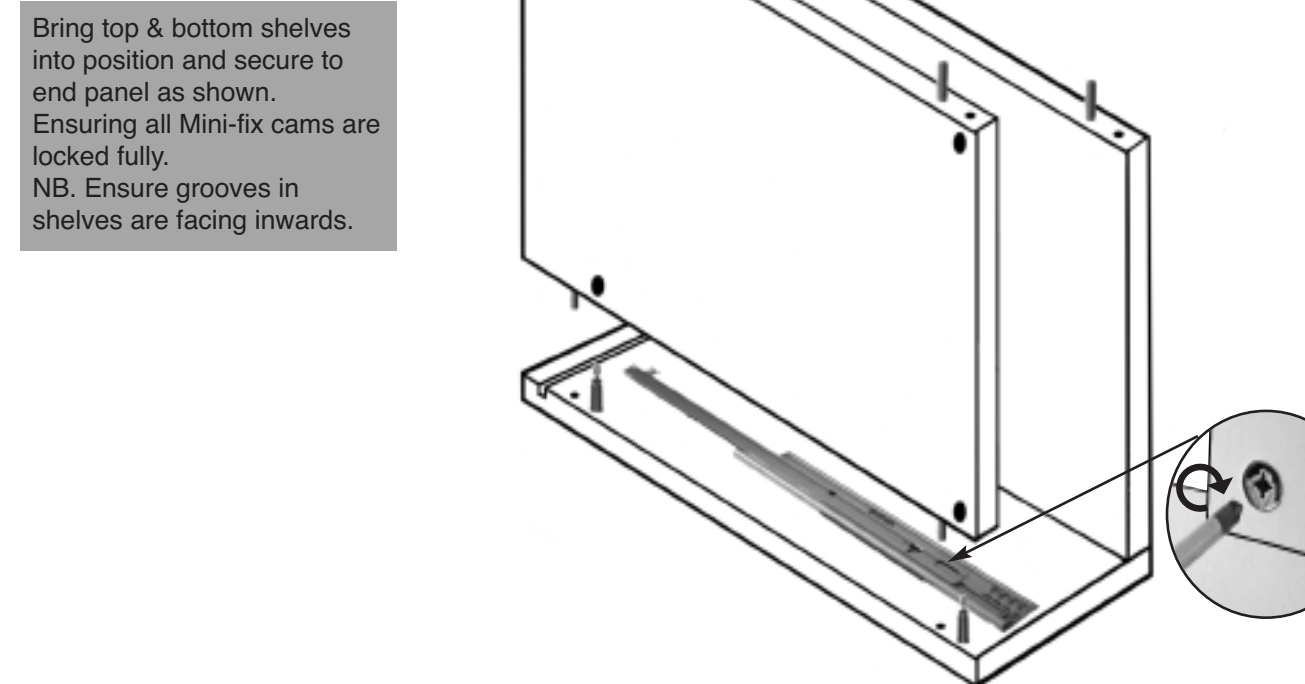


5

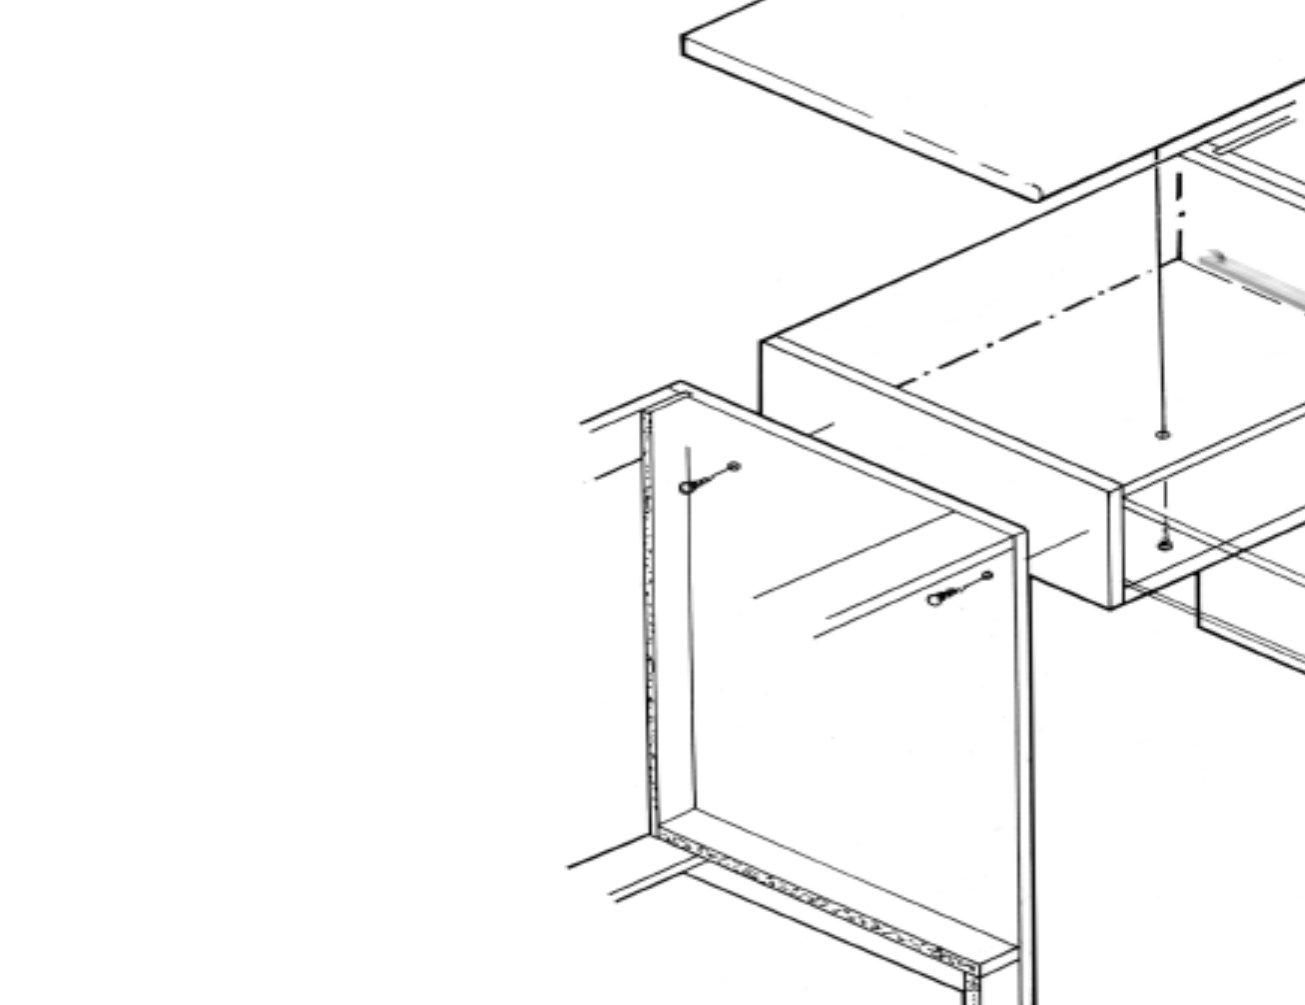

2 Lay Top & Bottom shelves face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in.

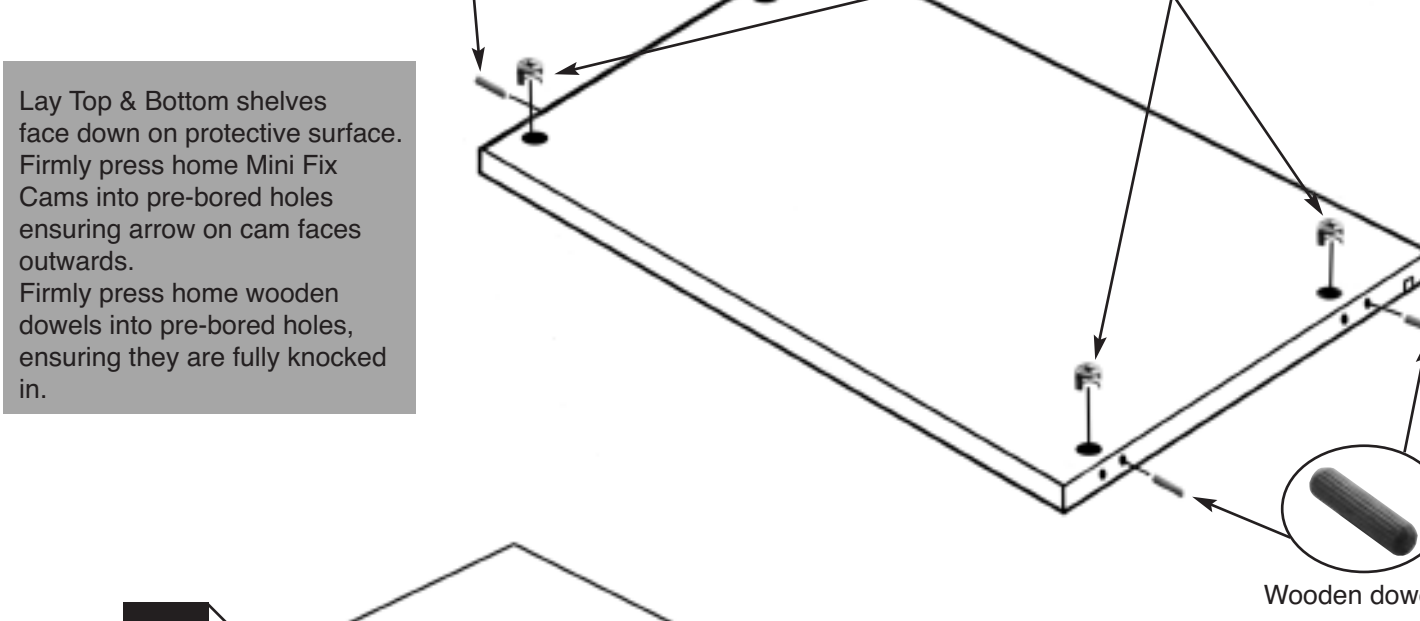

4

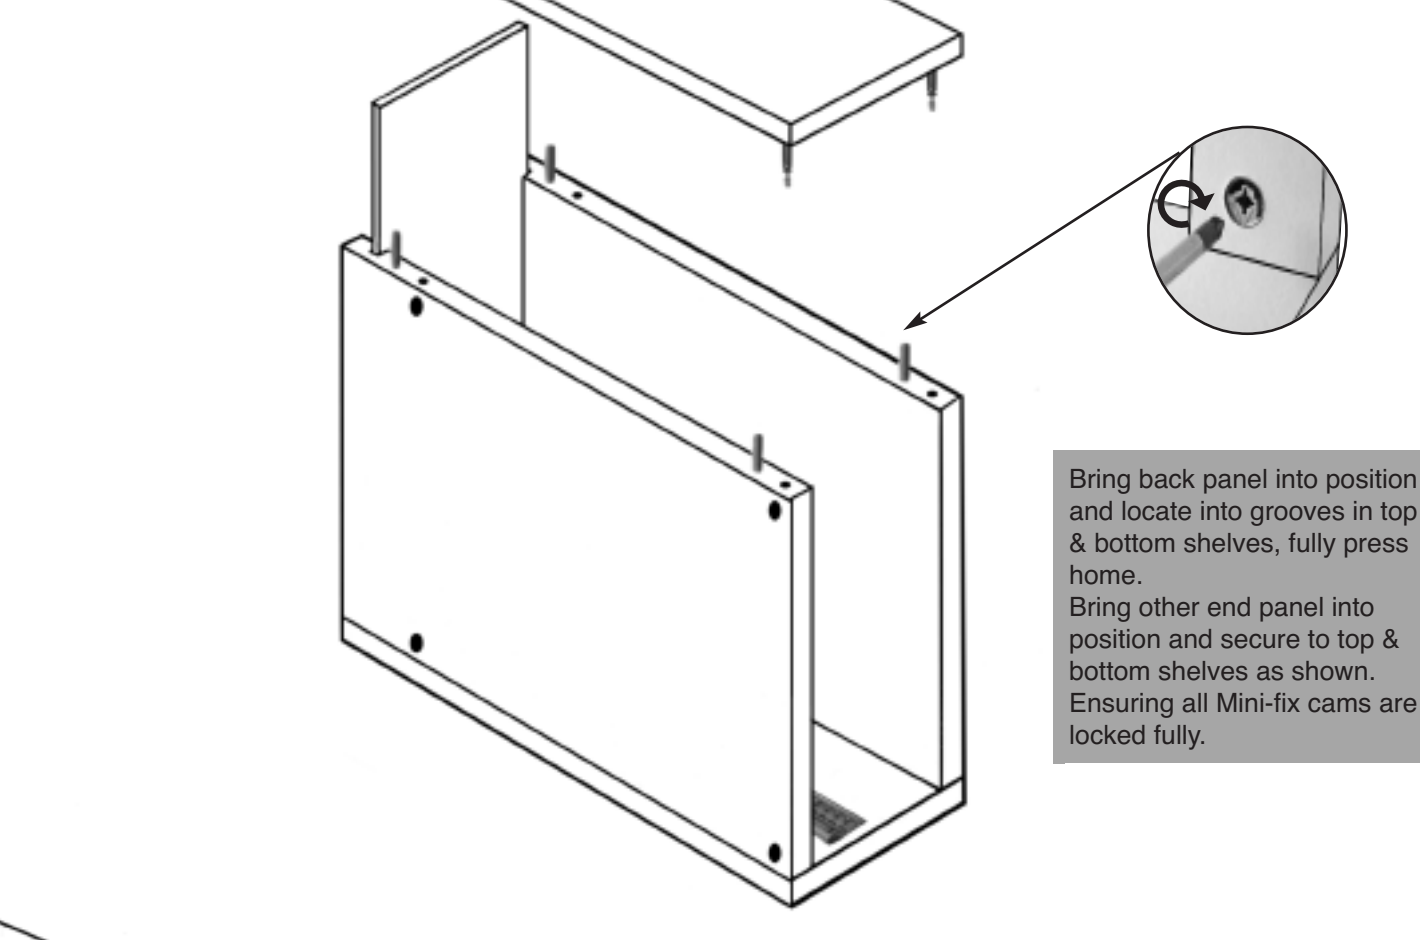


The dressing table should be positioned between two units and secured with either connecting bolts (these are supplied) or screws. It is left to the installer to decide on the position of the holes which require drilling to secure the units together. Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in top shelf where required. Bring screws into position and secure worktop.

Once drawer fronts are fitted to drawer boxes bring drawers into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.



Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.


#### CONTENTS CHECK LIST

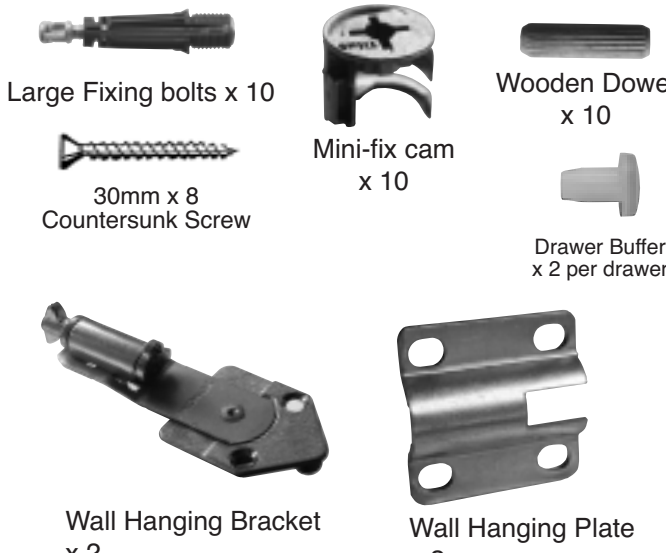

#### DRAWER BRACKET



#### FIXING DRAWER BRACKET TO DRAWER FRONT

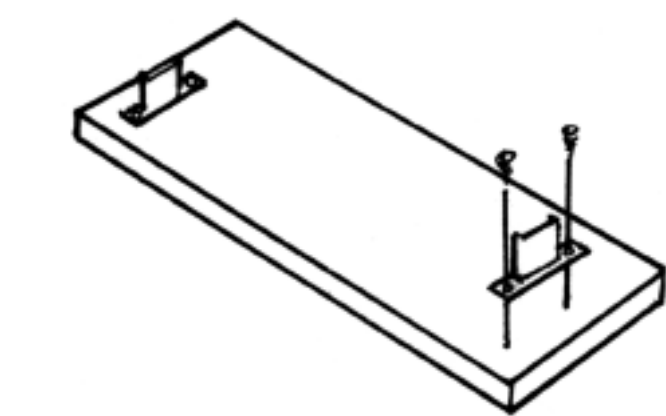

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.


It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


Note: End panels are handed, right or left. when assembling always ensure correct handing has been selected.

#### ANTARO DRAWER SYSTEM

##### FLOATING BEDSIDE CABINET WITH DRAWER

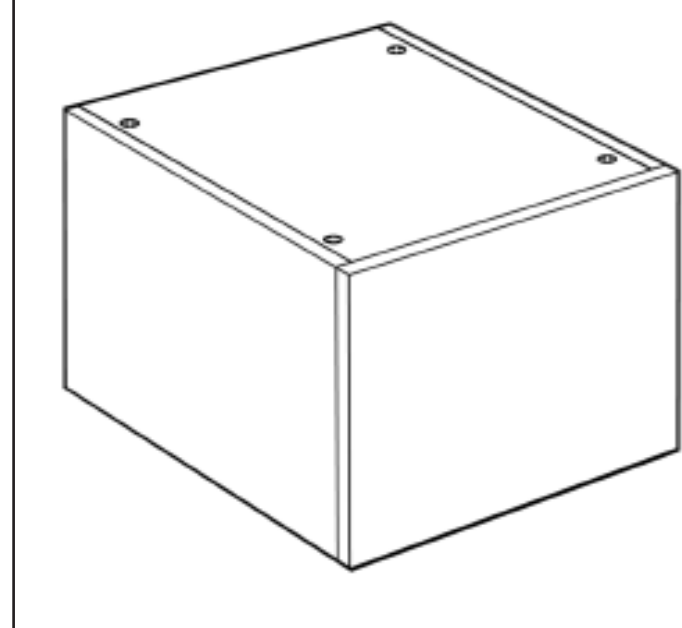

##### FLOATING BEDSIDE CABINET WITH DRAWER

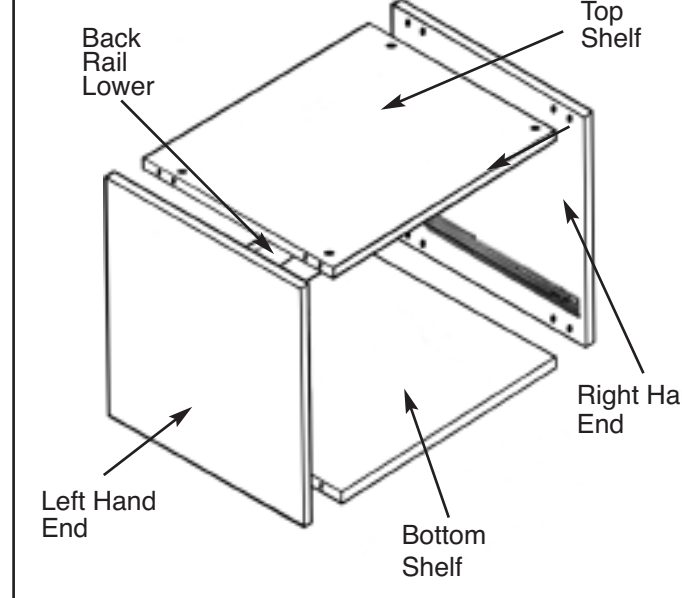


##### WALL HANGING BRACKET FIXING & ADJUSTMENT


1 Locate the arms of the wall hanging brackets through the slots in wall hanging plates, firmly push home.



2 Turn the arm 'B' through 90° to secure.

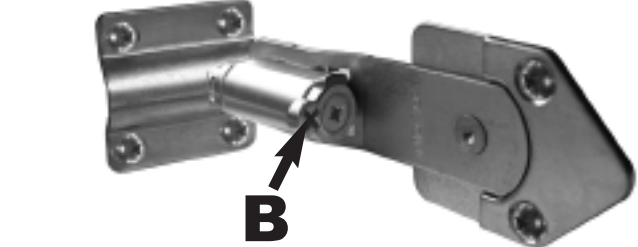


3 Turn the screw in the arm 'C', clockwise, to fully tighten.

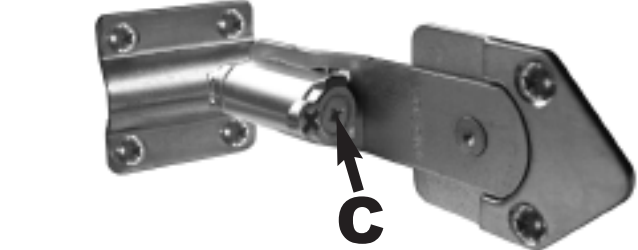


1

Lay end panels face down on protective surface. Fix Large Fixing Bolts into positions indicated. Bring Drawer runner into position and fix to end panel into pre-bored holes with runner screws. Bring Wall hanging bracket into position, firmly press home into pre-bored holes, secure with screws provided. Repeat operation for Left hand end panel.

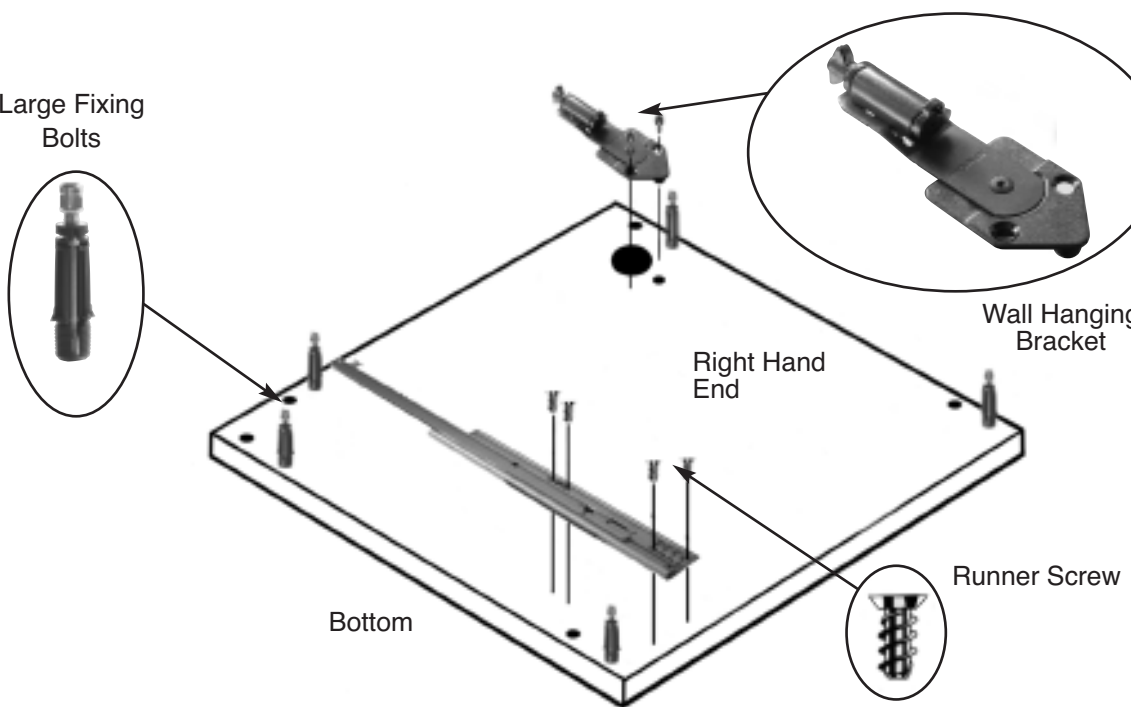

3


Bring top & bottom shelves & back rail into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully.

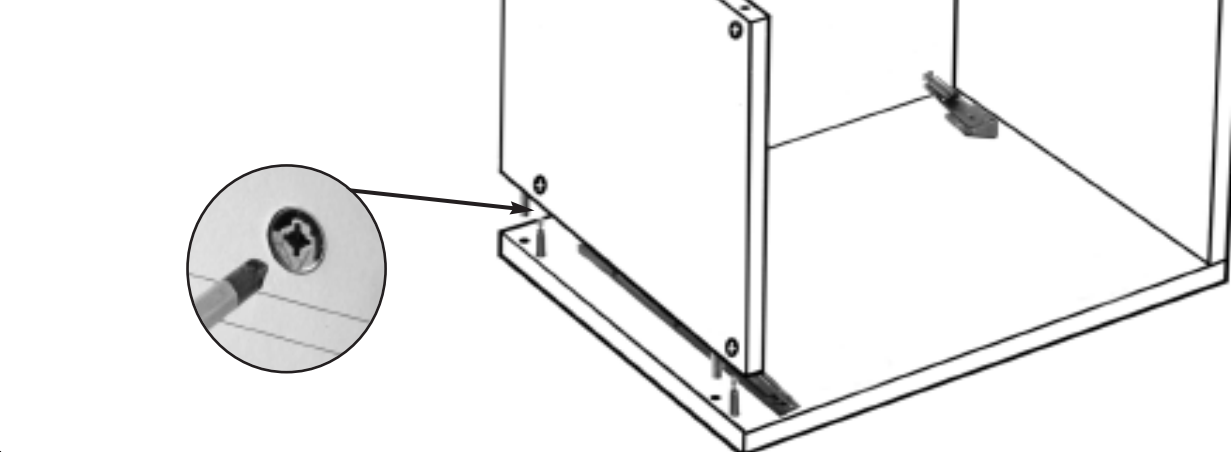

5

#### Wall Hanging Plate Positioning

Floating bedside cabinets can be sited in multiple positions, it is left to the installer to finalise exact location and positioning on wall. Fix wall hanging plates to walls in agreed positions, using suitable screws, these are not provided because of differing wall construction. For adjustment of wall hanging brackets see diagrams opposite.

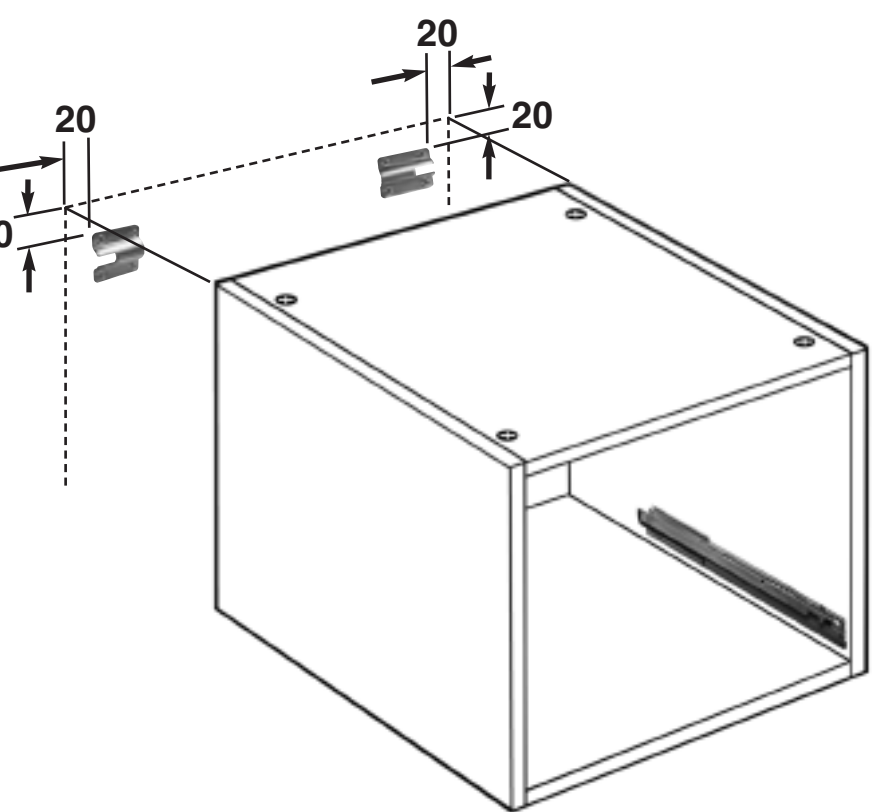

Place unit into position on wall hanging brackets and secure. See diagrams opposite for securing wall hanging bracket to wall hanging plate.


### FLOATING BEDSIDE CABINET WITH DRAWER.

2

Lay back rail, top & bottom shelves face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: The back rail lower is 60mm deep.




4

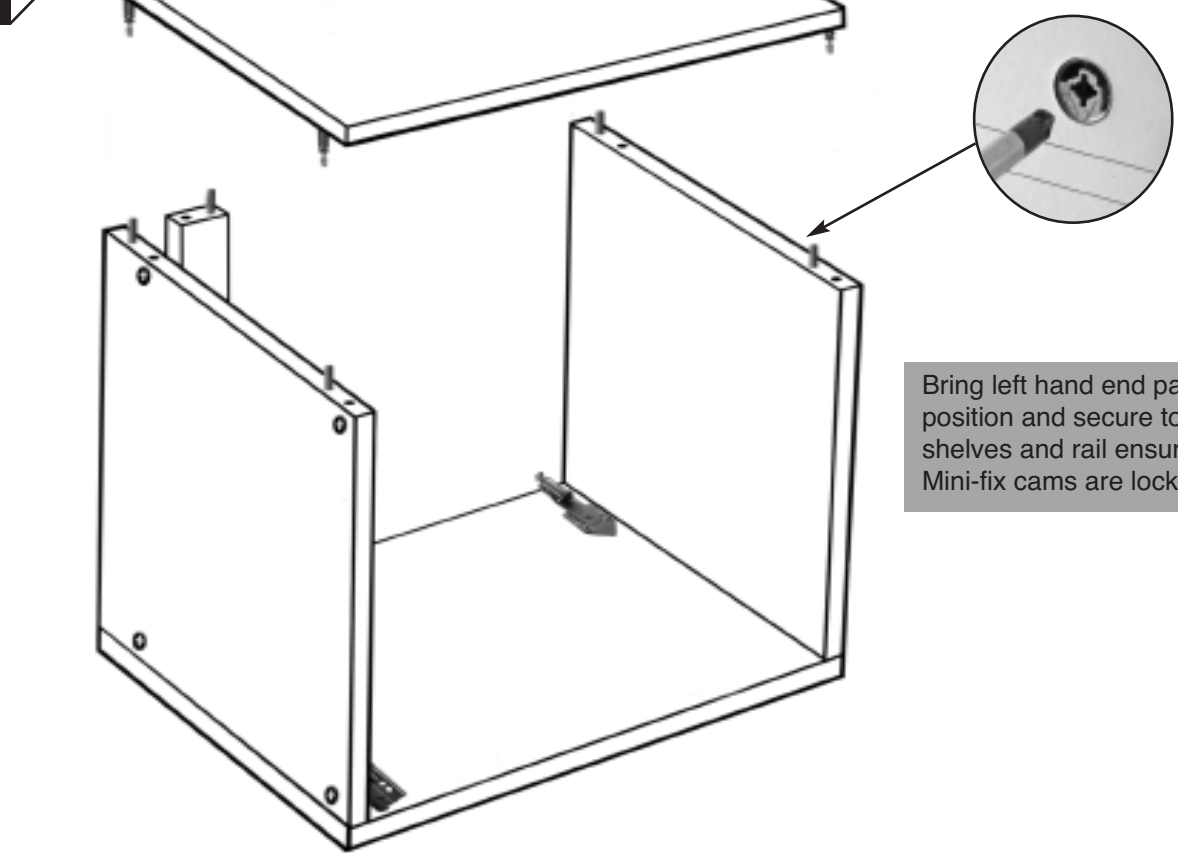

#### Plant on Panel(s).


Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).

6

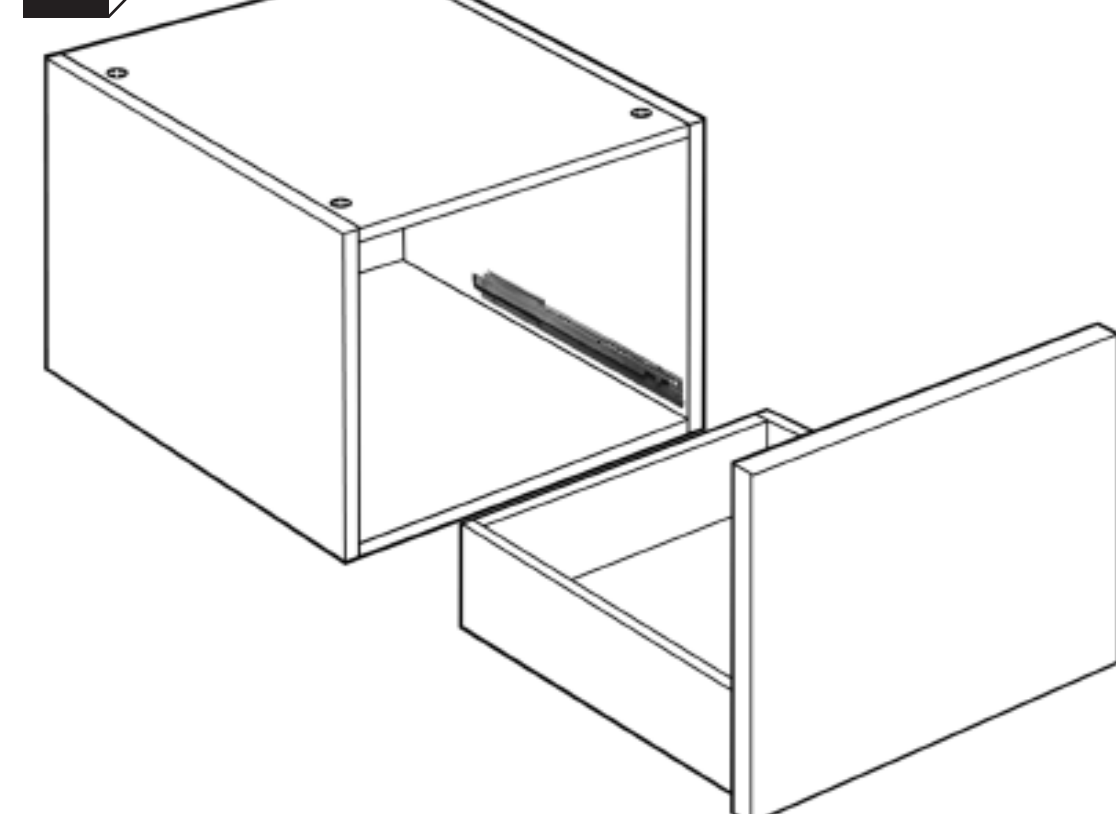


Once drawer front is fitted to drawer box bring drawer into position and place onto fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in top panel where required. Bring screws into position and secure worktop.

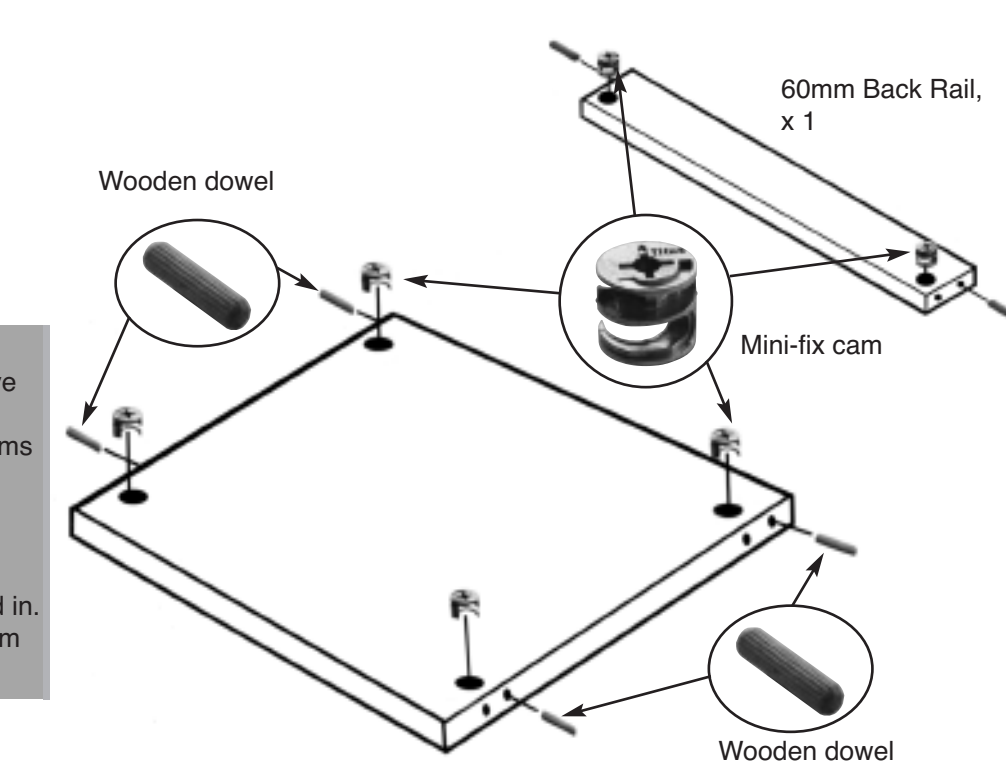


Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

#### CONTENTS CHECK LIST

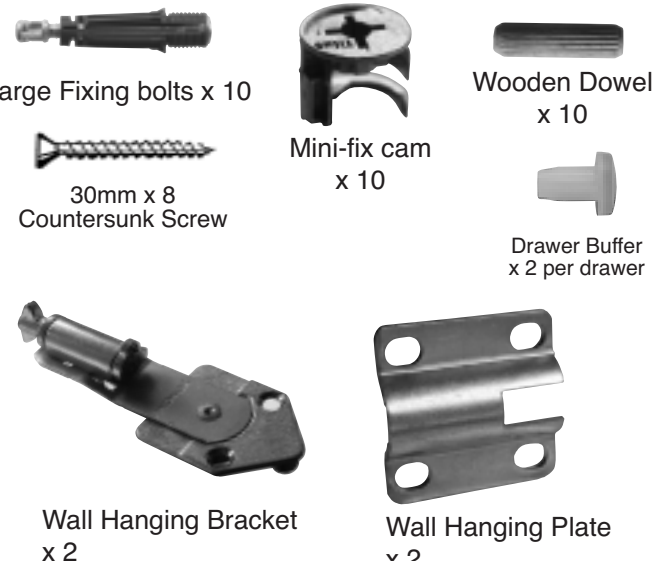

##### FIXING DRAWER FRONT TO DRAWER BOX

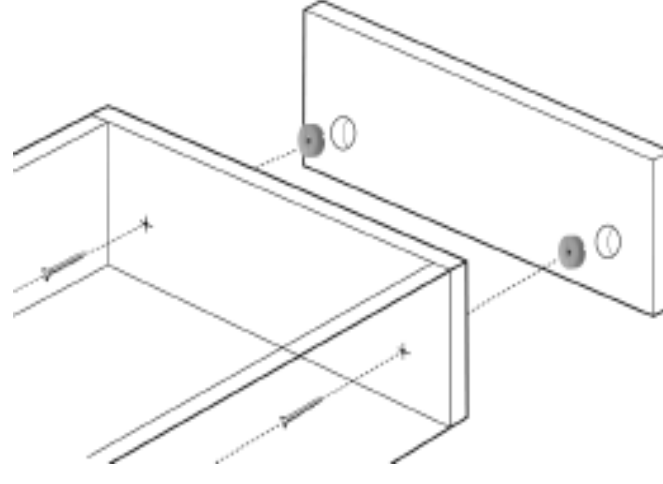

Firmly press drawer front adjusters into pre-bored holes in drawer front, bring drawer box into position and secure to drawer front with screws provided through pre-bored holes in drawer box. Turn drawer over and fit drawer runner brackets to underside of drawer box with screws provided as shown below.



To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.


It is recommended that drawers should only be fitted once units have been installed.

### HOLCOMBE BEDROOM FURNITURE


Note: End panels are handed, right or left. when assembling always ensure correct handing has been selected.

#### GREY TEXTILE DRAWER SYSTEM

##### FLOATING BEDSIDE CABINET WITH DRAWER

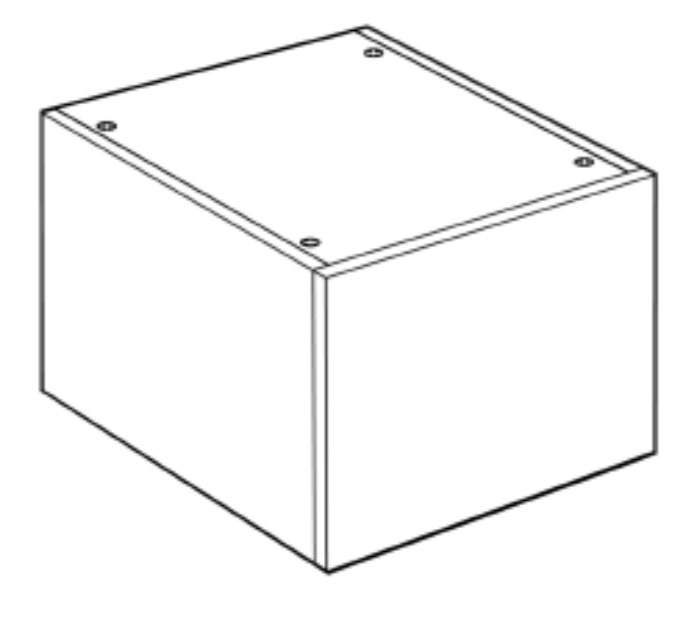

##### FLOATING BEDSIDE CABINET WITH DRAWER

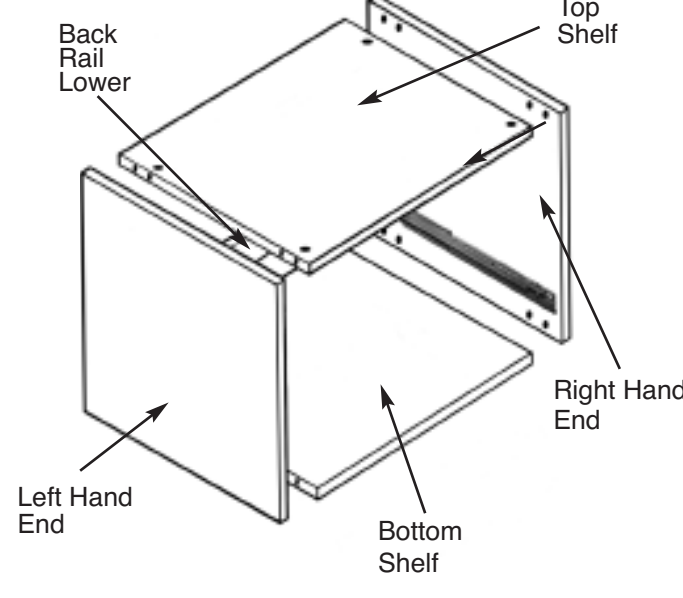


##### WALL HANGING BRACKET FIXING & ADJUSTMENT


1 Locate the arms of the wall hanging brackets through the slots in wall hanging plates, firmly push home.



2 Turn the arm 'B' through 90° to secure.

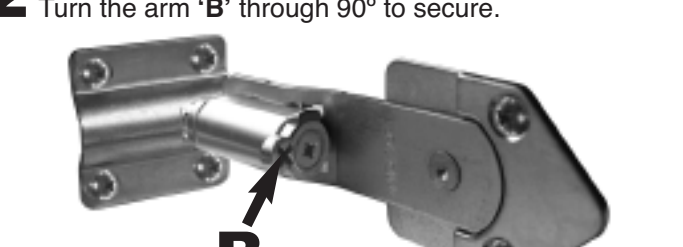

3 Turn the screw in the arm 'C', clockwise, to fully tighten.

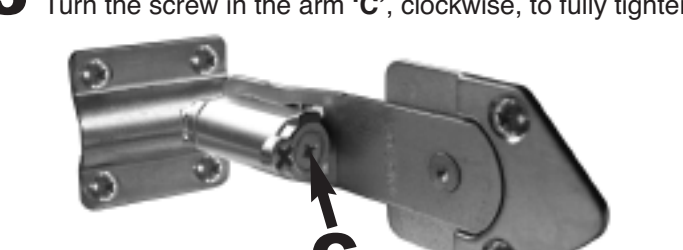


It is recommended that drawers should only be fitted once units have been installed.

### FLOATING BEDSIDE CABINET WITH DRAWER.


For more information on product go to: [www.jjoplc.com](http://www.jjoplc.com)

2

Lay back rail, top & bottom shelves face down on protective surface. Firmly press home Mini Fix Cams into pre-bored holes ensuring arrow on cam faces outwards. Firmly press home wooden dowels into pre-bored holes, ensuring they are fully knocked in. NB: The back rail lower is 60mm deep.




4

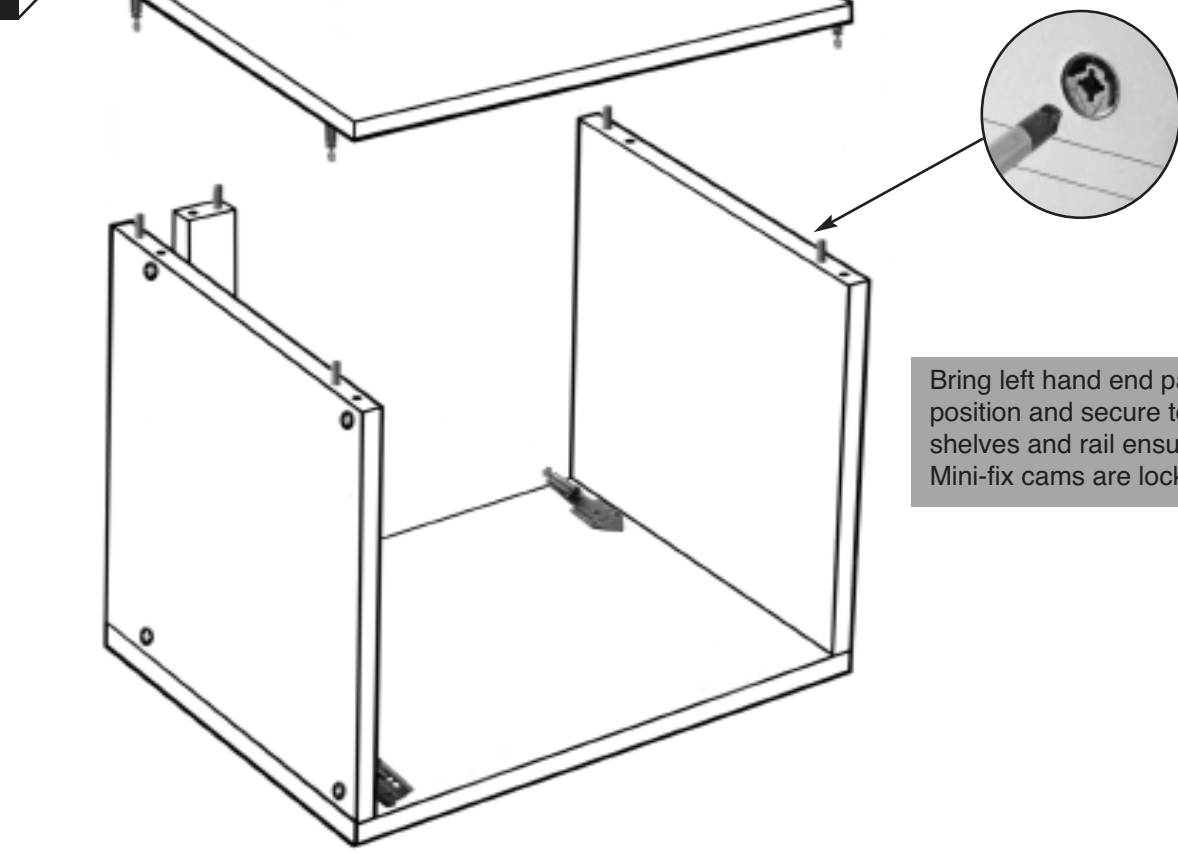

#### Plant on Panel(s).

Will be required to any exposed gable ends to ensure colour co-ordination is maintained. Additional dimensional width of chest tops will be required to cover plant on gable end(s).

6

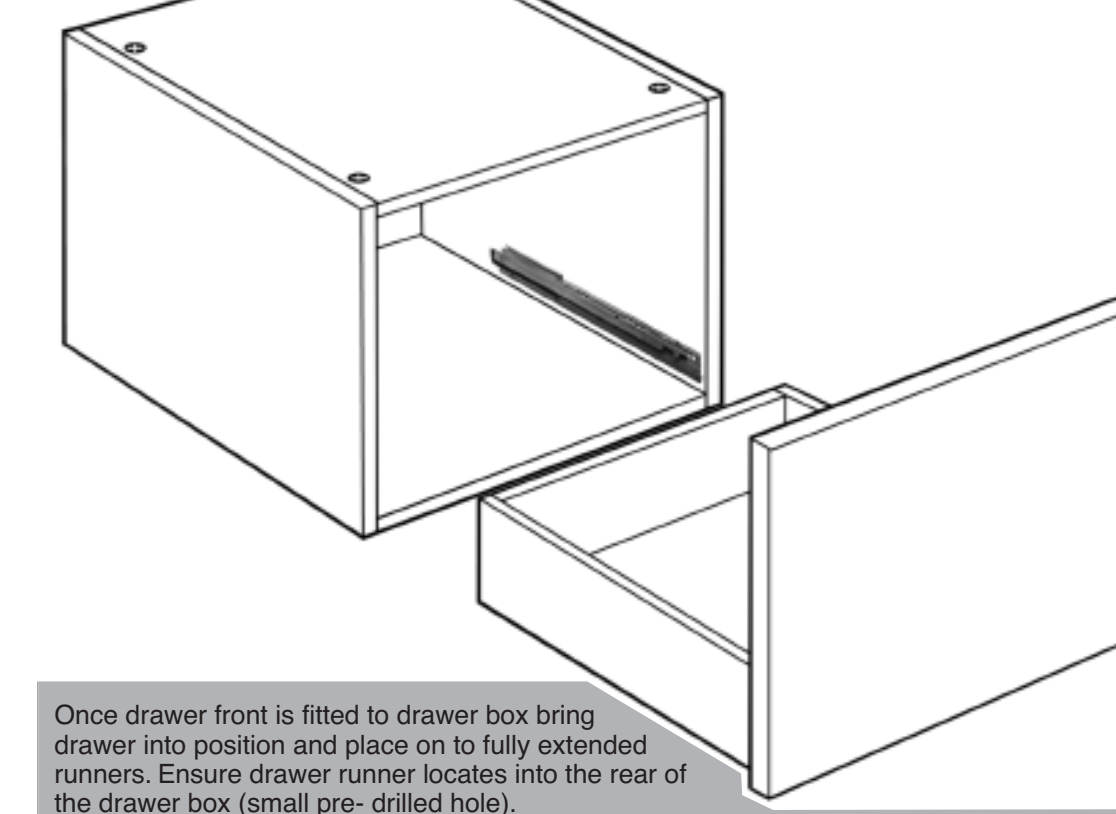


Once drawer front is fitted to drawer box bring drawer into position and place on to fully extended runners. Ensure drawer runner locates into the rear of the drawer box (small pre drilled hole). Firmly close the drawer into the unit. The drawer should locate onto the runner. If drawer fascia adjustment is required, slacken drawer fascia retaining screws. Within the drawer front adjuster there is a floating mechanism which allows for 2mm adjustment in two directions. Adjust as necessary and tighten drawer fascia retaining screws. If required unused pre bored holes in end panels can be plugged using 5mm cover caps supplied.

Worktop can be secured to unit using 2 x 30mm screws provided. Prior to fitting it will be required for installer to drill holes in top panel where required. Bring screws into position and secure worktop.


1

Lay end panels face down on protective surface. Fix Large Fixing Bolts into positions indicated. Bring Drawer runner into position and fix to end panel into pre-bored holes with runner screws. Bring Wall hanging bracket into position, firmly press home into pre-bored holes, secure with screws provided. Repeat operation for Left hand end panel.

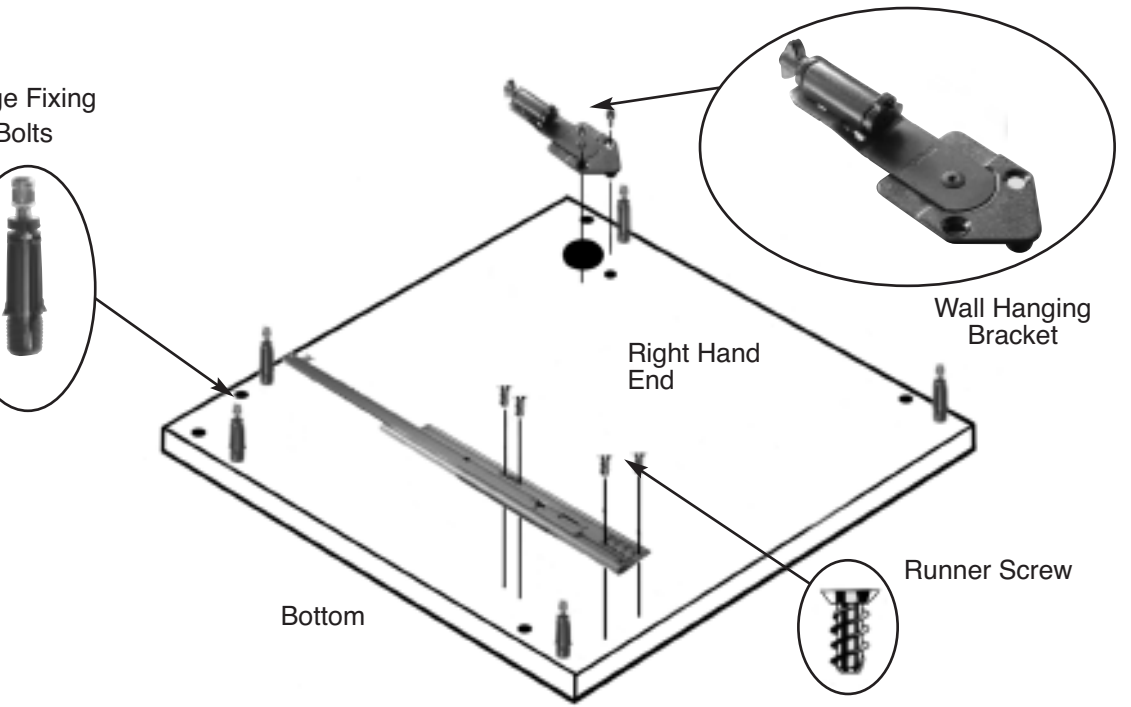

3


Bring top & bottom shelves & back rail into position and secure to end panel as shown. Ensuring all Mini-fix cams are locked fully.

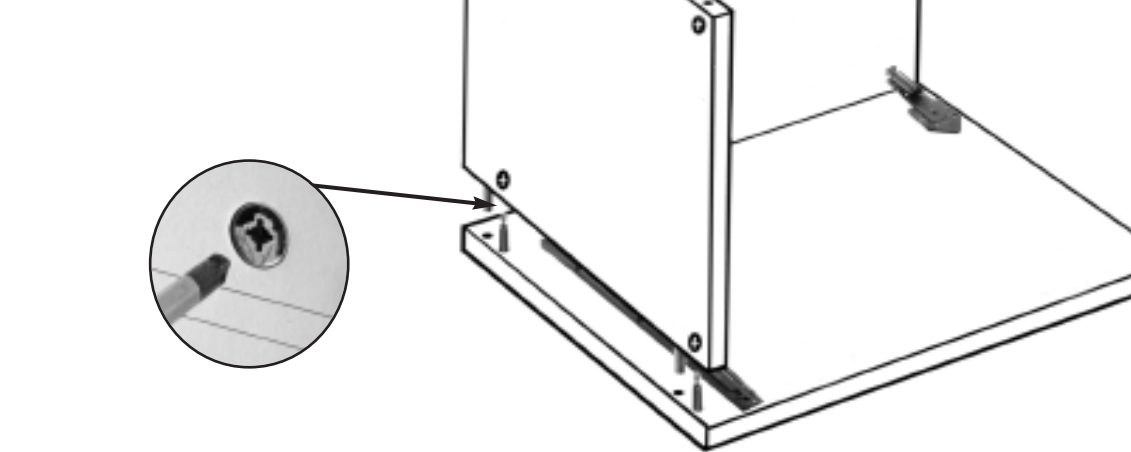

5

#### Wall Hanging Plate Positioning

Floating bedside cabinets can be sited in multiple positions, it is left to the installer to finalise exact location and positioning on wall. Fix wall hanging plates to walls in agreed positions, using suitable screws, these are not provided because of differing wall construction. For adjustment of wall hanging brackets see diagrams opposite.

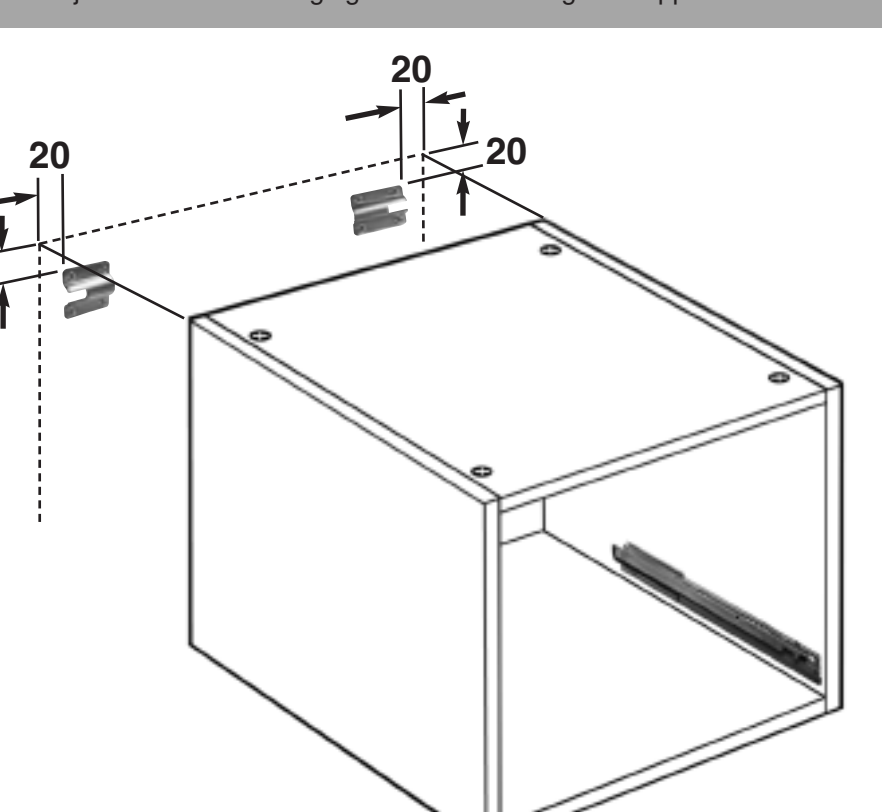

Place unit into position on wall hanging brackets and secure. See diagrams opposite for securing wall hanging bracket to wall hanging plate.




Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

## CONTENTS CHECK LIST




## DOORS

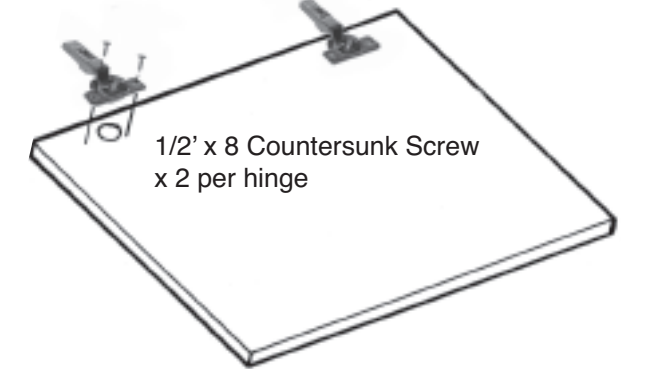

### CLIP-ON HINGE ADJUSTMENT

**HEIGHT ADJUSTMENT**  
Slacken screw 'C' clockwise  
or anti clockwise to achieve  
the desired position

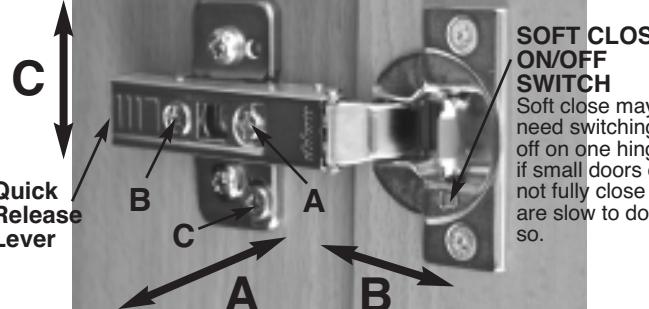

**SIDE ADJUSTMENT**  
Adjust screw 'A' clockwise or  
anti clockwise to achieve the  
desired position.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.

To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

### Double Units


The assembly for double units is the same as for single units.  
Double units have two doors.

**SINGLE & DOUBLE CABINETS  
BEDSIDE/STANDARD HEIGHT.**


For more information on product go to: [www.jjopl.com](http://www.jjopl.com)

Please examine these drawings very carefully prior to assembly to determine the correct positions for hardware. Failure to do so could result in incorrect fitting or even damage to the items. Do not dispose of any packaging until you have checked the contents and completed assembly. Please check all panels for defects or damage, prior to installation.

## CONTENTS CHECK LIST

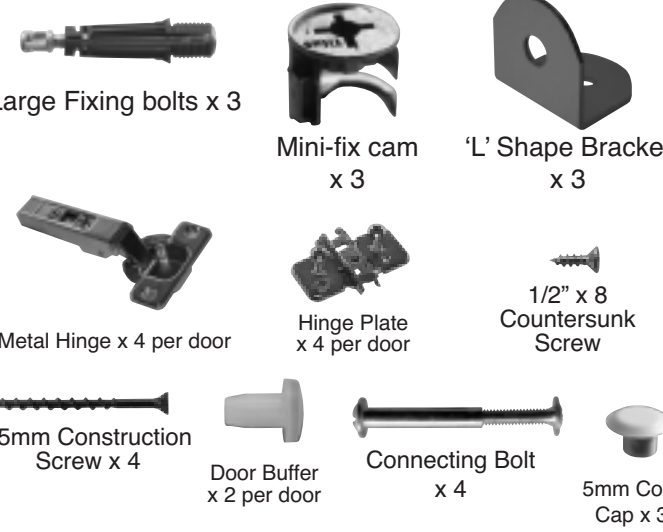


## DOORS

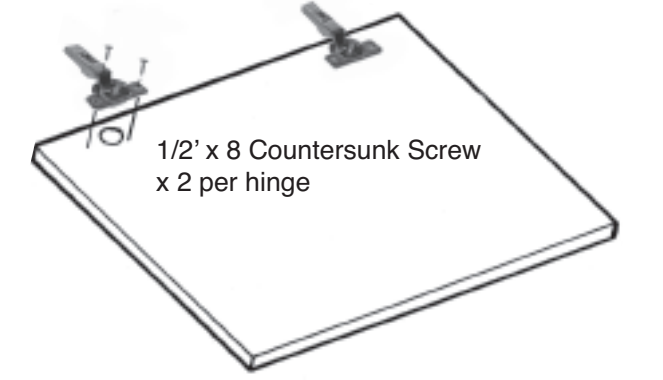

## CLIP-ON HINGE ADJUSTMENT

**HEIGHT ADJUSTMENT**  
Slacken screw 'C' clockwise  
or anti clockwise to achieve  
the desired position

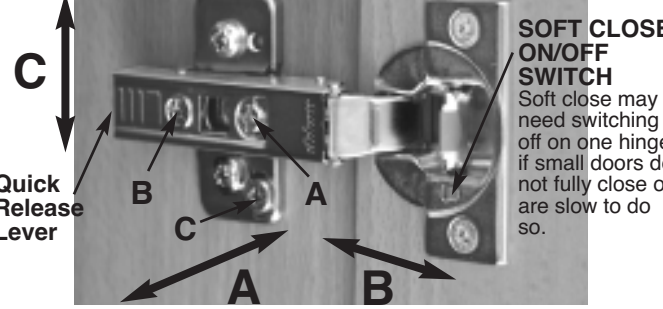

**SIDE ADJUSTMENT**  
Adjust screw 'A' clockwise or  
anti clockwise to achieve the  
desired position.

**DEPTH ADJUSTMENT**  
Adjust screw 'B' clockwise  
or anti clockwise to achieve  
the desired position


To avoid any surface damage when assembling units always ensure panels to be worked on are always placed onto a non abrasive protective surface.

It is recommended that door/s and adjustable shelves should only be fitted once units have been installed.


## HOLCOMBE BEDROOM FURNITURE

**Please Note:**  
Follow steps 1 - 6 of single & double base assembly. (Do not fit hinge plates to end panels).  
Prior to fitting corner post please ensure that the correct handing of door has been decided. Failure to do so could result in unnecessary damage.

## DOUBLE CORNER BASE UNITS

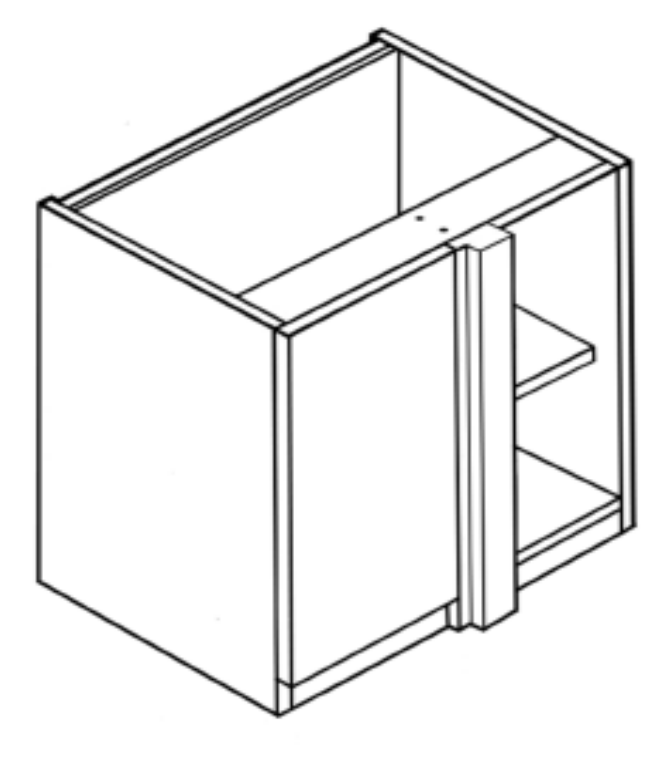

### DOUBLE CORNER BASE UNIT

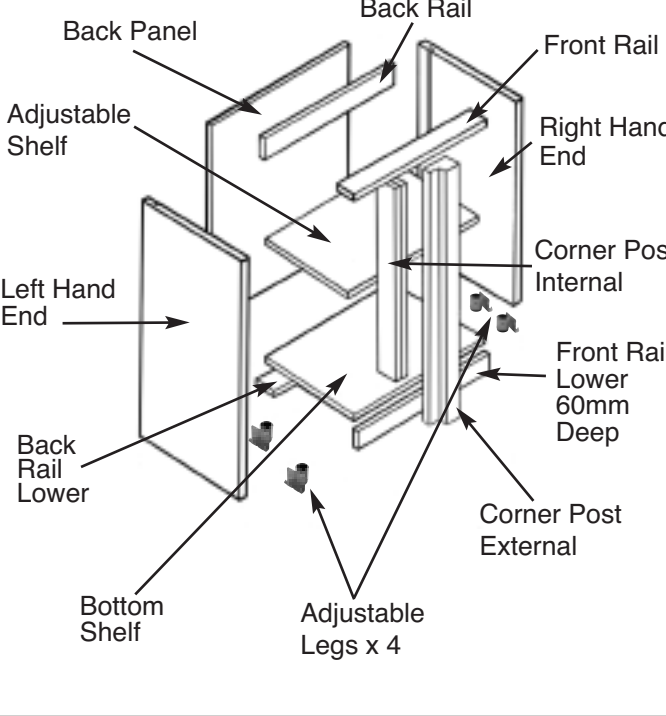



From the pencil mark measure 9mm in from outer edge of door, two pre bored holes will be required to be drilled through the front rail by the installer in suitable positions, secure post to top rail with 45mm screws provided. Secure bottom of post to bottom shelf through 'L' shape brackets with screws provided.

ing corner post into position and secure to inner corner post as own. Ensuring all Mini-fix cams are locked fully.

the internal space is reduced by the internal corner post the adjustable shelf will require scribbing around the internal corner post, ce this has been completed bring adjustable shelf into position and ly press down onto Mini-fixing bolts. Fully lock all Fixed shelf cams.

## CORNER SITUATIONS

All dimensions in Millimeters

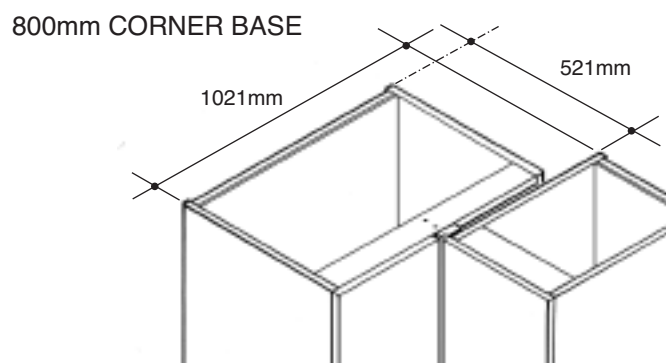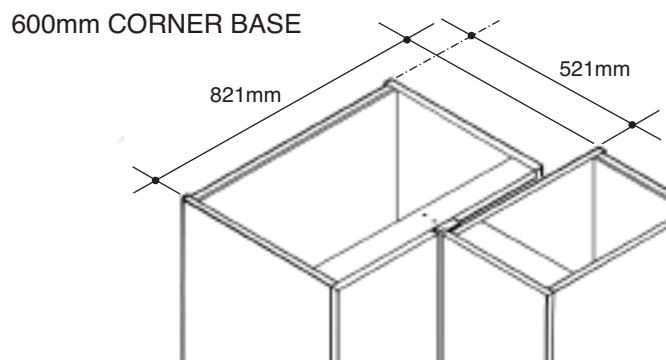

ring door into position and place onto hinge plates, lock into position by firmly pressing arm on hinge home.

Adjust as shown in diagram opposite.

For the unused pre-bored holes in end panels can be plugged with the 5mm cover caps supplied.

lant on Panel(s).  
Will be required to any  
exposed gable ends to  
ensure colour  
co-ordination is  
maintained.  
robes are fitted within a  
cess they are not  
required

As there are multiple options of door size that can be used for the corner base, it will be required for installer to mark the position where the inner corner post is to be fitted. When the handing of the corner base has been decided bring door into position against base ensuring the door is flush with end panel.

With the door flush against top rail & bottom shelf mark with pencil the inner edge of the door, this is where the centre of the inner corner post will sit.